

Brand	Model	Original Cartridge
Brother	DCP 110C	LC900C
Brother	DCP 115C	LC900C
Brother	DCP 120C	LC900C
Brother	DCP 130C	LC1000C
Brother	DCP 135C	LC970C
Brother	DCP 150C	LC970C
Brother	DCP 310CN	LC900C
Brother	DCP 315CN	LC900C
Brother	DCP 330C	LC1000C
Brother	DCP 357C	LC1000C
Brother	DCP 385C	LC1100C
Brother	DCP 540CN	LC1000C
Brother	DCP 560CN	LC1000C
Brother	DCP 585C	LC1100C
Brother	DCP 6690CW	LC1100C
Brother	DCP 750CW	LC1000C
Brother	DCP 770CW	LC1000C
Brother	DCP J100	LC525XLC
Brother	DCP J105	LC525XLC
Brother	DCP J125	LC985C
Brother	DCP J140W	LC985C
Brother	DCP J315W	LC985C
Brother	DCP J4120DW	LC225XLC
Brother	DCP J515W	LC985C
Brother	DCP J715W	LC985C
Brother	DCP T220	BT5000C Ink Bottle
Brother	DCP T300	BT5000C Ink Bottle
Brother	DCP T310	BT5000C Ink Bottle
Brother	DCP T420W	BT5000C Ink Bottle
Brother	DCP T425W	BT5000C Ink Bottle
Brother	DCP T500	BT5000C Ink Bottle
Brother	DCP T510	BT5000C Ink Bottle
Brother	DCP T520W	BT5000C Ink Bottle
Brother	DCP T525W	BT5000C Ink Bottle
Brother	DCP T700	BT5000C Ink Bottle
Brother	DCP T710	BT5000C Ink Bottle
Brother	DCP T720DW	BT5000C Ink Bottle
Brother	FAX 1360	LC1000C
Brother	FAX 1460	LC1000C
Brother	FAX 1560	LC1000C
Brother	Fax 1840C	LC900C
Brother	Fax 1840CU1	LC900C
Brother	Fax 1940CN	LC900C
Brother	Fax 2240C	LC900C
Brother	Fax 2440C	LC900C
Brother	FAX 2480C	LC1000C
Brother	MFC 210C	LC900C
Brother	MFC 215C	LC900C
Brother	MFC 235C	LC970C

Brother	MFC 240C	LC1000C
Brother	MFC 260C	LC970C
Brother	MFC 3240C	LC900C
Brother	MFC 3340CN	LC900C
Brother	MFC 3360C	LC1000C
Brother	MFC 410CN	LC900C
Brother	MFC 425CN	LC900C
Brother	MFC 440CN	LC1000C
Brother	MFC 465CN	LC970C
Brother	MFC 490CW	LC1100C
Brother	MFC 5440CN	LC900C
Brother	MFC 5460CN	LC1000C
Brother	MFC 5490CN	LC1100C
Brother	MFC 5540	LC900C
Brother	MFC 5840CN	LC900C
Brother	MFC 5860CN	LC1000C
Brother	MFC 5890CN	LC1100C
Brother	MFC 5895CW	LC1100C
Brother	MFC 620CN	LC900C
Brother	MFC 6490CW	LC1100C
Brother	MFC 660CN	LC1000C
Brother	MFC 665CW	LC1000C
Brother	MFC 790CW	LC1100C
Brother	MFC 845CW	LC1000C
Brother	MFC J200	LC525XLC
Brother	MFC J220	LC985C
Brother	MFC J430W	LC1240CY
Brother	MFC J4410W	LC125XL C
Brother	MFC J4420DW	LC225XLC
Brother	MFC J4510W	LC125XL C
Brother	MFC J4620DW	LC225XLC
Brother	MFC J4625DW	LC225XLC
Brother	MFC J5320DW	LC225XLC
Brother	MFC J5620DW	LC225XLC
Brother	MFC J5625DW	LC225XLC
Brother	MFC J5720DW	LC225XLC
Brother	MFC J5910DW	LC1240CY
Brother	MFC J5910DW	LC1280XLC
Brother	MFC J6510DW	LC1240CY
Brother	MFC J6510DW	LC1280XLC
Brother	MFC J6520DW	LC125XL C
Brother	MFC J6710DW	LC1240CY
Brother	MFC J6710DW	LC1280XLC
Brother	MFC J6910DW	LC1240CY
Brother	MFC J6910DW	LC1280XLC
Brother	MFC J6920W	LC125XL C
Brother	MFC T800	BT5000C Ink Bottle
Brother	MFC T810	BT5000C Ink Bottle
Brother	MFC T910	BT5000C Ink Bottle
Brother	MFC T920DW	BT5000C Ink Bottle

Epson	EcoTank L1110	C13T00S24A 103 cyan
Epson	EcoTank L11160	C13T06C24A 112 cyan
Epson	EcoTank L1210	C13T00S24A 103 cyan
Epson	EcoTank L1250	C13T00S24A 103 cyan
Epson	EcoTank L14150 MFP	C13T03V24A 101 cyan
Epson	EcoTank L1455	C13T66424A cyan
Epson	EcoTank L15150	C13T06C24A 112 cyan
Epson	EcoTank L15160	C13T06C24A 112 cyan
Epson	EcoTank L3050	C13T66424A cyan
Epson	EcoTank L3060	C13T66424A cyan
Epson	EcoTank L3070	C13T66424A cyan
Epson	EcoTank L3110	C13T00S24A 103 cyan
Epson	EcoTank L3111	C13T00S24A 103 cyan
Epson	EcoTank L3150 MFP	C13T00S24A 103 cyan
Epson	EcoTank L3151 WiFi MFP	C13T00S24A 103 cyan
Epson	EcoTank L3156 WiFi MFP	C13T00S24A 103 cyan
Epson	EcoTank L3160 MFP	C13T00S24A 103 cyan
Epson	EcoTank L3210	C13T00S24A 103 cyan
Epson	EcoTank L3211	C13T00S24A 103 cyan
Epson	EcoTank L3250 WiFi MFP	C13T00S24A 103 cyan
Epson	EcoTank L3251	C13T00S24A 103 cyan
Epson	EcoTank L3256	C13T00S24A 103 cyan
Epson	EcoTank L3260 WiFi MFP	C13T00S24A 103 cyan
Epson	EcoTank L3266	C13T00S24A 103 cyan
Epson	EcoTank L3550	C13T00S24A 103 cyan
Epson	EcoTank L3560 WiFi MFP	C13T00S24A 103 cyan
Epson	EcoTank L4150 WiFi MFP	C13T03V24A 101 cyan
Epson	EcoTank L4160 WiFi MFP	C13T03V24A 101 cyan
Epson	EcoTank L4260 WiFi MFP	C13T03V24A 101 cyan
Epson	EcoTank L486	C13T66424A cyan
Epson	EcoTank L5190	C13T00S24A 103 cyan
Epson	EcoTank L5290	C13T00S24A 103 cyan
Epson	EcoTank L5296	C13T00S24A 103 cyan
Epson	EcoTank L5590	C13T00S24A 103 cyan
Epson	EcoTank L605	C13T66424A cyan
Epson	EcoTank L6160 WiFi MFP	C13T03V24A 101 cyan
Epson	EcoTank L6170 WiFi MFP	C13T03V24A 101 cyan
Epson	EcoTank L6190 WiFi MFP	C13T03V24A 101 cyan
Epson	EcoTank L6260 WiFi MFP	C13T03V24A 101 cyan
Epson	EcoTank L6270 WiFi MFP	C13T03V24A 101 cyan
Epson	EcoTank L6276 WiFi MFP	C13T03V24A 101 cyan
Epson	EcoTank L6290 WiFi MFP	C13T03V24A 101 cyan
Epson	EcoTank L6550	C13T06C24A 112 cyan
Epson	EcoTank L6570	C13T06C24A 112 cyan
Epson	EcoTank L6580	C13T06C24A 112 cyan
Epson	EcoTank L8160	C13T07D24A 115 cyan
Epson	EcoTank L8180	C13T07D24A 115 cyan
Epson	EcoTank M15140	C13T06C24A 112 cyan
Epson	L100	C13T66424A cyan
Epson	L110	C13T66424A cyan

Epson	L120	C13T66424A cyan
Epson	L130	C13T66424A cyan
Epson	L1300	C13T66424A cyan
Epson	L1800	C13T67324A Cyan
Epson	L18050	C13T09C24A 108 cyan
Epson	L200	C13T66424A cyan
Epson	L210	C13T66424A cyan
Epson	L220	C13T66424A cyan
Epson	L300	C13T66424A cyan
Epson	L310	C13T66424A cyan
Epson	L355	C13T66424A cyan
Epson	L365	C13T66424A cyan
Epson	L382 MFP	C13T66424A cyan
Epson	L386	C13T66424A cyan
Epson	L455	C13T66424A cyan
Epson	L550	C13T66424A cyan
Epson	L565	C13T66424A cyan
Epson	L605 WiFi MFP	C13T66424A cyan
Epson	L655	C13T66424A cyan
Epson	L655 WiFi MFP	C13T66424A cyan
Epson	L800	C13T67324A Cyan
Epson	L805	C13T67324A Cyan
Epson	L8050	C13T09C24A 108 cyan
Epson	L810	C13T67324A Cyan
Epson	L850	C13T67324A Cyan
Epson	Stylus 480	T014401
Epson	Stylus 480SXU	T014401
Epson	Stylus 580	T014401
Epson	Stylus BX305F	T1292
Epson	Stylus BX320FW	T1292
Epson	Stylus BX625FWD	T1292
Epson	Stylus C20SX	T014401
Epson	Stylus C20UX	T014401
Epson	Stylus C40SX	T014401
Epson	Stylus C40UX	T014401
Epson	Stylus C64	T044240
Epson	Stylus C64	T045240
Epson	Stylus C66	T044240
Epson	Stylus C66	T045240
Epson	Stylus C67	T063240
Epson	Stylus C70	T032140
Epson	Stylus C70	T032240
Epson	Stylus C80	T032140
Epson	Stylus C80	T032240
Epson	Stylus C82	T032140
Epson	Stylus C82	T042240
Epson	Stylus C84	T044240
Epson	Stylus C84	T045240
Epson	Stylus C86	T044240
Epson	Stylus C86	T045240

Epson	Stylus C87	T063240
Epson	Stylus Color 680	T018401
Epson	Stylus Color 680TR	T018401
Epson	Stylus Color 685	T018401
Epson	Stylus Color 777	T018401
Epson	Stylus Color 880	T020401
Epson	Stylus Color 900	T005011
Epson	Stylus Color 900g	T005011
Epson	Stylus Color 900n	T005011
Epson	Stylus Color 980	T005011
Epson	Stylus Color 980n	T005011
Epson	Stylus CX3600	T044240
Epson	Stylus CX3600	T045240
Epson	Stylus CX3650	T044240
Epson	Stylus CX3650	T045240
Epson	Stylus CX3700	T063240
Epson	Stylus CX4100	T063240
Epson	Stylus CX4600	T044240
Epson	Stylus CX4600	T045240
Epson	Stylus CX4700	T063240
Epson	Stylus CX5100	T032140
Epson	Stylus CX5100	T042240
Epson	Stylus CX5200	T032140
Epson	Stylus CX5200	T042240
Epson	Stylus CX5400	T032140
Epson	Stylus CX5400	T042240
Epson	Stylus CX6400	T044240
Epson	Stylus CX6400	T045240
Epson	Stylus CX6600	T044240
Epson	Stylus CX6600	T045240
Epson	Stylus D120	T071240
Epson	Stylus D68	T061240
Epson	Stylus D78	T071240
Epson	Stylus D88	T061240
Epson	Stylus D92	T071240
Epson	Stylus DX3800	T061240
Epson	Stylus DX3850	T061240
Epson	Stylus DX4000	T071240
Epson	Stylus DX4050	T071240
Epson	Stylus DX4200	T061240
Epson	Stylus DX4250	T061240
Epson	Stylus DX4400	T071240
Epson	Stylus DX4450	T071240
Epson	Stylus DX4800	T061240
Epson	Stylus DX4850	T061240
Epson	Stylus DX5000	T071240
Epson	Stylus DX5050	T071240
Epson	Stylus DX6000	T071240
Epson	Stylus DX6050	T071240
Epson	Stylus DX7000	T071240

Epson	Stylus DX7400	T071240
Epson	Stylus DX7450	T071240
Epson	Stylus DX8400	T071240
Epson	Stylus DX8450	T071240
Epson	Stylus DX9400	T071240
Epson	Stylus Office B40W	T071240
Epson	Stylus Office BX300F	T071240
Epson	Stylus Office BX300F	T0892
Epson	Stylus Office BX310FN	T071240
Epson	Stylus Office BX600FW	T071240
Epson	Stylus Photo 1400	T0792
Epson	Stylus Photo P50	T080240
Epson	Stylus Photo PX650	T080240
Epson	Stylus Photo PX660	T080240
Epson	Stylus Photo PX700W	T080240
Epson	Stylus Photo PX710	T080240
Epson	Stylus Photo PX720	T080240
Epson	Stylus Photo PX730	T080240
Epson	Stylus Photo PX730WD	T0792
Epson	Stylus Photo PX800W	T080240
Epson	Stylus Photo PX810	T080240
Epson	Stylus Photo PX820	T080240
Epson	Stylus Photo R200	T048240
Epson	Stylus Photo R220	T048240
Epson	Stylus Photo R265	T080240
Epson	Stylus Photo R285	T080240
Epson	Stylus Photo R300	T048240
Epson	Stylus Photo R320	T048240
Epson	Stylus Photo R340	T048240
Epson	Stylus Photo RX500	T048240
Epson	Stylus Photo RX560	T080240
Epson	Stylus Photo RX585	T080240
Epson	Stylus Photo RX600	T048240
Epson	Stylus Photo RX620	T048240
Epson	Stylus Photo RX640	T048240
Epson	Stylus Photo RX685	T080240
Epson	Stylus S20	T071240
Epson	Stylus S20	T0892
Epson	Stylus S22	T1282
Epson	Stylus S22	T1292
Epson	Stylus SX100	T071240
Epson	Stylus SX100	T0892
Epson	Stylus SX105	T071240
Epson	Stylus SX105	T0892
Epson	Stylus SX110	T0892
Epson	Stylus SX115	T0892
Epson	Stylus SX125	T1282
Epson	Stylus SX130	T1282
Epson	Stylus SX200	T071240
Epson	Stylus SX200	T0892

Epson	Stylus SX205	T071240
Epson	Stylus SX205	T0892
Epson	Stylus SX215	T0892
Epson	Stylus SX218	T071240
Epson	Stylus SX235	T1282
Epson	Stylus SX235	T1292
Epson	Stylus SX400	T071240
Epson	Stylus SX400	T0892
Epson	Stylus SX405	T071240
Epson	Stylus SX405	T0892
Epson	Stylus SX415	T071240
Epson	Stylus SX415	T0892
Epson	Stylus SX420W	T1282
Epson	Stylus SX425W	T1282
Epson	Stylus SX425W	T1292
Epson	Stylus SX430W	T1282
Epson	Stylus SX430W	T1292
Epson	Stylus SX435W	T1282
Epson	Stylus SX435W	T1292
Epson	Stylus SX445W	T1282
Epson	Stylus SX510W	T071240
Epson	Stylus SX515W	T071240
Epson	Stylus SX525WD	T1292
Epson	Stylus SX535WD	T1292
Epson	Stylus SX600FW	T071240
Epson	WorkForce Pro WF-C5210DW	C13T944240 cyan
Epson	WorkForce Pro WF-C5290DW	C13T944240 cyan
Epson	WorkForce Pro WF-C5710DWF	C13T944240 cyan
Epson	WorkForce Pro WF-C5790DWF	C13T944240 cyan
Epson	WorkForce WF-3520	T1292
Epson	WorkForce WF-7015	T1292
Epson	WorkForce WF-7515	T1292
Epson	WorkForce WF-7525	T1292