

Brand	Model	Original Cartridge
Apple	Color StyleWriter 1500	BC-05
Canon	B 180C	BCI-21Color
Canon	B 210C	BCI-21Color
Canon	BJ 100	BC-05
Canon	BJ 1200	BC-05
Canon	BJ 200	BC-05
Canon	BJ 200e	BC-05
Canon	BJ 200jc	BC-05
Canon	BJ 200js	BC-05
Canon	BJ 210J	BC-05
Canon	BJB 140	BC-05
Canon	BJB 150	BC-05
Canon	BJC 100	BC-05
Canon	BJC 1000	BC-05
Canon	BJC 1010	BC-05
Canon	BJC 150	BC-05
Canon	BJC 200	BC-05
Canon	BJC 2000	BCI-21Color
Canon	BJC 210	BC-05
Canon	BJC 2100	BCI-21Color
Canon	BJC 2110	BCI-21Color
Canon	BJC 2115	BCI-21Color
Canon	BJC 2120	BCI-21Color
Canon	BJC 240	BC-05
Canon	BJC 240L	BC-05
Canon	BJC 240P	BC-05
Canon	BJC 250	BC-05
Canon	BJC 250j	BC-05
Canon	BJC 251	BC-05
Canon	BJC 255	BC-05
Canon	BJC 3000	BCI-3eM
Canon	BJC 3010	BCI-3eM
Canon	BJC 4000	BCI-21Color
Canon	BJC 4100	BCI-21Color
Canon	BJC 4200	BCI-21Color
Canon	BJC 4300	BCI-21Color
Canon	BJC 4302	BCI-21Color
Canon	BJC 4304	BCI-21Color
Canon	BJC 4310	BCI-21Color
Canon	BJC 4400	BCI-21Color
Canon	BJC 4550	BCI-21Color
Canon	BJC 4650	BCI-21Color
Canon	BJC 5000	BCI-21Color
Canon	BJC 5100	BCI-21Color
Canon	BJC 5500	BCI-21Color
Canon	BJC 6000	BCI-3eM
Canon	BJC 6100	BCI-3eM
Canon	BJC 6200	BCI-3eM
Canon	BJC 6500	BCI-3eM

Canon	BJC 8200	BCI-6M
Canon	Fax B 180C	BCI-21Color
Canon	Fax B 210c	BCI-21Color
Canon	Fax B 215C	BCI-21Color
Canon	Fax B 230c	BCI-21Color
Canon	i250	BCI-24Color
Canon	i320	BCI-24Color
Canon	i350	BCI-24Color
Canon	i450	BCI-24Color
Canon	i455	BCI-24Color
Canon	i470	BCI-24Color
Canon	i475D	BCI-24Color
Canon	i550	BCI-3eM
Canon	i560	BCI-6M
Canon	i6500	BCI-3eM
Canon	i850	BCI-3eM
Canon	i865	BCI-6M
Canon	i900	BCI-6M
Canon	i905D	BCI-6M
Canon	i9100	BCI-6M
Canon	i950	BCI-6M
Canon	i960	BCI-6M
Canon	i965	BCI-6M
Canon	i990	BCI-6M
Canon	i9950	BCI-6M
Canon	MPC200	BCI-24Color
Canon	MPC400	BCI-3eM
Canon	MPC600F	BCI-3eM
Canon	Multipass C100	BCI-3eM
Canon	Multipass C20	BCI-21Color
Canon	MultiPass C30	BCI-21Color
Canon	MultiPass C50	BCI-21Color
Canon	MultiPass C70	BCI-21Color
Canon	Multipass C75	BCI-21Color
Canon	MX 300	CL-41
Canon	MX 300	CL-51
Canon	Pixma G1400	GI-490M
Canon	Pixma G1410	GI-490M
Canon	Pixma G1411	GI-490M
Canon	Pixma G1420 AIO	GI-41M
Canon	Pixma G2400 AIO	GI-490M
Canon	Pixma G2410 AIO	GI-490M
Canon	Pixma G2411 AIO	GI-490M
Canon	Pixma G2415	GI-490M
Canon	Pixma G2420 AIO	GI-41M
Canon	Pixma G2460 AIO	GI-41M
Canon	Pixma G3400 AIO	GI-490M
Canon	Pixma G3410 AIO	GI-490M
Canon	Pixma G3411 AIO	GI-490M
Canon	Pixma G3415	GI-490M

Canon	Pixma G3420 AIO	GI-41M
Canon	Pixma G3460 AIO	GI-41M
Canon	Pixma G4400 AIO	GI-490M
Canon	Pixma G4411 AIO	GI-490M
Canon	Pixma G5040	GI-40M
Canon	Pixma G6040	GI-40M
Canon	Pixma G7040	GI-40M
Canon	Pixma IP1000	BCI-24Color
Canon	Pixma IP1200	CL-41
Canon	Pixma IP1300	CL-41
Canon	Pixma IP1500	BCI-24Color
Canon	Pixma IP1600	CL-41
Canon	Pixma IP1700	CL-41
Canon	Pixma IP1800	CL-38
Canon	Pixma IP1800	CL-41
Canon	Pixma IP1900	CL-38
Canon	Pixma IP1900	CL-41
Canon	Pixma IP2000	BCI-24Color
Canon	Pixma IP2200	CL-41
Canon	Pixma IP2200	CL-51
Canon	Pixma IP2400	CL-41
Canon	Pixma IP2400	CL-51
Canon	Pixma IP2500	CL-38
Canon	Pixma IP2500	CL-41
Canon	Pixma IP2600	CL-38
Canon	Pixma IP2600	CL-41
Canon	Pixma iP2700	CL-511
Canon	Pixma iP2700	CL-513
Canon	Pixma IP2702	CL-511
Canon	Pixma IP2702	CL-513
Canon	Pixma IP2850	CL-546
Canon	Pixma IP2850	CL-546XL
Canon	Pixma IP3000	BCI-6M
Canon	Pixma IP3300	CLI-8m
Canon	Pixma IP3500	CLI-8m
Canon	Pixma IP3600	CLI-521m
Canon	Pixma IP4000	BCI-6M
Canon	Pixma IP4000R	BCI-6M
Canon	Pixma IP4200	CLI-8m
Canon	Pixma IP4300	CLI-8m
Canon	Pixma IP4500	CLI-8m
Canon	Pixma IP4600	CLI-521m
Canon	Pixma IP4700	CLI-521m
Canon	Pixma iP4850	CLI-526m
Canon	Pixma iP4950	CLI-526m
Canon	Pixma IP5000	BCI-6M
Canon	Pixma IP5100	CLI-8m
Canon	Pixma IP5200	CLI-8m
Canon	Pixma IP5200R	CLI-8m
Canon	Pixma IP5300	CLI-8m

Canon	Pixma IP6000	BCI-6M
Canon	Pixma IP6000D	BCI-6M
Canon	Pixma IP6210D	CL-41
Canon	Pixma IP6210D	CL-51
Canon	Pixma IP6220D	CL-41
Canon	Pixma IP6220D	CL-51
Canon	Pixma IP6600D	CLI-8m
Canon	Pixma IP6700D	CLI-8m
Canon	Pixma iP7250	CLI-551m
Canon	Pixma iP7250	CLI-551m XL
Canon	Pixma IP8500	BCI-6M
Canon	Pixma iP8750	CLI-551m
Canon	Pixma iP8750	CLI-551m XL
Canon	Pixma iX4000	CLI-8m
Canon	Pixma iX5000	CLI-8m
Canon	PIXMA iX6550	CLI-526m
Canon	Pixma iX6850	CLI-551m
Canon	Pixma iX6850	CLI-551m XL
Canon	Pixma MG2140	CL-541
Canon	Pixma MG2140	CL-541XL
Canon	Pixma MG2150	CL-541
Canon	Pixma MG2150	CL-541XL
Canon	Pixma MG2250	CL-541
Canon	Pixma MG2250	CL-541XL
Canon	Pixma MG2450	CL-546
Canon	Pixma MG2450	CL-546XL
Canon	Pixma MG2550	CL-546
Canon	Pixma MG2550	CL-546XL
Canon	Pixma MG2950	CL-546
Canon	Pixma MG2950	CL-546XL
Canon	Pixma MG3050	CL-546
Canon	Pixma MG3050	CL-546XL
Canon	Pixma MG3053	CL-546
Canon	Pixma MG3053	CL-546XL
Canon	Pixma MG3140	CL-541
Canon	Pixma MG3140	CL-541XL
Canon	Pixma MG3150	CL-541
Canon	Pixma MG3150	CL-541XL
Canon	Pixma MG3250	CL-541
Canon	Pixma MG3250	CL-541XL
Canon	Pixma MG3550	CL-541
Canon	Pixma MG3550	CL-541XL
Canon	Pixma MG3600	CL-541
Canon	Pixma MG3600	CL-541XL
Canon	Pixma MG3650	CL-541
Canon	Pixma MG3650	CL-541XL
Canon	Pixma MG4150	CL-541
Canon	Pixma MG4150	CL-541XL
Canon	Pixma MG4250	CL-541
Canon	Pixma MG4250	CL-541XL

Canon	Pixma MG5150	CLI-526m
Canon	Pixma MG5250	CLI-526m
Canon	Pixma MG5350	CLI-526m
Canon	Pixma MG5450	CLI-551m
Canon	Pixma MG5450	CLI-551m XL
Canon	Pixma MG5500	CLI-551m
Canon	Pixma MG5500	CLI-551m XL
Canon	Pixma MG5550	CLI-551m
Canon	Pixma MG5550	CLI-551m XL
Canon	Pixma MG5650	CLI-551m
Canon	Pixma MG5650	CLI-551m XL
Canon	Pixma MG6150	CLI-526m
Canon	Pixma MG6250	CLI-526m
Canon	Pixma MG6350	CLI-551m
Canon	Pixma MG6350	CLI-551m XL
Canon	Pixma MG6450	CLI-551m
Canon	Pixma MG6450	CLI-551m XL
Canon	Pixma MG6650	CLI-551m
Canon	Pixma MG6650	CLI-551m XL
Canon	Pixma MG7150	CLI-551m
Canon	Pixma MG7150	CLI-551m XL
Canon	PIXMA MG7550	CLI-551m
Canon	PIXMA MG7550	CLI-551m XL
Canon	Pixma MG8150	CLI-526m
Canon	Pixma MP110	BCI-24Color
Canon	Pixma MP130	BCI-24Color
Canon	Pixma MP140	CL-38
Canon	Pixma MP140	CL-41
Canon	Pixma MP140	CL-51
Canon	Pixma MP150	CL-41
Canon	Pixma MP150	CL-51
Canon	Pixma MP160	CL-41
Canon	Pixma MP160	CL-51
Canon	Pixma MP170	CL-41
Canon	Pixma MP170	CL-51
Canon	Pixma MP180	CL-41
Canon	Pixma MP180	CL-51
Canon	Pixma MP190	CL-38
Canon	Pixma MP190	CL-41
Canon	Pixma MP210	CL-38
Canon	Pixma MP210	CL-41
Canon	Pixma MP220	CL-38
Canon	Pixma MP220	CL-41
Canon	Pixma MP230	CL-511
Canon	Pixma MP230	CL-513
Canon	Pixma MP240	CL-511
Canon	Pixma MP240	CL-513
Canon	Pixma MP250	CL-511
Canon	Pixma MP250	CL-513
Canon	Pixma MP260	CL-511

Canon	Pixma MP260	CL-513
Canon	Pixma MP270	CL-511
Canon	Pixma MP270	CL-513
Canon	Pixma MP272	CL-511
Canon	Pixma MP272	CL-513
Canon	PIXMA MP280	CL-511
Canon	PIXMA MP280	CL-513
Canon	Pixma MP310	CL-41
Canon	Pixma MP450	CL-41
Canon	Pixma MP450	CL-51
Canon	Pixma MP460	CL-41
Canon	Pixma MP460	CL-51
Canon	Pixma MP480	CL-511
Canon	Pixma MP480	CL-513
Canon	PIXMA MP490	CL-511
Canon	PIXMA MP490	CL-513
Canon	PIXMA MP495	CL-511
Canon	PIXMA MP495	CL-513
Canon	Pixma MP500	CLI-8m
Canon	Pixma MP510	CLI-8m
Canon	Pixma MP520	CLI-8m
Canon	Pixma MP530	CLI-8m
Canon	Pixma MP540	CLI-521m
Canon	Pixma MP550	CLI-521m
Canon	Pixma MP560	CLI-521m
Canon	Pixma MP600	CLI-8m
Canon	Pixma MP600R	CLI-8m
Canon	Pixma MP610	CLI-8m
Canon	Pixma MP620	CLI-521m
Canon	Pixma MP630	CLI-521m
Canon	Pixma MP640	CLI-521m
Canon	Pixma MP750	BCI-6M
Canon	Pixma MP760	BCI-6M
Canon	Pixma MP780	BCI-6M
Canon	Pixma MP800	CLI-8m
Canon	Pixma MP810	CLI-8m
Canon	Pixma MP830	CLI-8m
Canon	Pixma MP950	CLI-8m
Canon	Pixma MP970	CLI-8m
Canon	Pixma MP980	CLI-521m
Canon	Pixma MX300	CL-38
Canon	Pixma MX300	CL-41
Canon	Pixma MX300	CL-51
Canon	Pixma MX310	CL-38
Canon	Pixma MX310	CL-41
Canon	Pixma MX310	CL-51
Canon	Pixma MX320	CL-511
Canon	Pixma MX320	CL-513
Canon	Pixma MX330	CL-511
Canon	Pixma MX330	CL-513

Canon	PIXMA MX340	CL-511
Canon	PIXMA MX340	CL-513
Canon	PIXMA MX350	CL-511
Canon	PIXMA MX350	CL-513
Canon	Pixma MX353	CL-541
Canon	Pixma MX353	CL-541XL
Canon	PIXMA MX360	CL-511
Canon	PIXMA MX360	CL-513
Canon	Pixma MX375	CL-541
Canon	Pixma MX375	CL-541XL
Canon	Pixma MX395	CL-541
Canon	Pixma MX395	CL-541XL
Canon	Pixma MX410	CL-511
Canon	Pixma MX410	CL-513
Canon	Pixma MX420	CL-511
Canon	Pixma MX420	CL-513
Canon	Pixma MX435	CL-541
Canon	Pixma MX435	CL-541XL
Canon	Pixma MX455	CL-541
Canon	Pixma MX455	CL-541XL
Canon	Pixma MX475	CL-541
Canon	Pixma MX475	CL-541XL
Canon	PIXMA MX495	CL-546
Canon	PIXMA MX495	CL-546XL
Canon	Pixma MX515	CL-541
Canon	Pixma MX515	CL-541XL
Canon	Pixma MX525	CL-541
Canon	Pixma MX525	CL-541XL
Canon	Pixma MX535	CL-541
Canon	Pixma MX535	CL-541XL
Canon	Pixma MX700	CLI-8m
Canon	Pixma MX715 AiO	CLI-526m
Canon	Pixma MX850	CLI-8m
Canon	Pixma MX860	CLI-521m
Canon	Pixma MX870	CLI-521m
Canon	Pixma MX885 AiO	CLI-526m
Canon	Pixma MX925	CLI-551m
Canon	Pixma MX925	CLI-551m XL
Canon	Pixma Pro9000	CLI-8m
Canon	Pixma TR4550 AiO	CL-546
Canon	Pixma TR4550 AiO	CL-546XL
Canon	Pixma TR4551 AiO	CL-546
Canon	Pixma TR4551 AiO	CL-546XL
Canon	Pixma TR4650 AiO	CL-546
Canon	Pixma TR4650 AiO	CL-546XL
Canon	Pixma TR4651 AiO	CL-546
Canon	Pixma TR4651 AiO	CL-546XL
Canon	Pixma TS205	CL-546
Canon	Pixma TS205	CL-546XL
Canon	Pixma TS305	CL-546

Canon	Pixma TS305	CL-546XL
Canon	Pixma TS3150 AiO	CL-546
Canon	Pixma TS3150 AiO	CL-546XL
Canon	Pixma TS3151 AiO	CL-546
Canon	Pixma TS3151 AiO	CL-546XL
Canon	Pixma TS3350 AiO	CL-546
Canon	Pixma TS3350 AiO	CL-546XL
Canon	Pixma TS3351 AiO	CL-546
Canon	Pixma TS3351 AiO	CL-546XL
Canon	Pixma TS3352 AiO	CL-546
Canon	Pixma TS3352 AiO	CL-546XL
Canon	Pixma TS3355 AiO	CL-546
Canon	Pixma TS3355 AiO	CL-546XL
Canon	Pixma TS3450 AiO	CL-546
Canon	Pixma TS3450 AiO	CL-546XL
Canon	Pixma TS3451 AiO	CL-546
Canon	Pixma TS3451 AiO	CL-546XL
Canon	Pixma TS3452 AiO	CL-546
Canon	Pixma TS3452 AiO	CL-546XL
Canon	Pixma TS5150 AiO	CL-541
Canon	Pixma TS5150 AiO	CL-541XL
Canon	Pixma TS5151 AiO	CL-541
Canon	Pixma TS5151 AiO	CL-541XL
Canon	S100	BCI-21Color
Canon	S200	BCI-24Color
Canon	S200X	BCI-24Color
Canon	S300	BCI-24Color
Canon	S330 Photo	BCI-24Color
Canon	S400	BCI-3eM
Canon	S450	BCI-3eM
Canon	S4500	BCI-3eM
Canon	S500	BCI-3eM
Canon	S520	BCI-3eM
Canon	S530	BCI-3eM
Canon	S530D	BCI-3eM
Canon	S5400	BCI-3eM
Canon	S600	BCI-3eM
Canon	S630	BCI-3eM
Canon	S6300	BCI-3eM
Canon	S750	BCI-3eM
Canon	S800	BCI-6M
Canon	S820	BCI-6M
Canon	S820D	BCI-6M
Canon	S830D	BCI-6M
Canon	S900	BCI-6M
Canon	S9000	BCI-6M
Canon	SmartBase MP360	BCI-24Color
Canon	SmartBase MP370	BCI-24Color
Canon	SmartBase MP390 Photo	BCI-24Color
Canon	SmartBase MP700	BCI-3eM

Canon	SmartBase MP730	BCI-3eM
Canon	SmartBase MP730 Photo	BCI-3eM
Canon	SmartBase MPC190	BCI-24Color
Canon	SmartBase MPC200 Photo	BCI-24Color
Canon	SmartBase MPC400	BCI-3eM
Canon	SmartBase MPC600F	BCI-3eM