

Brand	Model	Original Cartridge
Brother	Fax 1820C	LC800BK
Brother	MFC 3220C	LC800BK
Brother	MFC 3220CN	LC800BK
Brother	MFC 3320CN	LC800BK
Brother	MFC 3820CN	LC800BK
Brother	MFC 3420C	LC800BK
Brother	DCP 110C	LC900BK
Brother	DCP 115C	LC900BK
Brother	DCP 120C	LC900BK
Brother	DCP 310CN	LC900BK
Brother	DCP 315CN	LC900BK
Brother	Fax 1840C	LC900BK
Brother	Fax 1840CU1	LC900BK
Brother	Fax 1940CN	LC900BK
Brother	Fax 2240C	LC900BK
Brother	Fax 2440C	LC900BK
Brother	MFC 210C	LC900BK
Brother	MFC 215C	LC900BK
Brother	MFC 3240C	LC900BK
Brother	MFC 3340CN	LC900BK
Brother	MFC 410CN	LC900BK
Brother	MFC 425CN	LC900BK
Brother	MFC 5440CN	LC900BK
Brother	MFC 5840CN	LC900BK
Brother	MFC 620CN	LC900BK
Brother	MFC 5540	LC900BK
Brother	MFC 3100C	LC600Bk
Brother	MFC 3200C	LC600Bk
Brother	MFC 5100C	LC600Bk
Brother	MFC 5200C	LC600Bk
Brother	MFC 580	LC600Bk
Brother	MFC 590	LC600Bk
Brother	DCP 4020C	LC700Bk
Brother	MFC 4420C	LC700Bk
Brother	MFC 4820C	LC700Bk
Brother	DCP 130C	LC1000BK
Brother	DCP 330C	LC1000BK
Brother	DCP 540CN	LC1000BK
Brother	DCP 750CW	LC1000BK
Brother	FAX 1360	LC1000BK
Brother	FAX 1460	LC1000BK
Brother	FAX 1560	LC1000BK
Brother	FAX 2480C	LC1000BK
Brother	MFC 240C	LC1000BK
Brother	MFC 3360C	LC1000BK
Brother	MFC 440CN	LC1000BK
Brother	MFC 5460CN	LC1000BK
Brother	MFC 5860CN	LC1000BK
Brother	MFC 660CN	LC1000BK

Brother	MFC 665CW	LC1000BK
Brother	MFC 845CW	LC1000BK
Brother	DCP 357C	LC1000BK
Brother	DCP 560CN	LC1000BK
Brother	DCP 770CW	LC1000BK
Brother	DCP 135C	LC970BK
Brother	DCP 150C	LC970BK
Brother	MFC 235C	LC970BK
Brother	MFC 260C	LC970BK
Brother	MFC 465CN	LC970BK
Brother	DCP 145C	LC980BK
Brother	DCP 165C	LC980BK
Brother	MFC 250C	LC980BK
Brother	MFC 290C	LC980BK
Brother	DCP 375CW	LC980BK
Brother	DCP 195C	LC980BK
Brother	DCP 385C	LC1100BK
Brother	DCP 585C	LC1100BK
Brother	DCP 6690CW	LC1100BK
Brother	MFC 6490CW	LC1100BK
Brother	MFC 790CW	LC1100BK
Brother	MFC 5490CN	LC1100BK
Brother	MFC 490CW	LC1100BK
Brother	DCP J125	LC985BK
Brother	DCP J315W	LC985BK
Brother	DCP J515W	LC985BK
Brother	DCP J715W	LC985BK
Brother	DCP J140W	LC985BK
Brother	MFC J220	LC985BK
Brother	DCP J525W	LC1220BK
Brother	DCP J725W	LC1220BK
Brother	DCP J925W	LC1220BK
Brother	MFC J430W	LC1220BK
Canon	Pixma MG3150	PG-540
Canon	Pixma MG2150	PG-540
Canon	Pixma MX375	PG-540
Canon	Pixma MX435	PG-540
Canon	Pixma MX515	PG-540
Canon	Pixma MG4150	PG-540
Canon	Pixma MG4250	PG-540
Canon	Pixma MG3250	PG-540
Brother	MFC J430W	LC1240BK
Adler/Royal	JP 450	51626A No 26
Adler/Royal	CJP 450	51626A No 26
Advanced Hi Tech	MailJet	51626A No 26
Agfa	MicroFilm Camera	51626A No 26
Aitell	Ink Fax	51626A No 26
Apollo	Barbie P 1220	51626A No 26
Apollo	P 1200	51626A No 26
Apollo	P 1250i	51626A No 26

Apple	DeskWriter	51626A No 26
BDT	ErgoPrint 310	51626A No 26
Bull	Pagemaker 20	51626A No 26
Citizen	ProJet	51626A No 26
Hewlett Packard (HP)	DeskJet 3915	C9351A No 21
Compuprint	Pagemaker	51626A No 26
Comterm	DeskJet II	51626A No 26
Data Tech	Scriptomatic	51626A No 26
Hewlett Packard (HP)	DeskJet D5560	CC641EE No 300xl
Data Tech	DP 1185	51626A No 26
DEC	DecJet 2000	51626A No 26
Canon	Pixma iP7250	PGI-550pbk XL
DEC	MultiJet 1000	51626A No 26
DEC	MultiJet 1500	51626A No 26
DEC	DecJet 1000	51626A No 26
DEC	MultiJet 2000	51626A No 26
Encad	NovaJet	51626A No 26
Hewlett Packard (HP)	DeskJet 3920	C9351A No 21
Encad	NovaJet II	51626A No 26
Encad	NovaJet III	51626A No 26
Encad	Novajet Series I	51626A No 26
Hewlett Packard (HP)	PhotoSmart C4680 AIO	CC641EE No 300xl
Encad	Novajet Series II	51626A No 26
Encad	Pro 50	51626A No 26
Canon	Pixma MG5550	PGI-550pbk XL
Fujitsu	Breeze 100	51626A No 26
Fujitsu	Breeze 200	51626A No 26
Fujitsu	Dex 530	51626A No 26
Fujitsu	Dex 530 E Fax	51626A No 26
Hewlett Packard (HP)	DesignJet	51626A No 26
Hewlett Packard (HP)	DeskJet 3930	C9351A No 21
Hewlett Packard (HP)	DesignJet 200	51626A No 26
Hewlett Packard (HP)	DesignJet 200d	51626A No 26
Hewlett Packard (HP)	DesignJet 200e	51626A No 26
Hewlett Packard (HP)	DeskJet D1660	CC641EE No 300xl
Hewlett Packard (HP)	DesignJet 220	51626A No 26
Hewlett Packard (HP)	DesignJet 600	51626A No 26
Canon	Pixma MG6450	PGI-550pbk XL
Hewlett Packard (HP)	DeskJet	51626A No 26
Hewlett Packard (HP)	DeskJet 200	51626A No 26
Hewlett Packard (HP)	DeskJet 200cci	51626A No 26
Hewlett Packard (HP)	DeskJet 400	51626A No 26
Hewlett Packard (HP)	DeskJet 400c	51626A No 26
Hewlett Packard (HP)	DeskJet 3940	C9351A No 21
Hewlett Packard (HP)	DeskJet 400l	51626A No 26
Hewlett Packard (HP)	DeskJet 420	51626A No 26
Hewlett Packard (HP)	DeskJet 420c	51626A No 26
Hewlett Packard (HP)	DeskJet D2660	CC641EE No 300xl
Hewlett Packard (HP)	DeskJet 500	51626A No 26
Hewlett Packard (HP)	DeskJet 500c	51626A No 26

Canon	Pixma MG5650	PGI-550pbk XL
Hewlett Packard (HP)	DeskJet 500p	51626A No 26
Hewlett Packard (HP)	DeskJet 505k	51626A No 26
Hewlett Packard (HP)	DeskJet 510	51626A No 26
Hewlett Packard (HP)	DeskJet 520	51626A No 26
Hewlett Packard (HP)	DeskJet 540	51626A No 26
Hewlett Packard (HP)	DeskJet 3940v	C9351A No 21
Hewlett Packard (HP)	DeskJet 540c	51626A No 26
Hewlett Packard (HP)	DeskJet 550c	51626A No 26
Hewlett Packard (HP)	DeskJet 560c	51626A No 26
Hewlett Packard (HP)	DeskJet 560j	51626A No 26
Hewlett Packard (HP)	DeskJet Plus	51626A No 26
Canon	Pixma MG6650	PGI-550pbk XL
Hewlett Packard (HP)	DeskWriter	51626A No 26
Hewlett Packard (HP)	DeskWriter 400	51626A No 26
Hewlett Packard (HP)	DeskWriter 500	51626A No 26
Hewlett Packard (HP)	DeskWriter 500c	51626A No 26
Hewlett Packard (HP)	DeskWriter 510	51626A No 26
Hewlett Packard (HP)	PSC 1410	C9351A No 21
Hewlett Packard (HP)	DeskWriter 520	51626A No 26
Hewlett Packard (HP)	DeskWriter 540	51626A No 26
Hewlett Packard (HP)	DeskWriter 540c	51626A No 26
Hewlett Packard (HP)	PhotoSmart C4780 AIO	CC641EE No 300xl
Hewlett Packard (HP)	DeskWriter 550	51626A No 26
Hewlett Packard (HP)	DeskWriter 550c	51626A No 26
Hewlett Packard (HP)	DeskWriter 560	51626A No 26
Hewlett Packard (HP)	DeskWriter 560c	51626A No 26
Hewlett Packard (HP)	DeskWriter C	51626A No 26
Hewlett Packard (HP)	Fax 200	51626A No 26
Hewlett Packard (HP)	Fax 200vp	51626A No 26
Hewlett Packard (HP)	PSC 1410v	C9351A No 21
Hewlett Packard (HP)	Fax 300	51626A No 26
Hewlett Packard (HP)	Fax 310	51626A No 26
Hewlett Packard (HP)	Fax 700	51626A No 26
Hewlett Packard (HP)	Fax 700vp	51626A No 26
Hewlett Packard (HP)	Fax 750	51626A No 26
Hewlett Packard (HP)	Fax 800	51626A No 26
Hewlett Packard (HP)	Fax 900	51626A No 26
Hewlett Packard (HP)	Fax 900vp	51626A No 26
Hewlett Packard (HP)	Fax 950	51626A No 26
Hewlett Packard (HP)	OfficeJet	51626A No 26
Hewlett Packard (HP)	PSC 1410xi	C9351A No 21
Hewlett Packard (HP)	OfficeJet 300	51626A No 26
Hewlett Packard (HP)	OfficeJet 330	51626A No 26
Hewlett Packard (HP)	OfficeJet 350	51626A No 26
Hewlett Packard (HP)	OfficeJet LX MFP	51626A No 26
Hewlett Packard (HP)	OfficeJet MFP	51626A No 26
Hewlett Packard (HP)	OfficeJet Personal	51626A No 26
Nokia	DeskJet Plus	51626A No 26
North Atlantic	DeskJet T	51626A No 26

North Atlantic	DeskJet Plus T	51626A No 26
Olympia	QuietStar 4	51626A No 26
Hewlett Packard (HP)	PSC 1417	C9351A No 21
Panasonic	Panafax PD 4200	51626A No 26
Panasonic	Panafax PX 350	51626A No 26
Panasonic	Panafax PX 360	51626A No 26
Panasonic	Panafax UF 300	51626A No 26
Panasonic	Panafax UF 305	51626A No 26
Panasonic	Panafax UF 310	51626A No 26
Panasonic	Panafax UF 311	51626A No 26
Panasonic	Panafax UF 312	51626A No 26
Panasonic	Panafax UF 315	51626A No 26
Panasonic	Panafax UF 321	51626A No 26
Hewlett Packard (HP)	DeskJet D1311	C9351A No 21
Panasonic	Panafax UF 322	51626A No 26
Panasonic	Proline PX 350 Fax	51626A No 26
Pitney Bowes	9100 Fax	51626A No 26
Pitney Bowes	W800	51626A No 26
Pitney Bowes	W880	51626A No 26
Rena	DA 600	51626A No 26
Rena	DA 606	51626A No 26
Sel Alcatel	Fax / Ink Fax	51626A No 26
Sel Alcatel	3740 Jet Fax	51626A No 26
Sharp	FO 1700	51626A No 26
Hewlett Packard (HP)	DeskJet D1320	C9351A No 21
Sharp	FO 1700R Fax	51626A No 26
Sharp	FO 3700	51626A No 26
Sharp	UX 1200	51626A No 26
Sharp	UX 1200R	51626A No 26
Sharp	UX 1500R Fax	51626A No 26
Siemens	4812 L10	51626A No 26
Siemens	Fax 540	51626A No 26
Siemens	Fax 640	51626A No 26
Siemens	Fax 740	51626A No 26
Siemens	MD 25	51626A No 26
Hewlett Packard (HP)	DeskJet D1330	C9351A No 21
Stielow	5951 Address Printer	51626A No 26
Stielow	5923 Address Printer	51626A No 26
Stielow	5949 Address Printer	51626A No 26
Stielow	5980 Address Printer	51626A No 26
Summagraphics	SummaJet 2M Plotter	51626A No 26
Triumph Adler	FX 645i	51626A No 26
Triumph Adler	FX 640	51626A No 26
Triumph Adler	FX 640i	51626A No 26
Triumph Adler	FX 640Ti	51626A No 26
Triumph Adler	FX 645	51626A No 26
Hewlett Packard (HP)	DeskJet D1341	C9351A No 21
Triumph Adler	JPR 7825	51626A No 26
Triumph Adler	JPR 7850s	51626A No 26
Hewlett Packard (HP)	DeskJet 300j	51633M No 33

Hewlett Packard (HP)	DeskJet 310	51633M No 33
Hewlett Packard (HP)	DeskJet 311	51633M No 33
Hewlett Packard (HP)	DeskJet 320	51633M No 33
Hewlett Packard (HP)	DeskJet 340	51633M No 33
Hewlett Packard (HP)	DeskJet 340cbi	51633M No 33
Hewlett Packard (HP)	DeskJet 340cm	51633M No 33
Hewlett Packard (HP)	DeskJet 340cv	51633M No 33
Hewlett Packard (HP)	DeskJet Portable	51633M No 33
Hewlett Packard (HP)	DeskWriter 310	51633M No 33
Hewlett Packard (HP)	DeskWriter 320	51633M No 33
Hewlett Packard (HP)	DeskWriter 340	51633M No 33
Hewlett Packard (HP)	DeskJet 450ci	C6656A No 56
Canon	MX 300	PG-40
Canon	Pixma IP1200	PG-40
Canon	Pixma IP1600	PG-40
Canon	Pixma IP2200	PG-40
Canon	Pixma MP150	PG-40
Canon	Pixma MP170	PG-40
Canon	Pixma MP450	PG-40
Canon	Pixma MP160	PG-40
Canon	Pixma MP180	PG-40
Canon	Pixma MP460	PG-40
Canon	Pixma IP1300	PG-40
Canon	Pixma IP1700	PG-40
Hewlett Packard (HP)	DeskJet 460cb	C8765E No 338
Canon	Pixma IP2400	PG-40
Hewlett Packard (HP)	DeskJet 3810	C6615D No 15
Canon	Pixma IP2500	PG-40
Hewlett Packard (HP)	PhotoSmart C6300 All in one	CB316E No 364bk
Canon	Pixma IP1800	PG-40
Hewlett Packard (HP)	OfficeJet Pro 8000	C4902AE No 940 Black
Canon	Pixma MP210	PG-40
Canon	Pixma MP310	PG-40
Hewlett Packard (HP)	Officejet Pro 8600	CN048AE No 951XL
Canon	Pixma MP220	PG-40
Canon	Pixma MX310	PG-40
Canon	Fax JX 200	PG-40
Canon	Fax JX 500	PG-40
Canon	Pixma MP140	PG-40
Hewlett Packard (HP)	DeskJet 460wbt	C8765E No 338
Canon	Pixma IP1900	PG-40
Hewlett Packard (HP)	DeskJet 3816	C6615D No 15
Canon	Pixma IP2600	PG-40
Hewlett Packard (HP)	PhotoSmart D5460	CB316E No 364bk
Canon	Pixma MP190	PG-40
Canon	JX510P	PG-40
Canon	JX210P	PG-40
Hewlett Packard (HP)	Officejet Pro 8100	CN048AE No 951XL
Canon	Pixma MX300	PG-40
Canon	MX 300	PG-50

Canon	Pixma IP2200	PG-50
Canon	Pixma MP150	PG-50
Canon	Pixma MP170	PG-50
Canon	Pixma MP450	PG-50
Canon	Pixma MP160	PG-50
Canon	Pixma MP180	PG-50
Canon	Pixma MP460	PG-50
Canon	Pixma IP2400	PG-50
Canon	Pixma MX310	PG-50
Canon	Fax JX 200	PG-50
Canon	Fax JX 500	PG-50
Hewlett Packard (HP)	PhotoSmart 2713	C8767E No 339
Canon	Pixma MP140	PG-50
Apollo	P 2500u Series	C6614D No 20
Canon	JX510P	PG-50
Canon	Pixma IP4600	PGI-520bk
Canon	JX210P	PG-50
Lexmark	S405	14N0820E No 100bk
Canon	Pixma MX300	PG-50
Canon	Pixma MG2150	PG-540XL
Apple	Color StyleWriter 6500	51645A No 45
Decision Data	DeskJet 6127	51645A No 45
Hewlett Packard (HP)	ColorCopier 100	51645A No 45
Hewlett Packard (HP)	ColorCopier 110	51645A No 45
Hewlett Packard (HP)	ColorCopier 120	51645A No 45
Hewlett Packard (HP)	ColorCopier 140	51645A No 45
Hewlett Packard (HP)	ColorCopier 145	51645A No 45
Hewlett Packard (HP)	ColorCopier 150	51645A No 45
Hewlett Packard (HP)	ColorCopier 155	51645A No 45
Hewlett Packard (HP)	ColorCopier 160	51645A No 45
Hewlett Packard (HP)	ColorCopier 170	51645A No 45
Hewlett Packard (HP)	ColorCopier 180	51645A No 45
Canon	Pixma IP5200	PGI-5bk
Hewlett Packard (HP)	ColorCopier 190	51645A No 45
Hewlett Packard (HP)	Photosmart D7360	C8719E No 363bk
Hewlett Packard (HP)	ColorCopier 210	51645A No 45
Canon	Pixma MP260	PG-512
Lexmark	S405	14N0902E No 100yw
Hewlett Packard (HP)	ColorCopier 260	51645A No 45
Hewlett Packard (HP)	ColorCopier 270	51645A No 45
Canon	Pixma MG2550	PG-545XL
Hewlett Packard (HP)	ColorCopier 280	51645A No 45
Hewlett Packard (HP)	ColorCopier 290	51645A No 45
Hewlett Packard (HP)	DesignJet 330d	51645A No 45
Hewlett Packard (HP)	DesignJet 700	51645A No 45
Hewlett Packard (HP)	DeskJet 1000 Cse	51645A No 45
Canon	Pixma IP5200R	PGI-5bk
Hewlett Packard (HP)	DeskJet 1000 Cxi	51645A No 45
Hewlett Packard (HP)	PS 3310 all-in-one	C8719E No 363bk
Hewlett Packard (HP)	DeskJet 1000c	51645A No 45

Canon	Pixma MX330	PG-512
Hewlett Packard (HP)	DeskJet 1100 Cse	51645A No 45
Lexmark	S505	14N0902E No 100yw
Hewlett Packard (HP)	DeskJet 1100 Cxi	51645A No 45
Hewlett Packard (HP)	DeskJet 1100c	51645A No 45
Canon	PIXMA MX495	PG-545XL
Hewlett Packard (HP)	DeskJet 1120 Cse	51645A No 45
Hewlett Packard (HP)	DeskJet 1120 Cxi	51645A No 45
Hewlett Packard (HP)	DeskJet 1120c	51645A No 45
Hewlett Packard (HP)	DeskJet 1220 Cps	51645A No 45
Hewlett Packard (HP)	DeskJet 1220 Cse	51645A No 45
Canon	Pixma MP500	PGI-5bk
Hewlett Packard (HP)	DeskJet 1220 Cxi	51645A No 45
Hewlett Packard (HP)	PS 3210 all-in-one	C8719E No 363bk
Hewlett Packard (HP)	DeskJet 1220c	51645A No 45
Canon	Pixma MX320	PG-512
Hewlett Packard (HP)	DeskJet 1280 MLK	51645A No 45
Lexmark	Pro 205	14N0902E No 100yw
Hewlett Packard (HP)	DeskJet 1600c	51645A No 45
Hewlett Packard (HP)	DeskJet 1600cm	51645A No 45
Hewlett Packard (HP)	DeskJet 1600cn	51645A No 45
Hewlett Packard (HP)	DeskJet 6122	51645A No 45
Hewlett Packard (HP)	DeskJet 710	51645A No 45
Hewlett Packard (HP)	DeskJet 712	51645A No 45
Hewlett Packard (HP)	DeskJet 712c	51645A No 45
Canon	Pixma MP800	PGI-5bk
Hewlett Packard (HP)	DeskJet 720	51645A No 45
Hewlett Packard (HP)	Photosmart C7180	C8719E No 363bk
Hewlett Packard (HP)	DeskJet 720c	51645A No 45
Canon	Pixma MP250	PG-512
Hewlett Packard (HP)	DeskJet 722c	51645A No 45
Lexmark	Pro 705	14N0902E No 100yw
Hewlett Packard (HP)	DeskJet 815c	51645A No 45
Hewlett Packard (HP)	DeskJet 820 Cse	51645A No 45
Hewlett Packard (HP)	DeskJet 820 Csi	51645A No 45
Hewlett Packard (HP)	DeskJet 820 Cxi	51645A No 45
Hewlett Packard (HP)	DeskJet 820c	51645A No 45
Hewlett Packard (HP)	DeskJet 820ce	51645A No 45
Hewlett Packard (HP)	DeskJet 830c	51645A No 45
Canon	Pixma MP800R	PGI-5bk
Hewlett Packard (HP)	DeskJet 832c	51645A No 45
Hewlett Packard (HP)	Photosmart C6180	C8719E No 363bk
Hewlett Packard (HP)	DeskJet 850 Cxi	51645A No 45
Canon	Pixma MP270	PG-512
Hewlett Packard (HP)	DeskJet 850c	51645A No 45
Lexmark	Pro 805	14N0902E No 100yw
Hewlett Packard (HP)	DeskJet 855 Cse	51645A No 45
Hewlett Packard (HP)	DeskJet 855 Csi	51645A No 45
Hewlett Packard (HP)	DeskJet 855 Cxi	51645A No 45
Hewlett Packard (HP)	DeskJet 855c	51645A No 45



Hewlett Packard (HP)	DeskJet 870 Cse	51645A No 45
Hewlett Packard (HP)	DeskJet 870 Cxi	51645A No 45
Hewlett Packard (HP)	DeskJet 870c	51645A No 45
Canon	Pixma MP510	PGI-5bk
Hewlett Packard (HP)	DeskJet 880c	51645A No 45
Hewlett Packard (HP)	Photosmart C5180	C8719E No 363bk
Hewlett Packard (HP)	DeskJet 882c	51645A No 45
Canon	Pixma MP480	PG-512
Hewlett Packard (HP)	DeskJet 890 Cse	51645A No 45
Lexmark	Pro 905	14N0902E No 100yw
Hewlett Packard (HP)	DeskJet 890 Cxi	51645A No 45
Hewlett Packard (HP)	DeskJet 890c	51645A No 45
Hewlett Packard (HP)	DeskJet 895 Cse	51645A No 45
Hewlett Packard (HP)	DeskJet 895 Cxi	51645A No 45
Hewlett Packard (HP)	DeskJet 895c	51645A No 45
Hewlett Packard (HP)	DeskJet 9300	51645A No 45
Hewlett Packard (HP)	DeskJet 930c	51645A No 45
Canon	Pixma MP600	PGI-5bk
Hewlett Packard (HP)	DeskJet 932c	51645A No 45
Hewlett Packard (HP)	Photosmart D7160	C8719E No 363bk
Hewlett Packard (HP)	DeskJet 935c	51645A No 45
Canon	Pixma iP2700	PG-512
Hewlett Packard (HP)	DeskJet 950c	51645A No 45
Lexmark	Interact S605	14N0902E No 100yw
Hewlett Packard (HP)	DeskJet 952c	51645A No 45
Hewlett Packard (HP)	DeskJet 955c	51645A No 45
Hewlett Packard (HP)	DeskJet 959c	51645A No 45
Hewlett Packard (HP)	DeskJet 960C	51645A No 45
Hewlett Packard (HP)	DeskJet 960 Cse	51645A No 45
Hewlett Packard (HP)	DeskJet 960 Cxi	51645A No 45
Hewlett Packard (HP)	DeskJet 970 Cse	51645A No 45
Canon	Pixma MP600R	PGI-5bk
Hewlett Packard (HP)	DeskJet 970 Cxi	51645A No 45
Hewlett Packard (HP)	Photosmart D6160	C8719E No 363bk
Hewlett Packard (HP)	DeskJet 980c	51645A No 45
Canon	PIXMA MP490	PG-512
Hewlett Packard (HP)	DeskJet 990 Cm	51645A No 45
Lexmark	S301	14N0902E No 100yw
Hewlett Packard (HP)	DeskJet 990 Cse	51645A No 45
Hewlett Packard (HP)	DeskJet 990 Cxi	51645A No 45
Hewlett Packard (HP)	DeskJet 995c	51645A No 45
Hewlett Packard (HP)	DeskJet 995ck	51645A No 45
Hewlett Packard (HP)	Fax 1220	51645A No 45
Hewlett Packard (HP)	Fax 1220xi	51645A No 45
Hewlett Packard (HP)	OfficeJet G55	51645A No 45
Canon	Pixma MP810	PGI-5bk
Hewlett Packard (HP)	OfficeJet G55xi	51645A No 45
Hewlett Packard (HP)	Photosmart C6280	C8719E No 363bk
Hewlett Packard (HP)	OfficeJet G85	51645A No 45
Canon	PIXMA MP495	PG-512

Hewlett Packard (HP)	OfficeJet G85xi	51645A No 45
Lexmark	S400	14N0902E No 100yw
Hewlett Packard (HP)	OfficeJet G95	51645A No 45
Hewlett Packard (HP)	OfficeJet K60	51645A No 45
Hewlett Packard (HP)	OfficeJet K60xi	51645A No 45
Hewlett Packard (HP)	OfficeJet K80	51645A No 45
Hewlett Packard (HP)	OfficeJet K80xi	51645A No 45
Hewlett Packard (HP)	OfficeJet Pro 1120c	51645A No 45
Hewlett Packard (HP)	OfficeJet Pro 1150 Cse	51645A No 45
Canon	Pixma MP530	PGI-5bk
Hewlett Packard (HP)	OfficeJet Pro 1150c	51645A No 45
Hewlett Packard (HP)	Photosmart C7280	C8719E No 363bk
Hewlett Packard (HP)	OfficeJet Pro 1170	51645A No 45
Canon	PIXMA MX340	PG-512
Hewlett Packard (HP)	OfficeJet Pro 1170 Cse	51645A No 45
Lexmark	S815	14N0902E No 100yw
Hewlett Packard (HP)	OfficeJet Pro 1170 Cxi	51645A No 45
Hewlett Packard (HP)	OfficeJet Pro 1170c	51645A No 45
Hewlett Packard (HP)	OfficeJet Pro 1175	51645A No 45
Hewlett Packard (HP)	OfficeJet Pro 1175 Cse	51645A No 45
Hewlett Packard (HP)	OfficeJet Pro 1175 Cxi	51645A No 45
Hewlett Packard (HP)	OfficeJet Pro 1175c	51645A No 45
Hewlett Packard (HP)	OfficeJet R40	51645A No 45
Canon	Pixma MP830	PGI-5bk
Hewlett Packard (HP)	OfficeJet R40xi	51645A No 45
Hewlett Packard (HP)	Photosmart C8180	C8719E No 363bk
Hewlett Packard (HP)	OfficeJet R45	51645A No 45
Hewlett Packard (HP)	OfficeJet R60	51645A No 45
Hewlett Packard (HP)	OfficeJet R65	51645A No 45
Hewlett Packard (HP)	OfficeJet R80	51645A No 45
Hewlett Packard (HP)	OfficeJet R80xi	51645A No 45
Hewlett Packard (HP)	OfficeJet T45	51645A No 45
Hewlett Packard (HP)	OfficeJet T45xi	51645A No 45
Hewlett Packard (HP)	OfficeJet T65	51645A No 45
Hewlett Packard (HP)	OfficeJet T65xi	51645A No 45
Canon	Pixma IP3300	PGI-5bk
Hewlett Packard (HP)	PhotoSmart 1115	51645A No 45
Hewlett Packard (HP)	C5100	C8719E No 363bk
Hewlett Packard (HP)	PhotoSmart 1115cvr	51645A No 45
Canon	Pixma IP2702	PG-512
Hewlett Packard (HP)	PhotoSmart 1215	51645A No 45
Hewlett Packard (HP)	PhotoSmart 1215vm	51645A No 45
Hewlett Packard (HP)	PhotoSmart 1218	51645A No 45
Hewlett Packard (HP)	PhotoSmart 1218xi	51645A No 45
Hewlett Packard (HP)	PhotoSmart 1315	51645A No 45
Hewlett Packard (HP)	PhotoSmart P1000	51645A No 45
Hewlett Packard (HP)	PhotoSmart P1100	51645A No 45
Hewlett Packard (HP)	PhotoSmart P1100XI	51645A No 45
Canon	Pixma IP4300	PGI-5bk
Kodak	Digital Science PSA 1000	51645A No 45

Hewlett Packard (HP)	Photosmart C6250	C8719E No 363bk
Hewlett Packard (HP)	DeskJet 710c	51645A No 45
Canon	Pixma MX410	PG-512
Hewlett Packard (HP)	DeskJet 1280	51645A No 45
Apple	Color StyleWriter 6500	C6615NE No 15
Hewlett Packard (HP)	DeskJet 3810	C6615NE No 15
Hewlett Packard (HP)	DeskJet 3816	C6615NE No 15
Hewlett Packard (HP)	DeskJet 3820	C6615NE No 15
Hewlett Packard (HP)	DeskJet 3822	C6615NE No 15
Hewlett Packard (HP)	DeskJet 810c	C6615NE No 15
Hewlett Packard (HP)	DeskJet 812c	C6615NE No 15
Hewlett Packard (HP)	DeskJet 816C	C6615NE No 15
Hewlett Packard (HP)	DeskJet 825 Cvr	C6615NE No 15
Hewlett Packard (HP)	DeskJet 825c	C6615NE No 15
Hewlett Packard (HP)	DeskJet 840c	C6615NE No 15
Hewlett Packard (HP)	DeskJet 841c	C6615NE No 15
Hewlett Packard (HP)	PSC 1510	C9362E No 336
Hewlett Packard (HP)	DeskJet 842c	C6615NE No 15
Hewlett Packard (HP)	Officejet Pro K550dtn	C9385A No 88bk
Hewlett Packard (HP)	DeskJet 843c	C6615NE No 15
Hewlett Packard (HP)	OfficeJet J4660 All in one	CC653AE No 901
Hewlett Packard (HP)	DeskJet 845 Cvr	C6615NE No 15
Canon	Pixma MP260	PG-510
Hewlett Packard (HP)	DeskJet 845c	C6615NE No 15
Hewlett Packard (HP)	DeskJet 920 Cvr	C6615NE No 15
Hewlett Packard (HP)	DeskJet 920 Cxi	C6615NE No 15
Hewlett Packard (HP)	DeskJet 920c	C6615NE No 15
Hewlett Packard (HP)	DeskJet 940 Cvr	C6615NE No 15
Hewlett Packard (HP)	DeskJet 940c	C6615NE No 15
Hewlett Packard (HP)	Digital Copier 310	C6615NE No 15
Hewlett Packard (HP)	DeskJet 5440	C9362E No 336
Hewlett Packard (HP)	Fax 1230	C6615NE No 15
Hewlett Packard (HP)	Officejet Pro K550dtwn	C9385A No 88bk
Hewlett Packard (HP)	OfficeJet v30	C6615NE No 15
Hewlett Packard (HP)	OfficeJet J4680 All in one	CC653AE No 901
Hewlett Packard (HP)	OfficeJet v40	C6615NE No 15
Canon	Pixma MX330	PG-510
Hewlett Packard (HP)	OfficeJet v40xi	C6615NE No 15
Hewlett Packard (HP)	OfficeJet v45	C6615NE No 15
Hewlett Packard (HP)	PSC 500	C6615NE No 15
Hewlett Packard (HP)	PSC 500xi	C6615NE No 15
Hewlett Packard (HP)	PSC 750	C6615NE No 15
Hewlett Packard (HP)	PSC 750xi	C6615NE No 15
Hewlett Packard (HP)	PSC 950	C6615NE No 15
Hewlett Packard (HP)	DeskJet 5443	C9362E No 336
Hewlett Packard (HP)	PSC 950vr	C6615NE No 15
Hewlett Packard (HP)	Officejet Pro L7000	C9385A No 88bk
Hewlett Packard (HP)	PSC 950xi	C6615NE No 15
Hewlett Packard (HP)	OfficeJet J4535 All in one	CC653AE No 901
Apollo	P 2500p Series	C6614A No 20

Apollo	P 2500u Series	C6614A No 20
Apollo	P 2600p Series	C6614A No 20
Apollo	P 2600u Series	C6614A No 20
Hewlett Packard (HP)	DeskJet 610 CL	C6614A No 20
Hewlett Packard (HP)	DeskJet 610c	C6614A No 20
Hewlett Packard (HP)	DeskJet 612c	C6614A No 20
Hewlett Packard (HP)	DeskJet 630c	C6614A No 20
Hewlett Packard (HP)	DeskJet 632c	C6614A No 20
Hewlett Packard (HP)	DeskJet 640c	C6614A No 20
Hewlett Packard (HP)	DeskJet 642c	C6614A No 20
Hewlett Packard (HP)	DeskJet 648c	C6614A No 20
Hewlett Packard (HP)	DeskJet 5940	C9364E No 337
Hewlett Packard (HP)	DeskJet 650c	C6614A No 20
Hewlett Packard (HP)	Officejet Pro K550dtn	C9396A No 88bk
Hewlett Packard (HP)	DeskJet 656c	C6614A No 20
Apollo	P 2150u	C6614A No 20
Canon	Pixma MG8150	PGI-525bk
Apple	Color StyleWriter 4100	C6614A No 20
Hewlett Packard (HP)	OfficeJet 6500	CD971AE No 920
Hewlett Packard (HP)	DeskJet 610	C6614A No 20
Hewlett Packard (HP)	DeskJet 612	C6614A No 20
Hewlett Packard (HP)	DeskJet 656 cvr	C6614A No 20
Hewlett Packard (HP)	Fax 1010	C6614A No 20
Hewlett Packard (HP)	Fax 1040	C6614A No 20
Hewlett Packard (HP)	Fax 1050	C6614A No 20
Hewlett Packard (HP)	PhotoSmart 2575	C9364E No 337
Hewlett Packard (HP)	Fax 925xi	C6614A No 20
Hewlett Packard (HP)	Officejet Pro K550dtwn	C9396A No 88bk
Compaq	IJ 650	10N0016 No 16
Lexmark	i13	10N0016 No 16
Lexmark	X1100	10N0016 No 16
Lexmark	X1110	10N0016 No 16
Lexmark	X1130	10N0016 No 16
Lexmark	X1140	10N0016 No 16
Lexmark	X1150	10N0016 No 16
Lexmark	X1155	10N0016 No 16
Lexmark	X1160	10N0016 No 16
Lexmark	X1170	10N0016 No 16
Lexmark	X1185	10N0016 No 16
Lexmark	X1190	10N0016 No 16
Lexmark	X1195	10N0016 No 16
Lexmark	X2230	10N0016 No 16
Lexmark	X2240	10N0016 No 16
Hewlett Packard (HP)	PhotoSmart C6300 All in one	CN684EE No 364XLbk
Lexmark	X2250	10N0016 No 16
Lexmark	X72	10N0016 No 16
Lexmark	X74	10N0016 No 16
Lexmark	X75	10N0016 No 16
Lexmark	Z13	10N0016 No 16
Lexmark	Z23	10N0016 No 16

Lexmark	Z23e	10N0016 No 16
Lexmark	Z24	10N0016 No 16
Lexmark	Z25	10N0016 No 16
Lexmark	Z25L	10N0016 No 16
Hewlett Packard (HP)	PhotoSmart D5460	CN684EE No 364XLbk
Lexmark	Z33	10N0016 No 16
Lexmark	Z34	10N0016 No 16
Lexmark	Z35	10N0016 No 16
Lexmark	Z515	10N0016 No 16
Lexmark	Z517	10N0016 No 16
Lexmark	Z600	10N0016 No 16
Lexmark	Z601	10N0016 No 16
Lexmark	Z602	10N0016 No 16
Lexmark	Z603	10N0016 No 16
Lexmark	Z604	10N0016 No 16
Hewlett Packard (HP)	PhotoSmart B8550	CN684EE No 364XLbk
Lexmark	Z605	10N0016 No 16
Lexmark	Z612	10N0016 No 16
Lexmark	Z615	10N0016 No 16
Lexmark	Z617	10N0016 No 16
Lexmark	Z645	10N0016 No 16
Lexmark	Z1270	10N0016 No 16
Lexmark	X1270	10N0016 No 16
Lexmark	Z611	10N0016 No 16
Lexmark	Z618	10N0016 No 16
Lexmark	X2200	10N0016 No 16
Hewlett Packard (HP)	Photosmart C5383	CN684EE No 364XLbk
Lexmark	X1200	10N0016 No 16
Lexmark	X1180	10N0016 No 16
Lexmark	X1250	10N0016 No 16
Lexmark	X1290	10N0016 No 16
Lexmark	Z647	10N0016 No 16
Lexmark	Z511	10N0016 No 16
Lexmark	Z513	10N0016 No 16
Lexmark	Z613	10N0016 No 16
Lexmark	Z614	10N0016 No 16
Lexmark	Z640	10N0016 No 16
Hewlett Packard (HP)	Photosmart C5380	CN684EE No 364XLbk
Compaq	IJ 650	10N0217 No 17
Lexmark	i13	10N0217 No 17
Lexmark	X1100	10N0217 No 17
Lexmark	X1110	10N0217 No 17
Lexmark	X1130	10N0217 No 17
Lexmark	X1140	10N0217 No 17
Lexmark	X1150	10N0217 No 17
Lexmark	X1155	10N0217 No 17
Lexmark	X1160	10N0217 No 17
Lexmark	X1170	10N0217 No 17
Lexmark	X1185	10N0217 No 17
Lexmark	X1190	10N0217 No 17

Lexmark	X1195	10N0217 No 17
Hewlett Packard (HP)	Photosmart C4280	CB335EE No 350
Lexmark	X2230	10N0217 No 17
Hewlett Packard (HP)	Photosmart D7360	C8721E No 363bk
Lexmark	X2240	10N0217 No 17
Hewlett Packard (HP)	Deskjet 1050	CH561EE No 301
Lexmark	X2250	10N0217 No 17
Canon	Pixma MG5450	PGI-550pbk
Lexmark	X72	10N0217 No 17
Lexmark	X74	10N0217 No 17
Lexmark	X75	10N0217 No 17
Lexmark	Z13	10N0217 No 17
Lexmark	Z23	10N0217 No 17
Lexmark	Z23e	10N0217 No 17
Lexmark	Z24	10N0217 No 17
Hewlett Packard (HP)	DeskJet D4260	CB335EE No 350
Lexmark	Z25	10N0217 No 17
Hewlett Packard (HP)	PS 3310 all-in-one	C8721E No 363bk
Lexmark	Z25L	10N0217 No 17
Hewlett Packard (HP)	Deskjet 2050	CH561EE No 301
Lexmark	Z33	10N0217 No 17
Canon	Pixma iP7250	PGI-550pbk
Lexmark	Z34	10N0217 No 17
Lexmark	Z35	10N0217 No 17
Lexmark	Z515	10N0217 No 17
Lexmark	Z517	10N0217 No 17
Lexmark	Z600	10N0217 No 17
Lexmark	Z601	10N0217 No 17
Lexmark	Z602	10N0217 No 17
Hewlett Packard (HP)	Photosmart C5280	CB335EE No 350
Lexmark	Z603	10N0217 No 17
Hewlett Packard (HP)	PS 3210 all-in-one	C8721E No 363bk
Lexmark	Z604	10N0217 No 17
Hewlett Packard (HP)	Deskjet 2050s	CH561EE No 301
Lexmark	Z605	10N0217 No 17
Canon	Pixma MG5650	PGI-550pbk
Lexmark	Z612	10N0217 No 17
Lexmark	Z615	10N0217 No 17
Lexmark	Z617	10N0217 No 17
Lexmark	Z645	10N0217 No 17
Lexmark	Z1270	10N0217 No 17
Lexmark	X1270	10N0217 No 17
Lexmark	Z611	10N0217 No 17
Hewlett Packard (HP)	OfficeJet 5700	CB335EE No 350
Lexmark	Z618	10N0217 No 17
Hewlett Packard (HP)	Photosmart C7180	C8721E No 363bk
Lexmark	X2200	10N0217 No 17
Hewlett Packard (HP)	Deskjet 3050	CH561EE No 301
Lexmark	X1200	10N0217 No 17
Canon	Pixma MG6650	PGI-550pbk

Lexmark	X1180	10N0217 No 17
Lexmark	Z640	10N0217 No 17
Hewlett Packard (HP)	DeskJet 3650	C8727A No 27
Hewlett Packard (HP)	DeskJet 3843	C8727A No 27
Hewlett Packard (HP)	DeskJet 3845	C8727A No 27
Hewlett Packard (HP)	DeskJet 450cbi	C8727A No 27
Hewlett Packard (HP)	DeskJet 450ci	C8727A No 27
Hewlett Packard (HP)	DeskJet 450wbt	C8727A No 27
Hewlett Packard (HP)	OfficeJet 4215	C8727A No 27
Hewlett Packard (HP)	OfficeJet 5610	C8727A No 27
Hewlett Packard (HP)	OfficeJet 5610v	C8727A No 27
Hewlett Packard (HP)	OfficeJet 5610xi	C8727A No 27
Hewlett Packard (HP)	PSC 1310	C8727A No 27
Hewlett Packard (HP)	PSC 1311	C8727A No 27
Hewlett Packard (HP)	PSC 1315	C8727A No 27
Hewlett Packard (HP)	Photosmart C4280	CB336EE No 350xl
Hewlett Packard (HP)	DeskJet 3300	C8727A No 27
Canon	Pixma IP2500	PG-37
Hewlett Packard (HP)	DeskJet 3320	C8727A No 27
Hewlett Packard (HP)	Deskjet 1050	CH563EE No 301xl
Hewlett Packard (HP)	DeskJet 3325	C8727A No 27
Hewlett Packard (HP)	Deskjet 3515	CZ101AE No 650bk
Hewlett Packard (HP)	DeskJet 3420	C8727A No 27
Hewlett Packard (HP)	DeskJet 3425	C8727A No 27
Hewlett Packard (HP)	DeskJet 3500	C8727A No 27
Hewlett Packard (HP)	DeskJet 3520	C8727A No 27
Hewlett Packard (HP)	DeskJet 3550	C8727A No 27
Hewlett Packard (HP)	DeskJet 3600	C8727A No 27
Hewlett Packard (HP)	DeskJet 3620	C8727A No 27
Hewlett Packard (HP)	DeskJet D4260	CB336EE No 350xl
Hewlett Packard (HP)	DeskJet 3645	C8727A No 27
Canon	Pixma IP1800	PG-37
Hewlett Packard (HP)	DeskJet 3647	C8727A No 27
Hewlett Packard (HP)	Deskjet 2050	CH563EE No 301xl
Hewlett Packard (HP)	DeskJet 3651	C8727A No 27
Hewlett Packard (HP)	Deskjet Advantage 2545	CZ101AE No 650bk
Hewlett Packard (HP)	DeskJet 3740	C8727A No 27
Hewlett Packard (HP)	DeskJet 3745	C8727A No 27
Hewlett Packard (HP)	DeskJet 3840	C8727A No 27
Hewlett Packard (HP)	DeskJet 3847	C8727A No 27
Hewlett Packard (HP)	Fax 1240	C8727A No 27
Hewlett Packard (HP)	OfficeJet 4200	C8727A No 27
Hewlett Packard (HP)	OfficeJet 4255	C8727A No 27
Hewlett Packard (HP)	Photosmart C5280	CB336EE No 350xl
Hewlett Packard (HP)	PSC 1213	C8727A No 27
Canon	Pixma MP210	PG-37
Hewlett Packard (HP)	PSC 1215	C8727A No 27
Hewlett Packard (HP)	Deskjet 2050s	CH563EE No 301xl
Hewlett Packard (HP)	PSC 1219	C8727A No 27
Hewlett Packard (HP)	Deskjet Advantage 1515	CZ101AE No 650bk

Hewlett Packard (HP)	PSC 1317	C8727A No 27
Hewlett Packard (HP)	PSC 2108	C8727A No 27
Hewlett Packard (HP)	PSC 2170	C8727A No 27
Hewlett Packard (HP)	PSC 2171	C8727A No 27
Hewlett Packard (HP)	PSC 4215	C8727A No 27
Hewlett Packard (HP)	PSC 4219	C8727A No 27
Hewlett Packard (HP)	PSC 4255	C8727A No 27
Hewlett Packard (HP)	OfficeJet 5700	CB336EE No 350xl
Hewlett Packard (HP)	OfficeJet 4355	C8727A No 27
Canon	Pixma MP220	PG-37
Hewlett Packard (HP)	OfficeJet 4315	C8727A No 27
Hewlett Packard (HP)	Deskjet 3050	CH563EE No 301xl
Hewlett Packard (HP)	OfficeJet 5600	C8727A No 27
Hewlett Packard (HP)	DeskJet Ink Advantage 1015	CZ101AE No 650bk
Hewlett Packard (HP)	DeskJet 3910	C9351A No 21
Hewlett Packard (HP)	DeskJet D1360	C9351A No 21
Hewlett Packard (HP)	DeskJet D1368	C9351A No 21
Hewlett Packard (HP)	DeskJet D2320	C9351A No 21
Hewlett Packard (HP)	DeskJet D2330	C9351A No 21
Hewlett Packard (HP)	DeskJet D2345	C9351A No 21
Hewlett Packard (HP)	DeskJet D2360	C9351A No 21
Hewlett Packard (HP)	DeskJet D2368	C9351A No 21
Hewlett Packard (HP)	DeskJet D2400	C9351A No 21
Hewlett Packard (HP)	DeskJet F310	C9351A No 21
Hewlett Packard (HP)	DeskJet F325	C9351A No 21
Hewlett Packard (HP)	DeskJet F335	C9351A No 21
Hewlett Packard (HP)	DeskJet F340	C9351A No 21
Hewlett Packard (HP)	DeskJet F350	C9351A No 21
Hewlett Packard (HP)	DeskJet F370	C9351A No 21
Hewlett Packard (HP)	DeskJet F378	C9351A No 21
Hewlett Packard (HP)	DeskJet F380	C9351A No 21
Hewlett Packard (HP)	DeskJet F385	C9351A No 21
Hewlett Packard (HP)	DeskJet F388	C9351A No 21
Hewlett Packard (HP)	DeskJet F390	C9351A No 21
Hewlett Packard (HP)	DeskJet F394	C9351A No 21
Hewlett Packard (HP)	OfficeJet 4355	C9351A No 21
Hewlett Packard (HP)	PSC 1400	C9351A No 21
Hewlett Packard (HP)	PSC 1402	C9351A No 21
Hewlett Packard (HP)	PSC 1415	C9351A No 21
Hewlett Packard (HP)	PSC 1401	C9351A No 21
Hewlett Packard (HP)	PSC 1403	C9351A No 21
Hewlett Packard (HP)	PSC 1406	C9351A No 21
Hewlett Packard (HP)	PSC 1408	C9351A No 21
Hewlett Packard (HP)	OfficeJet 4315	C9351A No 21
Hewlett Packard (HP)	DeskJet D1460	C9351A No 21
Hewlett Packard (HP)	DeskJet D2460	C9351A No 21
Hewlett Packard (HP)	DeskJet F2180	C9351A No 21
Hewlett Packard (HP)	DeskJet F4180	C9351A No 21
Hewlett Packard (HP)	PhotoSmart 3110	C9351A No 21
Hewlett Packard (HP)	DeskJet F4172	C9351A No 21



Hewlett Packard (HP)	OfficeJet J3680	C9351A No 21
Hewlett Packard (HP)	DeskJet D1560	C9351A No 21
Hewlett Packard (HP)	DeskJet F2280	C9351A No 21
Hewlett Packard (HP)	Deskjet F4100	C9351A No 21
Hewlett Packard (HP)	DeskJet D1520	C9351A No 21
Hewlett Packard (HP)	DeskJet 450cbi	C6656A No 56
Hewlett Packard (HP)	DeskJet 450wbt	C6656A No 56
Hewlett Packard (HP)	DeskJet 5150	C6656A No 56
Hewlett Packard (HP)	DeskJet 5550	C6656A No 56
Hewlett Packard (HP)	DeskJet 5551	C6656A No 56
Hewlett Packard (HP)	DeskJet 5650	C6656A No 56
Hewlett Packard (HP)	DeskJet 9650	C6656A No 56
Hewlett Packard (HP)	DeskJet 9670	C6656A No 56
Hewlett Packard (HP)	DeskJet 9680	C6656A No 56
Hewlett Packard (HP)	Digital Copier Printer 410	C6656A No 56
Hewlett Packard (HP)	OfficeJet 4215	C6656A No 56
Hewlett Packard (HP)	OfficeJet 5610	C6656A No 56
Hewlett Packard (HP)	OfficeJet 5610v	C6656A No 56
Hewlett Packard (HP)	OfficeJet 5610xi	C6656A No 56
Hewlett Packard (HP)	OfficeJet 6110	C6656A No 56
Hewlett Packard (HP)	PhotoSmart 7150	C6656A No 56
Hewlett Packard (HP)	PhotoSmart 7260	C6656A No 56
Hewlett Packard (HP)	PhotoSmart 7350	C6656A No 56
Hewlett Packard (HP)	PhotoSmart 7450	C6656A No 56
Hewlett Packard (HP)	PhotoSmart 7450v	C6656A No 56
Hewlett Packard (HP)	PhotoSmart 7450xi	C6656A No 56
Hewlett Packard (HP)	PhotoSmart 7550	C6656A No 56
Hewlett Packard (HP)	PhotoSmart 7660	C6656A No 56
Hewlett Packard (HP)	PhotoSmart 7755	C6656A No 56
Hewlett Packard (HP)	PhotoSmart 7760	C6656A No 56
Hewlett Packard (HP)	PhotoSmart 7960	C6656A No 56
Hewlett Packard (HP)	PSC 1310	C6656A No 56
Hewlett Packard (HP)	PSC 1311	C6656A No 56
Hewlett Packard (HP)	PSC 1315	C6656A No 56
Hewlett Packard (HP)	PSC 1340	C6656A No 56
Hewlett Packard (HP)	PSC 1350	C6656A No 56
Hewlett Packard (HP)	PSC 2110	C6656A No 56
Hewlett Packard (HP)	PSC 2110v	C6656A No 56
Hewlett Packard (HP)	PSC 2110xi	C6656A No 56
Hewlett Packard (HP)	PSC 2175	C6656A No 56
Hewlett Packard (HP)	PSC 2210	C6656A No 56
Hewlett Packard (HP)	PSC 2410 PhotoSmart	C6656A No 56
Hewlett Packard (HP)	PSC 2510 PhotoSmart	C6656A No 56
Hewlett Packard (HP)	DeskJet 450	C6656A No 56
Hewlett Packard (HP)	DeskJet 5151	C6656A No 56
Hewlett Packard (HP)	DeskJet 5552	C6656A No 56
Hewlett Packard (HP)	DeskJet 5600	C6656A No 56
Hewlett Packard (HP)	DeskJet 5652	C6656A No 56
Hewlett Packard (HP)	DeskJet 5655	C6656A No 56
Hewlett Packard (HP)	DeskJet 5850	C6656A No 56

Hewlett Packard (HP)	DeskJet 6110	C6656A No 56
Hewlett Packard (HP)	DeskJet 7762	C6656A No 56
Hewlett Packard (HP)	DeskJet 9600	C6656A No 56
Hewlett Packard (HP)	Digital Copier 410	C6656A No 56
Hewlett Packard (HP)	Fax 1240	C6656A No 56
Hewlett Packard (HP)	OfficeJet 4110	C6656A No 56
Hewlett Packard (HP)	OfficeJet 4200	C6656A No 56
Hewlett Packard (HP)	OfficeJet 4219	C6656A No 56
Hewlett Packard (HP)	OfficeJet 4255	C6656A No 56
Hewlett Packard (HP)	OfficeJet 5500	C6656A No 56
Hewlett Packard (HP)	OfficeJet 5505	C6656A No 56
Hewlett Packard (HP)	OfficeJet 5510	C6656A No 56
Hewlett Packard (HP)	OfficeJet 5515	C6656A No 56
Hewlett Packard (HP)	PhotoSmart 100	C6656A No 56
Hewlett Packard (HP)	PhotoSmart 130	C6656A No 56
Hewlett Packard (HP)	PhotoSmart 230	C6656A No 56
Hewlett Packard (HP)	PhotoSmart 2410	C6656A No 56
Hewlett Packard (HP)	PhotoSmart 245	C6656A No 56
Hewlett Packard (HP)	PhotoSmart 2500	C6656A No 56
Hewlett Packard (HP)	PhotoSmart 2510	C6656A No 56
Hewlett Packard (HP)	PhotoSmart 7200	C6656A No 56
Hewlett Packard (HP)	PhotoSmart 7345	C6656A No 56
Hewlett Packard (HP)	PhotoSmart 7400 Series	C6656A No 56
Hewlett Packard (HP)	PhotoSmart 7600	C6656A No 56
Hewlett Packard (HP)	PhotoSmart 7700	C6656A No 56
Hewlett Packard (HP)	PhotoSmart 7762	C6656A No 56
Hewlett Packard (HP)	PhotoSmart 7900	C6656A No 56
Hewlett Packard (HP)	PhotoSmart P145	C6656A No 56
Hewlett Packard (HP)	PhotoSmart P230	C6656A No 56
Hewlett Packard (HP)	PhotoSmart P7150	C6656A No 56
Hewlett Packard (HP)	PSC 1100	C6656A No 56
Hewlett Packard (HP)	PSC 1110	C6656A No 56
Hewlett Packard (HP)	PSC 1200	C6656A No 56
Hewlett Packard (HP)	PSC 1205	C6656A No 56
Hewlett Packard (HP)	PSC 1209	C6656A No 56
Hewlett Packard (HP)	PSC 1210	C6656A No 56
Hewlett Packard (HP)	PSC 1213	C6656A No 56
Hewlett Packard (HP)	PSC 1215	C6656A No 56
Hewlett Packard (HP)	PSC 1217	C6656A No 56
Hewlett Packard (HP)	PSC 1219	C6656A No 56
Hewlett Packard (HP)	PSC 1300	C6656A No 56
Hewlett Packard (HP)	PSC 1317	C6656A No 56
Hewlett Packard (HP)	PSC 1355	C6656A No 56
Hewlett Packard (HP)	PSC 2108	C6656A No 56
Hewlett Packard (HP)	PSC 2115	C6656A No 56
Hewlett Packard (HP)	PSC 2170	C6656A No 56
Hewlett Packard (HP)	PSC 2171	C6656A No 56
Hewlett Packard (HP)	PSC 2179	C6656A No 56
Hewlett Packard (HP)	PSC 2410	C6656A No 56
Hewlett Packard (HP)	PSC 2510	C6656A No 56

Hewlett Packard (HP)	PSC 2550	C6656A No 56
Hewlett Packard (HP)	PSC 4110	C6656A No 56
Hewlett Packard (HP)	PSC 4215	C6656A No 56
Hewlett Packard (HP)	PSC 4219	C6656A No 56
Hewlett Packard (HP)	PSC 4255	C6656A No 56
Hewlett Packard (HP)	OfficeJet 5600	C6656A No 56
Hewlett Packard (HP)	Deskjet F4100	C6656A No 56
Hewlett Packard (HP)	DeskJet 460c	C8765E No 338
Hewlett Packard (HP)	PhotoSmart 2613	C8765E No 338
Hewlett Packard (HP)	PhotoSmart 2713	C8765E No 338
Hewlett Packard (HP)	PhotoSmart 8050	C8765E No 338
Hewlett Packard (HP)	PhotoSmart 8153	C8765E No 338
Hewlett Packard (HP)	PhotoSmart 8453	C8765E No 338
Hewlett Packard (HP)	DeskJet 460	C8765E No 338
Hewlett Packard (HP)	DeskJet 5943	C8765E No 338
Hewlett Packard (HP)	DeskJet 6800	C8765E No 338
Hewlett Packard (HP)	DeskJet 6848	C8765E No 338
Hewlett Packard (HP)	OfficeJet 6200	C8765E No 338
Hewlett Packard (HP)	OfficeJet 6205	C8765E No 338
Hewlett Packard (HP)	PhotoSmart 2570	C8765E No 338
Hewlett Packard (HP)	PhotoSmart 2600	C8765E No 338
Hewlett Packard (HP)	PhotoSmart 2700	C8765E No 338
Hewlett Packard (HP)	PSC 1500	C8765E No 338
Hewlett Packard (HP)	PSC 1510	C8765E No 338
Hewlett Packard (HP)	PSC 1600	C8765E No 338
Hewlett Packard (HP)	PSC 1610	C8765E No 338
Hewlett Packard (HP)	PSC 2350	C8765E No 338
Hewlett Packard (HP)	PSC 2353	C8765E No 338
Hewlett Packard (HP)	PSC 2575	C8765E No 338
Hewlett Packard (HP)	PSC 2610	C8765E No 338
Hewlett Packard (HP)	PSC 2700	C8765E No 338
Hewlett Packard (HP)	DeskJet 5740	C8765E No 338
Hewlett Packard (HP)	DeskJet 6520	C8765E No 338
Hewlett Packard (HP)	DeskJet 6540	C8765E No 338
Hewlett Packard (HP)	DeskJet 6543	C8765E No 338
Hewlett Packard (HP)	DeskJet 6840	C8765E No 338
Hewlett Packard (HP)	DeskJet 6843	C8765E No 338
Hewlett Packard (HP)	DeskJet 9800	C8765E No 338
Hewlett Packard (HP)	OfficeJet 6210	C8765E No 338
Hewlett Packard (HP)	OfficeJet 7310	C8765E No 338
Hewlett Packard (HP)	OfficeJet 7410	C8765E No 338
Hewlett Packard (HP)	PhotoSmart 2610	C8765E No 338
Hewlett Packard (HP)	PhotoSmart 2710	C8765E No 338
Hewlett Packard (HP)	PhotoSmart 8150	C8765E No 338
Hewlett Packard (HP)	PhotoSmart 8450	C8765E No 338
Hewlett Packard (HP)	PhotoSmart 8450GP	C8765E No 338
Hewlett Packard (HP)	PSC 2355	C8765E No 338
Hewlett Packard (HP)	PhotoSmart C3100 All-in-one	C8765E No 338
Hewlett Packard (HP)	Photosmart C3180	C8765E No 338
Hewlett Packard (HP)	PSC 1510 All-In-One	C8765E No 338

Hewlett Packard (HP)	Photosmart C3183	C8765E No 338
Hewlett Packard (HP)	OfficeJet K7100	C8765E No 338
Hewlett Packard (HP)	DeskJet H470	C8765E No 338
Hewlett Packard (HP)	OfficeJet H470	C8765E No 338
Hewlett Packard (HP)	Officejet 100	C8765E No 338
Hewlett Packard (HP)	PhotoSmart 2613	C8767E No 339
Hewlett Packard (HP)	PhotoSmart 8153	C8767E No 339
Hewlett Packard (HP)	PhotoSmart 8453	C8767E No 339
Hewlett Packard (HP)	DeskJet 5943	C8767E No 339
Hewlett Packard (HP)	DeskJet 6848	C8767E No 339
Hewlett Packard (HP)	PSC 2575	C8767E No 339
Hewlett Packard (HP)	DeskJet 570	C8767E No 339
Hewlett Packard (HP)	DeskJet 5740	C8767E No 339
Hewlett Packard (HP)	DeskJet 5745	C8767E No 339
Hewlett Packard (HP)	DeskJet 5940	C8767E No 339
Hewlett Packard (HP)	DeskJet 6520	C8767E No 339
Hewlett Packard (HP)	DeskJet 6540	C8767E No 339
Hewlett Packard (HP)	DeskJet 6620	C8767E No 339
Hewlett Packard (HP)	DeskJet 6840	C8767E No 339
Hewlett Packard (HP)	DeskJet 9800	C8767E No 339
Hewlett Packard (HP)	OfficeJet 7210	C8767E No 339
Hewlett Packard (HP)	OfficeJet 7310	C8767E No 339
Hewlett Packard (HP)	OfficeJet 7410	C8767E No 339
Hewlett Packard (HP)	PhotoSmart 2575	C8767E No 339
Hewlett Packard (HP)	PhotoSmart 2610	C8767E No 339
Hewlett Packard (HP)	PhotoSmart 2710	C8767E No 339
Hewlett Packard (HP)	PhotoSmart 8150	C8767E No 339
Hewlett Packard (HP)	PhotoSmart 8450	C8767E No 339
Hewlett Packard (HP)	PhotoSmart 8750	C8767E No 339
Hewlett Packard (HP)	DeskJet 6940	C8767E No 339
Hewlett Packard (HP)	DeskJet 6980	C8767E No 339
Hewlett Packard (HP)	Officejet 6310 AiO	C8767E No 339
Hewlett Packard (HP)	PhotoSmart D5160	C8767E No 339
Hewlett Packard (HP)	PhotoSmart Pro B8350	C8767E No 339
Hewlett Packard (HP)	OfficeJet K7100	C8767E No 339
Canon	Pixma IP4200	PGI-5bk
Canon	Pixma IP5300	PGI-5bk
Canon	Pixma iX4000	PGI-5bk
Canon	Pixma iX5000	PGI-5bk
Canon	Pixma IP5100	PGI-5bk
Canon	Pixma IP4500	PGI-5bk
Canon	Pixma MP520	PGI-5bk
Canon	Pixma MP610	PGI-5bk
Canon	Pixma MX700	PGI-5bk
Canon	Pixma IP3500	PGI-5bk
Canon	Pixma MP970	PGI-5bk
Canon	Pixma MX850	PGI-5bk
Hewlett Packard (HP)	PSC 1500	C9362E No 336
Hewlett Packard (HP)	PhotoSmart 2575	C9362E No 336
Hewlett Packard (HP)	PhotoSmart 2710	C9362E No 336

Hewlett Packard (HP)	Officejet 6310 AiO	C9362E No 336
Hewlett Packard (HP)	Photosmart 7830	C9362E No 336
Hewlett Packard (HP)	Photosmart 7850	C9362E No 336
Hewlett Packard (HP)	PhotoSmart C3100 All-in-one	C9362E No 336
Hewlett Packard (HP)	Photosmart C3180	C9362E No 336
Hewlett Packard (HP)	PSC 1507 All-In-One	C9362E No 336
Hewlett Packard (HP)	PSC 1508	C9362E No 336
Hewlett Packard (HP)	PSC 1510 All-In-One	C9362E No 336
Hewlett Packard (HP)	PSC 1513 All-In-One	C9362E No 336
Hewlett Packard (HP)	Photosmart C3183	C9362E No 336
Hewlett Packard (HP)	PhotoSmart 8050	C9364E No 337
Hewlett Packard (HP)	DeskJet 6940	C9364E No 337
Hewlett Packard (HP)	DeskJet 6980	C9364E No 337
Hewlett Packard (HP)	Officejet 6310 AiO	C9364E No 337
Hewlett Packard (HP)	Photosmart C4180	C9364E No 337
Hewlett Packard (HP)	PhotoSmart D5160	C9364E No 337
Hewlett Packard (HP)	D4160	C9364E No 337
Hewlett Packard (HP)	OfficeJet K7100	C9364E No 337
Hewlett Packard (HP)	DeskJet H470	C9364E No 337
Hewlett Packard (HP)	OfficeJet H470	C9364E No 337
Hewlett Packard (HP)	Officejet 100	C9364E No 337
Hewlett Packard (HP)	Business InkJet 2200	C4844A no 10bk
Hewlett Packard (HP)	Business InkJet 2250	C4844A no 10bk
Hewlett Packard (HP)	Business InkJet 2280	C4844A no 10bk
Hewlett Packard (HP)	Business InkJet 2230	C4844A no 10bk
Hewlett Packard (HP)	DesignJet 500	C4844A no 10bk
Hewlett Packard (HP)	DesignJet 800	C4844A no 10bk
Hewlett Packard (HP)	Color Printer 2000	C4844A no 10bk
Hewlett Packard (HP)	Color Printer 2500	C4844A no 10bk
Hewlett Packard (HP)	Color InkJet Printer cp1700	C4844A no 10bk
Hewlett Packard (HP)	OfficeJet 9110	C4844A no 10bk
Hewlett Packard (HP)	OfficeJet 9120	C4844A no 10bk
Hewlett Packard (HP)	OfficeJet 9130	C4844A no 10bk
Hewlett Packard (HP)	Business InkJet 1000	C4844A no 10bk
Hewlett Packard (HP)	Business InkJet 1200d	C4844A no 10bk
Hewlett Packard (HP)	Business InkJet 1200dtn	C4844A no 10bk
Hewlett Packard (HP)	Business InkJet 1200dtwn	C4844A no 10bk
Hewlett Packard (HP)	Business InkJet 2800	C4844A no 10bk
Hewlett Packard (HP)	Business InkJet 2800DT	C4844A no 10bk
Hewlett Packard (HP)	Business InkJet 2800DTN	C4844A no 10bk
Hewlett Packard (HP)	DesignJet 70	C4844A no 10bk
Hewlett Packard (HP)	Business InkJet 2300	C4844A no 10bk
Hewlett Packard (HP)	Business InkJet 2300n	C4844A no 10bk
Hewlett Packard (HP)	Business InkJet 2300dtn	C4844A no 10bk
Hewlett Packard (HP)	OfficeJet Pro K850	C4844A no 10bk
Hewlett Packard (HP)	OfficeJet Pro K850dn	C4844A no 10bk
Hewlett Packard (HP)	DesignJet 110 Plus NR	C4844A no 10bk
Hewlett Packard (HP)	Business InkJet 1100	C4844A no 10bk
Hewlett Packard (HP)	Business InkJet 100	C4844A no 10bk
Hewlett Packard (HP)	DesignJet 100	C4844A no 10bk

Apple	Color StyleWriter 6500	C6615D No 15
Hewlett Packard (HP)	DeskJet 3820	C6615D No 15
Hewlett Packard (HP)	DeskJet 3822	C6615D No 15
Hewlett Packard (HP)	DeskJet 810c	C6615D No 15
Hewlett Packard (HP)	DeskJet 812c	C6615D No 15
Hewlett Packard (HP)	DeskJet 816C	C6615D No 15
Hewlett Packard (HP)	DeskJet 825 Cvr	C6615D No 15
Hewlett Packard (HP)	DeskJet 825c	C6615D No 15
Hewlett Packard (HP)	DeskJet 840c	C6615D No 15
Hewlett Packard (HP)	DeskJet 841c	C6615D No 15
Hewlett Packard (HP)	DeskJet 842c	C6615D No 15
Hewlett Packard (HP)	DeskJet 843c	C6615D No 15
Hewlett Packard (HP)	DeskJet 845 Cvr	C6615D No 15
Hewlett Packard (HP)	DeskJet 845c	C6615D No 15
Hewlett Packard (HP)	DeskJet 920 Cvr	C6615D No 15
Hewlett Packard (HP)	DeskJet 920 Cxi	C6615D No 15
Hewlett Packard (HP)	DeskJet 920c	C6615D No 15
Hewlett Packard (HP)	DeskJet 940 Cvr	C6615D No 15
Hewlett Packard (HP)	DeskJet 940c	C6615D No 15
Hewlett Packard (HP)	Digital Copier 310	C6615D No 15
Hewlett Packard (HP)	Fax 1230	C6615D No 15
Hewlett Packard (HP)	OfficeJet K60	C6615D No 15
Hewlett Packard (HP)	OfficeJet K80	C6615D No 15
Hewlett Packard (HP)	OfficeJet K80xi	C6615D No 15
Hewlett Packard (HP)	OfficeJet v30	C6615D No 15
Hewlett Packard (HP)	OfficeJet v40	C6615D No 15
Hewlett Packard (HP)	OfficeJet v40xi	C6615D No 15
Hewlett Packard (HP)	OfficeJet v45	C6615D No 15
Hewlett Packard (HP)	PSC 500	C6615D No 15
Hewlett Packard (HP)	PSC 500xi	C6615D No 15
Hewlett Packard (HP)	PSC 750	C6615D No 15
Hewlett Packard (HP)	PSC 750xi	C6615D No 15
Hewlett Packard (HP)	PSC 950	C6615D No 15
Hewlett Packard (HP)	PSC 950vr	C6615D No 15
Hewlett Packard (HP)	PSC 950xi	C6615D No 15
Hewlett Packard (HP)	Officejet 5110	C6615D No 15
Hewlett Packard (HP)	PSC 500Cxi	C6615D No 15
Hewlett Packard (HP)	DeskJet 916C	C6615D No 15
Hewlett Packard (HP)	PSC 700	C6615D No 15
Hewlett Packard (HP)	PSC 2120	C6615D No 15
Hewlett Packard (HP)	PSC 720	C6615D No 15
Hewlett Packard (HP)	PSC 760	C6615D No 15
Hewlett Packard (HP)	ColorCopier 310	C6615D No 15
Apollo	P 2500p Series	C6614D No 20
Apollo	P 2600p Series	C6614D No 20
Apollo	P 2600u Series	C6614D No 20
Hewlett Packard (HP)	DeskJet 610 CL	C6614D No 20
Hewlett Packard (HP)	DeskJet 610c	C6614D No 20
Hewlett Packard (HP)	DeskJet 612c	C6614D No 20
Hewlett Packard (HP)	DeskJet 630c	C6614D No 20

Hewlett Packard (HP)	DeskJet 632c	C6614D No 20
Hewlett Packard (HP)	DeskJet 640c	C6614D No 20
Hewlett Packard (HP)	DeskJet 642c	C6614D No 20
Hewlett Packard (HP)	DeskJet 648c	C6614D No 20
Hewlett Packard (HP)	DeskJet 650c	C6614D No 20
Hewlett Packard (HP)	DeskJet 656c	C6614D No 20
Apollo	P 2150u	C6614D No 20
Apollo	P 2200	C6614D No 20
Apple	Color StyleWriter 4100	C6614D No 20
Hewlett Packard (HP)	DeskJet 610	C6614D No 20
Hewlett Packard (HP)	DeskJet 612	C6614D No 20
Hewlett Packard (HP)	DeskJet 656 cvr	C6614D No 20
Hewlett Packard (HP)	Fax 1010	C6614D No 20
Hewlett Packard (HP)	Fax 1040	C6614D No 20
Hewlett Packard (HP)	Fax 1050	C6614D No 20
Hewlett Packard (HP)	Fax 925xi	C6614D No 20
Hewlett Packard (HP)	DeskJet 615C	C6614D No 20
Hewlett Packard (HP)	Fax 1020	C6614D No 20
Hewlett Packard (HP)	Fax 925i	C6614D No 20
Hewlett Packard (HP)	Photosmart 8250	C8719E No 363bk
Hewlett Packard (HP)	Officejet Pro K550	C9385A No 88bk
Hewlett Packard (HP)	Officejet Pro K5400	C9385A No 88bk
Hewlett Packard (HP)	Officejet Pro K5400dn	C9385A No 88bk
Hewlett Packard (HP)	Officejet Pro K5400dtn	C9385A No 88bk
Hewlett Packard (HP)	Officejet Pro L7500	C9385A No 88bk
Hewlett Packard (HP)	Officejet Pro L7680	C9385A No 88bk
Hewlett Packard (HP)	Officejet Pro L7780	C9385A No 88bk
Hewlett Packard (HP)	Officejet Pro L7580	C9385A No 88bk
Hewlett Packard (HP)	Officejet Pro L7480	C9385A No 88bk
Hewlett Packard (HP)	OfficeJet Pro L7590	C9385A No 88bk
Hewlett Packard (HP)	OfficeJet Pro K8600	C9385A No 88bk
Hewlett Packard (HP)	Officejet Pro K550	C9396A No 88bk
Hewlett Packard (HP)	Officejet Pro L7000	C9396A No 88bk
Hewlett Packard (HP)	Officejet Pro K5400	C9396A No 88bk
Hewlett Packard (HP)	Officejet Pro K5400dn	C9396A No 88bk
Hewlett Packard (HP)	Officejet Pro K5400dtn	C9396A No 88bk
Hewlett Packard (HP)	Officejet Pro L7500	C9396A No 88bk
Hewlett Packard (HP)	Officejet Pro L7680	C9396A No 88bk
Hewlett Packard (HP)	Officejet Pro L7780	C9396A No 88bk
Hewlett Packard (HP)	Officejet Pro L7580	C9396A No 88bk
Hewlett Packard (HP)	Officejet Pro L7480	C9396A No 88bk
Hewlett Packard (HP)	OfficeJet Pro L7590	C9396A No 88bk
Hewlett Packard (HP)	OfficeJet Pro K8600	C9396A No 88bk
Hewlett Packard (HP)	OfficeJet J5780	CB335EE No 350
Hewlett Packard (HP)	Photosmart C4472	CB335EE No 350
Hewlett Packard (HP)	Photosmart C4200	CB335EE No 350
Hewlett Packard (HP)	Photosmart C4580 All-in-One	CB335EE No 350
Hewlett Packard (HP)	OfficeJet J6410 All in One	CB335EE No 350
Hewlett Packard (HP)	OfficeJet J6424	CB335EE No 350
Hewlett Packard (HP)	DeskJet D4360	CB335EE No 350

Hewlett Packard (HP)	PhotoSmart D5360	CB335EE No 350
Hewlett Packard (HP)	Photosmart C4270	CB335EE No 350
Hewlett Packard (HP)	Photosmart C4380	CB335EE No 350
Hewlett Packard (HP)	PhotoSmart C4480	CB335EE No 350
Hewlett Packard (HP)	OfficeJet J5780	CB336EE No 350xl
Hewlett Packard (HP)	Photosmart C4472	CB336EE No 350xl
Hewlett Packard (HP)	Photosmart C4200	CB336EE No 350xl
Hewlett Packard (HP)	Photosmart C4580 All-in-One	CB336EE No 350xl
Hewlett Packard (HP)	OfficeJet J6410 All in One	CB336EE No 350xl
Hewlett Packard (HP)	OfficeJet J6424	CB336EE No 350xl
Hewlett Packard (HP)	DeskJet D4360	CB336EE No 350xl
Hewlett Packard (HP)	PhotoSmart D5360	CB336EE No 350xl
Hewlett Packard (HP)	Photosmart C4270	CB336EE No 350xl
Hewlett Packard (HP)	Photosmart C4380	CB336EE No 350xl
Hewlett Packard (HP)	PhotoSmart C4480	CB336EE No 350xl
Hewlett Packard (HP)	DeskJet D2560	CC640EE No 300
Hewlett Packard (HP)	F4280 All in one	CC640EE No 300
Hewlett Packard (HP)	Deskjet F4200 All in one	CC640EE No 300
Hewlett Packard (HP)	DeskJet F4210 All in one	CC640EE No 300
Hewlett Packard (HP)	DeskJet D5560	CC640EE No 300
Hewlett Packard (HP)	PhotoSmart C4680 AIO	CC640EE No 300
Hewlett Packard (HP)	DeskJet D1660	CC640EE No 300
Hewlett Packard (HP)	DeskJet D2660	CC640EE No 300
Hewlett Packard (HP)	PhotoSmart C4780 AIO	CC640EE No 300
Hewlett Packard (HP)	PhotoSmart C5300 All in one	CB316E No 364bk
Hewlett Packard (HP)	PhotoSmart B8550	CB316E No 364bk
Hewlett Packard (HP)	Photosmart C5383	CB316E No 364bk
Hewlett Packard (HP)	Photosmart C5380	CB316E No 364bk
Hewlett Packard (HP)	Photosmart C6380	CB316E No 364bk
Hewlett Packard (HP)	PhotoSmart B8553	CB316E No 364bk
Hewlett Packard (HP)	PhotoSmart D7560	CB316E No 364bk
Hewlett Packard (HP)	PhotoSmart C6300	CB316E No 364bk
Hewlett Packard (HP)	PhotoSmart Q8433B	CB316E No 364bk
Hewlett Packard (HP)	PhotoSmart 6510 AIO	CB316E No 364bk
Hewlett Packard (HP)	Photosmart 6520	CB316E No 364bk
Hewlett Packard (HP)	Photosmart 7510	CB316E No 364bk
Hewlett Packard (HP)	Photosmart 7520	CB316E No 364bk
Hewlett Packard (HP)	Photosmart 7525	CB316E No 364bk
Canon	Pixma IP3600	PGI-520bk
Canon	Pixma MP630	PGI-520bk
Canon	Pixma MP540	PGI-520bk
Canon	Pixma MX860	PGI-520bk
Canon	Pixma MP980	PGI-520bk
Canon	Pixma MP620	PGI-520bk
Canon	Pixma MP550	PGI-520bk
Canon	Pixma MP560	PGI-520bk
Canon	Pixma MP640	PGI-520bk
Canon	Pixma IP4700	PGI-520bk
Canon	Pixma MP240	PG-512
Canon	PIXMA MP280	PG-512



Canon	Pixma MP230	PG-512
Hewlett Packard (HP)	OfficeJet J4580 All in one	CC653AE No 901
Hewlett Packard (HP)	Officejet 4500 All in one	CC653AE No 901
Hewlett Packard (HP)	Photosmart 8250	C8721E No 363bk
Hewlett Packard (HP)	Photosmart C6180	C8721E No 363bk
Hewlett Packard (HP)	Photosmart D7160	C8721E No 363bk
Hewlett Packard (HP)	Photosmart D6160	C8721E No 363bk
Hewlett Packard (HP)	C5100	C8721E No 363bk
Hewlett Packard (HP)	Photosmart C6250	C8721E No 363bk
Hewlett Packard (HP)	Photosmart C6150	C8721E No 363bk
Canon	Pixma MX310	PG-37
Canon	Pixma MP140	PG-37
Canon	Pixma IP1900	PG-37
Canon	Pixma IP2600	PG-37
Canon	Pixma MP190	PG-37
Canon	Pixma MX300	PG-37
Hewlett Packard (HP)	F4280 All in one	CC641EE No 300xl
Hewlett Packard (HP)	DeskJet 3910	C9351CE No 21XL
Hewlett Packard (HP)	DeskJet D1330	C9351CE No 21XL
Hewlett Packard (HP)	DeskJet D1368	C9351CE No 21XL
Hewlett Packard (HP)	DeskJet F310	C9351CE No 21XL
Hewlett Packard (HP)	DeskJet F380	C9351CE No 21XL
Hewlett Packard (HP)	DeskJet F385	C9351CE No 21XL
Hewlett Packard (HP)	DeskJet F388	C9351CE No 21XL
Hewlett Packard (HP)	OfficeJet 4355	C9351CE No 21XL
Hewlett Packard (HP)	DeskJet F2180	C9351CE No 21XL
Hewlett Packard (HP)	DeskJet D1560	C9351CE No 21XL
Hewlett Packard (HP)	DeskJet F2280	C9351CE No 21XL
Hewlett Packard (HP)	DeskJet D1520	C9351CE No 21XL
Hewlett Packard (HP)	OfficeJet Pro 8500 AIO	C4902AE No 940 Black
Lexmark	S305	14N0820E No 100bk
Lexmark	S505	14N0820E No 100bk
Lexmark	Pro 205	14N0820E No 100bk
Lexmark	Pro 705	14N0820E No 100bk
Lexmark	Pro 805	14N0820E No 100bk
Lexmark	Pro 905	14N0820E No 100bk
Lexmark	Interact S605	14N0820E No 100bk
Lexmark	S301	14N0820E No 100bk
Lexmark	S400	14N0820E No 100bk
Lexmark	S815	14N0820E No 100bk
Lexmark	S305	14N0902E No 100yw
Canon	Pixma MP240	PG-510
Canon	Pixma MX320	PG-510
Canon	Pixma MP250	PG-510
Canon	Pixma MP270	PG-510
Canon	Pixma MP480	PG-510
Canon	Pixma iP2700	PG-510
Canon	PIXMA MP490	PG-510
Canon	PIXMA MP495	PG-510
Canon	PIXMA MX340	PG-510

Canon	Pixma IP2702	PG-510
Canon	Pixma MX410	PG-510
Canon	PIXMA MP280	PG-510
Canon	Pixma MP230	PG-510
Canon	Pixma iP4850	PGI-525bk
Canon	Pixma MG5150	PGI-525bk
Canon	Pixma MG5250	PGI-525bk
Canon	Pixma MG6150	PGI-525bk
Canon	Pixma MG5350	PGI-525bk
Canon	Pixma iP4950	PGI-525bk
Canon	PIXMA iX6550	PGI-525bk
Hewlett Packard (HP)	PhotoSmart C5300 All in one	CN684EE No 364XLbk
Hewlett Packard (HP)	Photosmart C6380	CN684EE No 364XLbk
Hewlett Packard (HP)	PhotoSmart B8553	CN684EE No 364XLbk
Hewlett Packard (HP)	PhotoSmart D7560	CN684EE No 364XLbk
Hewlett Packard (HP)	PhotoSmart C6300	CN684EE No 364XLbk
Hewlett Packard (HP)	PhotoSmart Q8433B	CN684EE No 364XLbk
Hewlett Packard (HP)	PhotoSmart 6510 AIO	CN684EE No 364XLbk
Hewlett Packard (HP)	Photosmart 6520	CN684EE No 364XLbk
Hewlett Packard (HP)	Photosmart 7510	CN684EE No 364XLbk
Hewlett Packard (HP)	Photosmart 7520	CN684EE No 364XLbk
Hewlett Packard (HP)	Photosmart 7525	CN684EE No 364XLbk
Hewlett Packard (HP)	DeskJet 1000	CH561EE No 301
Hewlett Packard (HP)	Deskjet 1510	CH561EE No 301
Hewlett Packard (HP)	DeskJet 1000	CH563EE No 301xl
Hewlett Packard (HP)	Deskjet 1510	CH563EE No 301xl
Canon	Pixma MG3150	PG-540XL
Canon	Pixma MX375	PG-540XL
Canon	Pixma MX435	PG-540XL
Canon	Pixma MX515	PG-540XL
Canon	Pixma MG4150	PG-540XL
Canon	Pixma MG4250	PG-540XL
Canon	Pixma MG3250	PG-540XL
Hewlett Packard (HP)	OfficeJet 6000	CD971AE No 920
Hewlett Packard (HP)	OfficeJet 7000	CD971AE No 920
Hewlett Packard (HP)	OfficeJet Pro 7000 Wide	CD971AE No 920
Hewlett Packard (HP)	Officejet 7500A Wide	CD971AE No 920
Canon	Pixma MG6350	PGI-550pbk
Hewlett Packard (HP)	Deskjet 2515	CZ101AE No 650bk
Canon	Pixma MG6350	PGI-550pbk XL
Hewlett Packard (HP)	Officejet Pro 276dw	CN045AE No 950XL
Hewlett Packard (HP)	Officejet Pro 8600	CN045AE No 950XL
Hewlett Packard (HP)	Officejet Pro 8100	CN045AE No 950XL
Hewlett Packard (HP)	Officejet Pro 251dw	CN045AE No 950XL
Hewlett Packard (HP)	Officejet Pro 8610	CN045AE No 950XL
Hewlett Packard (HP)	Officejet Pro 276dw	CN048AE No 951XL
Hewlett Packard (HP)	Officejet Pro 251dw	CN048AE No 951XL
Hewlett Packard (HP)	Officejet Pro 8610	CN048AE No 951XL
Canon	Pixma MG2450	PG-545
Canon	Pixma MG2550	PG-545

Canon	PIXMA MX495	PG-545
Canon	Pixma MG2450	PG-545XL
Hewlett Packard (HP)	DeskJet 2130 AIO	F6U66AE No 302bk
Canon	PIXMA MG7550	PGI-550pbk XL
Canon	PIXMA MG7550	PGI-550pbk
Hewlett Packard (HP)	Deskjet F4580	CC641EE No 300xl
Hewlett Packard (HP)	Deskjet F4580	CC640EE No 300
Canon	Pixma MG2250	PG-540
Canon	Pixma MG2250	PG-540XL
Hewlett Packard (HP)	Officejet 5615	C8727A No 27
Hewlett Packard (HP)	Officejet 5615	C6656A No 56
Hewlett Packard (HP)	Deskjet 1010	CH561EE No 301
Hewlett Packard (HP)	Deskjet 1010	CH563EE No 301xl
Canon	Pixma MG5500	PGI-550pbk XL
Canon	Pixma MG5500	PGI-550pbk
Hewlett Packard (HP)	Photosmart 5510	CB316E No 364bk
Hewlett Packard (HP)	Photosmart 5510	CN684EE No 364XLbk
Hewlett Packard (HP)	Officejet Pro 8620	CN045AE No 950XL
Hewlett Packard (HP)	Officejet Pro 8620	CN048AE No 951XL
Canon	Pixma MG3650	PG-540
Canon	Pixma MG3650	PG-540XL
Hewlett Packard (HP)	DeskJet 3630 AIO	F6U66AE No 302bk
Hewlett Packard (HP)	Officejet 3830 All in one	F6U66AE No 302bk
Hewlett Packard (HP)	Officejet 4650 All in one	F6U66AE No 302bk
Hewlett Packard (HP)	ENVY 4520 AIO	F6U66AE No 302bk
Hewlett Packard (HP)	Deskjet 3070A AIO	CB316E No 364bk
Hewlett Packard (HP)	PhotoSmart Wireless B110 e-AIO	CB316E No 364bk
Hewlett Packard (HP)	PhotoSmart Wireless B110 e-AIO	CN684EE No 364XLbk
Hewlett Packard (HP)	ENVY 4500 AIO	CH561EE No 301
Hewlett Packard (HP)	ENVY 4500 AIO	CH563EE No 301xl
Canon	Pixma MG2950	PG-545XL
Canon	Pixma MG2950	PG-545
Hewlett Packard (HP)	Officejet 4656 All in one	F6U66AE No 302bk
Hewlett Packard (HP)	Photosmart Premium C310 All-in-one	CB316E No 364bk
Hewlett Packard (HP)	Photosmart Premium C310 All-in-one	CN684EE No 364XLbk
Canon	Pixma MX455	PG-540
Canon	Pixma MX455	PG-540XL
Hewlett Packard (HP)	PhotoSmart 5610	C8727A No 27
Hewlett Packard (HP)	PhotoSmart 5610v	C8727A No 27
Hewlett Packard (HP)	PhotoSmart 5610xi	C8727A No 27
Hewlett Packard (HP)	PhotoSmart 5610	C6656A No 56
Hewlett Packard (HP)	PhotoSmart 5610v	C6656A No 56
Hewlett Packard (HP)	PhotoSmart 5610xi	C6656A No 56
Brother	MFC 295CN	LC980BK
Hewlett Packard (HP)	DeskJet Ink Advantage 2645	CZ101AE No 650bk
Hewlett Packard (HP)	Photosmart Premium C309g All-in-one	CB316E No 364bk
Hewlett Packard (HP)	Photosmart Premium C309g All-in-one	CN684EE No 364XLbk
Canon	Pixma MG3050	PG-545XL
Canon	Pixma MG3050	PG-545
Canon	Pixma MG7150	PGI-550pbk XL

Canon	Pixma MG7150	PGI-550pbk
Hewlett Packard (HP)	Photosmart C4100 Series	C9364E No 337
Hewlett Packard (HP)	Deskjet Ink Advantage 5525 e-AIO	CZ109AE No 655bk
Canon	Pixma IP2850	PG-545XL
Hewlett Packard (HP)	Deskjet 3055A	CH561EE No 301
Hewlett Packard (HP)	Deskjet 3055A	CH563EE No 301xl
Canon	Pixma IP2850	PG-545
Hewlett Packard (HP)	DeskJet 5900 Series	C8767E No 339
Hewlett Packard (HP)	DeskJet 5900 Series	C9364E No 337
Hewlett Packard (HP)	Officejet 4620	CB316E No 364bk
Hewlett Packard (HP)	Officejet 4620	CN684EE No 364XLbk
Canon	Pixma MX353	PG-540
Canon	Pixma MX353	PG-540XL
Hewlett Packard (HP)	DeskJet 3639 AIO	F6U66AE No 302bk
Hewlett Packard (HP)	DeskJet 1110	F6U66AE No 302bk
Canon	Pixma MG3600	PG-540
Canon	Pixma MG3600	PG-540XL
Brother	MFC 5890CN	LC1100BK
Canon	Pixma MG2140	PG-540
Canon	Pixma MG3140	PG-540
Canon	Pixma MG2140	PG-540XL
Canon	Pixma MG3140	PG-540XL
Hewlett Packard (HP)	Deskjet 3051a	CH561EE No 301
Hewlett Packard (HP)	Deskjet 3051a	CH563EE No 301xl
Canon	Pixma MX885 AiO	PGI-525bk
Canon	Pixma MX715 AiO	PGI-525bk
Hewlett Packard (HP)	Photosmart 5515	CB316E No 364bk
Hewlett Packard (HP)	Officejet Pro 8630	CN045AE No 950XL
Hewlett Packard (HP)	Officejet Pro 8630	CN048AE No 951XL
Hewlett Packard (HP)	Photosmart Plus B210	CB316E No 364bk
Hewlett Packard (HP)	Photosmart Plus B210	CN684EE No 364XLbk
Canon	Pixma MX535	PG-540
Canon	Pixma TS5150 AiO	PG-540
Canon	Pixma TS5151 AiO	PG-540
Canon	Pixma MX535	PG-540XL
Canon	Pixma TS5150 AiO	PG-540XL
Canon	Pixma TS5151 AiO	PG-540XL
Canon	PIXMA MX350	PG-512
Canon	Pixma MX420	PG-512
Canon	PIXMA MX360	PG-512
Canon	Pixma MP272	PG-512
Canon	PIXMA MX350	PG-510
Canon	Pixma MX420	PG-510
Canon	PIXMA MX360	PG-510
Canon	Pixma MP272	PG-510
Canon	Pixma MG3550	PG-540
Canon	Pixma MG3550	PG-540XL
Canon	Pixma iP8750	PGI-550pbk XL
Canon	Pixma iX6850	PGI-550pbk XL
Canon	Pixma iP8750	PGI-550pbk

Canon	Pixma iX6850	PGI-550pbk
Brother	MFC J6710DW	LC1280XLBK
Brother	MFC J6910DW	LC1280XLBK
Brother	MFC J5910DW	LC1280XLBK
Brother	MFC J6510DW	LC1240BK
Brother	MFC J6710DW	LC1240BK
Brother	MFC J6510DW	LC1280XLBK
Brother	MFC J6910DW	LC1240BK
Brother	MFC J5910DW	LC1240BK
Canon	Pixma TS3151 AiO	PG-545XL
Canon	Pixma TS3150 AiO	PG-545XL
Canon	Pixma TR4551 AiO	PG-545XL
Canon	Pixma TR4550 AiO	PG-545XL
Canon	Pixma TS205	PG-545XL
Canon	Pixma TS305	PG-545XL
Canon	Pixma TS3151 AiO	PG-545
Canon	Pixma TS3150 AiO	PG-545
Canon	Pixma TR4551 AiO	PG-545
Canon	Pixma TR4550 AiO	PG-545
Canon	Pixma TS205	PG-545
Canon	Pixma TS305	PG-545
Hewlett Packard (HP)	DeskJet F2420 AiO	CC641EE No 300xl
Hewlett Packard (HP)	Deskjet F2480 AiO	CC641EE No 300xl
Hewlett Packard (HP)	DeskJet F2400 AiO series	CC641EE No 300xl
Hewlett Packard (HP)	DeskJet F2410 AiO	CC641EE No 300xl
Hewlett Packard (HP)	DeskJet F2418 AiO	CC641EE No 300xl
Hewlett Packard (HP)	DeskJet F2423 AiO	CC641EE No 300xl
Hewlett Packard (HP)	DeskJet F2420 AiO	CC640EE No 300
Hewlett Packard (HP)	Deskjet F2480 AiO	CC640EE No 300
Hewlett Packard (HP)	DeskJet F2400 AiO series	CC640EE No 300
Hewlett Packard (HP)	DeskJet F2410 AiO	CC640EE No 300
Hewlett Packard (HP)	DeskJet F2418 AiO	CC640EE No 300
Hewlett Packard (HP)	DeskJet F2423 AiO	CC640EE No 300
Hewlett Packard (HP)	DeskJet F2430 AiO	CC640EE No 300
Hewlett Packard (HP)	DeskJet F2440 AiO	CC640EE No 300
Hewlett Packard (HP)	DeskJet F2476 AiO	CC640EE No 300
Hewlett Packard (HP)	DeskJet F2483 AiO	CC640EE No 300
Hewlett Packard (HP)	DeskJet F2488 AiO	CC640EE No 300
Hewlett Packard (HP)	DeskJet F2492 AiO	CC640EE No 300
Hewlett Packard (HP)	DeskJet F2493 AiO	CC640EE No 300
Hewlett Packard (HP)	DeskJet F2430 AiO	CC641EE No 300xl
Hewlett Packard (HP)	DeskJet F2440 AiO	CC641EE No 300xl
Hewlett Packard (HP)	DeskJet F2476 AiO	CC641EE No 300xl
Hewlett Packard (HP)	DeskJet F2483 AiO	CC641EE No 300xl
Hewlett Packard (HP)	DeskJet F2488 AiO	CC641EE No 300xl
Hewlett Packard (HP)	DeskJet F2492 AiO	CC641EE No 300xl
Hewlett Packard (HP)	DeskJet F2493 AiO	CC641EE No 300xl
Hewlett Packard (HP)	ColorCopier 210LX	51645A No 45
Hewlett Packard (HP)	DeskJet 2630 AIO	N9K06AE No 304bk
Hewlett Packard (HP)	DeskJet 3720 AiO	N9K06AE No 304bk

Hewlett Packard (HP)	DeskJet 3730	N9K06AE No 304bk
Hewlett Packard (HP)	DeskJet 3733	N9K06AE No 304bk
Hewlett Packard (HP)	DeskJet 2630 AIO	N9K08AE No 304XL bk
Hewlett Packard (HP)	DeskJet 3720 AiO	N9K08AE No 304XL bk
Hewlett Packard (HP)	DeskJet 3730	N9K08AE No 304XL bk
Hewlett Packard (HP)	DeskJet 3733	N9K08AE No 304XL bk
Hewlett Packard (HP)	DeskJet 2620 AIO	N9K06AE No 304bk
Hewlett Packard (HP)	DeskJet 3735	N9K06AE No 304bk
Hewlett Packard (HP)	DeskJet 3750	N9K06AE No 304bk
Hewlett Packard (HP)	DeskJet 3760	N9K06AE No 304bk
Hewlett Packard (HP)	DeskJet 3762	N9K06AE No 304bk
Hewlett Packard (HP)	DeskJet 3764	N9K06AE No 304bk
Hewlett Packard (HP)	DeskJet 2622	N9K06AE No 304bk
Hewlett Packard (HP)	DeskJet 2632	N9K06AE No 304bk
Hewlett Packard (HP)	DeskJet 2633	N9K06AE No 304bk
Hewlett Packard (HP)	DeskJet 2634	N9K06AE No 304bk
Hewlett Packard (HP)	ENVY 5010 AiO	N9K06AE No 304bk
Hewlett Packard (HP)	ENVY 5012 AiO	N9K06AE No 304bk
Hewlett Packard (HP)	ENVY 5020 AiO	N9K06AE No 304bk
Hewlett Packard (HP)	ENVY 5030 AiO	N9K06AE No 304bk
Hewlett Packard (HP)	ENVY 5032 AiO	N9K06AE No 304bk
Hewlett Packard (HP)	ENVY 5055 AiO	N9K06AE No 304bk
Hewlett Packard (HP)	HP AMP 130	N9K06AE No 304bk
Hewlett Packard (HP)	DeskJet 2620 AIO	N9K08AE No 304XL bk
Hewlett Packard (HP)	DeskJet 3735	N9K08AE No 304XL bk
Hewlett Packard (HP)	DeskJet 3750	N9K08AE No 304XL bk
Hewlett Packard (HP)	DeskJet 3760	N9K08AE No 304XL bk
Hewlett Packard (HP)	DeskJet 3762	N9K08AE No 304XL bk
Hewlett Packard (HP)	DeskJet 3764	N9K08AE No 304XL bk
Hewlett Packard (HP)	DeskJet 2622	N9K08AE No 304XL bk
Hewlett Packard (HP)	DeskJet 2632	N9K08AE No 304XL bk
Hewlett Packard (HP)	DeskJet 2633	N9K08AE No 304XL bk
Hewlett Packard (HP)	DeskJet 2634	N9K08AE No 304XL bk
Hewlett Packard (HP)	ENVY 5010 AiO	N9K08AE No 304XL bk
Hewlett Packard (HP)	ENVY 5012 AiO	N9K08AE No 304XL bk
Hewlett Packard (HP)	ENVY 5020 AiO	N9K08AE No 304XL bk
Hewlett Packard (HP)	ENVY 5030 AiO	N9K08AE No 304XL bk
Hewlett Packard (HP)	ENVY 5032 AiO	N9K08AE No 304XL bk
Hewlett Packard (HP)	ENVY 5055 AiO	N9K08AE No 304XL bk
Hewlett Packard (HP)	HP AMP 130	N9K08AE No 304XL bk
Hewlett Packard (HP)	DeskJet 3520 e-All-in-One	CB316E No 364bk
Hewlett Packard (HP)	DeskJet 1112	F6U66AE No 302bk
Hewlett Packard (HP)	DeskJet 2131 AIO	F6U66AE No 302bk
Hewlett Packard (HP)	DeskJet 2132 AIO	F6U66AE No 302bk
Hewlett Packard (HP)	DeskJet 2134 AIO	F6U66AE No 302bk
Hewlett Packard (HP)	DeskJet 2136 AIO	F6U66AE No 302bk
Hewlett Packard (HP)	ENVY 4511 AIO	F6U66AE No 302bk
Hewlett Packard (HP)	ENVY 4512 AIO	F6U66AE No 302bk
Hewlett Packard (HP)	ENVY 4513 AIO	F6U66AE No 302bk
Hewlett Packard (HP)	ENVY 4516 AIO	F6U66AE No 302bk

Hewlett Packard (HP)	ENVY 4521 AIO	F6U66AE No 302bk
Hewlett Packard (HP)	ENVY 4522 AIO	F6U66AE No 302bk
Hewlett Packard (HP)	ENVY 4523 AIO	F6U66AE No 302bk
Hewlett Packard (HP)	ENVY 4524 AIO	F6U66AE No 302bk
Hewlett Packard (HP)	ENVY 4525 AIO	F6U66AE No 302bk
Hewlett Packard (HP)	ENVY 4526 AIO	F6U66AE No 302bk
Hewlett Packard (HP)	ENVY 4527 AIO	F6U66AE No 302bk
Hewlett Packard (HP)	ENVY 4528 AIO	F6U66AE No 302bk
Hewlett Packard (HP)	Officejet 3831 AiO	F6U66AE No 302bk
Hewlett Packard (HP)	Officejet 3832 AiO	F6U66AE No 302bk
Hewlett Packard (HP)	Officejet 3833 AiO	F6U66AE No 302bk
Hewlett Packard (HP)	Officejet 3834 AiO	F6U66AE No 302bk
Hewlett Packard (HP)	Officejet 4652 AiO	F6U66AE No 302bk
Hewlett Packard (HP)	Officejet 4654 AiO	F6U66AE No 302bk
Hewlett Packard (HP)	Officejet 4655 AiO	F6U66AE No 302bk
Hewlett Packard (HP)	Officejet 4656 AiO	F6U66AE No 302bk
Hewlett Packard (HP)	Officejet 4657 AiO	F6U66AE No 302bk
Hewlett Packard (HP)	Officejet 5220 AiO	F6U66AE No 302bk
Hewlett Packard (HP)	Officejet 5230 AiO	F6U66AE No 302bk
Hewlett Packard (HP)	Officejet 5258 AiO	F6U66AE No 302bk
Hewlett Packard (HP)	DeskJet 2600 AIO	N9K06AE No 304bk
Hewlett Packard (HP)	DeskJet 2600 AIO	N9K08AE No 304XL bk
Hewlett Packard (HP)	PhotoSmart B010a	CB316E No 364bk
Hewlett Packard (HP)	PhotoSmart B010a	CN684EE No 364XLbk
Hewlett Packard (HP)	DeskJet 3637	F6U66AE No 302bk
Hewlett Packard (HP)	DeskJet 3636	F6U66AE No 302bk
Hewlett Packard (HP)	Deskjet 3070A AIO	CN684EE No 364XLbk
Hewlett Packard (HP)	Officejet 100 Mobile Printer L411	C8765E No 338
Hewlett Packard (HP)	Officejet 100 Mobile Printer L411	C9364E No 337
Hewlett Packard (HP)	Photosmart B109	CB316E No 364bk
Hewlett Packard (HP)	Photosmart B109	CN684EE No 364XLbk
Hewlett Packard (HP)	Deskjet 2544	CH561EE No 301
Hewlett Packard (HP)	Deskjet 2540	CH561EE No 301
Hewlett Packard (HP)	Deskjet 2544	CH563EE No 301xl
Hewlett Packard (HP)	Deskjet 2540	CH563EE No 301xl
Hewlett Packard (HP)	Deskjet Ink Advantage 4615	CZ109AE No 655bk
Hewlett Packard (HP)	Deskjet Ink Advantage 4625	CZ109AE No 655bk
Hewlett Packard (HP)	Deskjet Ink Advantage 6525	CZ109AE No 655bk
Hewlett Packard (HP)	Deskjet Ink Advantage 3525	CZ109AE No 655bk
Hewlett Packard (HP)	DeskJet Ink Advantage 3835 AiO	F6V25AE No 652b
Hewlett Packard (HP)	DeskJet Ink Advantage 1115	F6V25AE No 652b
Hewlett Packard (HP)	DeskJet Ink Advantage 2135	F6V25AE No 652b
Hewlett Packard (HP)	DeskJet Ink Advantage 4675	F6V25AE No 652b
Hewlett Packard (HP)	DeskJet Ink Advantage 3635	F6V25AE No 652b
Hewlett Packard (HP)	DeskJet Ink Advantage 5075 AiO	F6V25AE No 652b
Hewlett Packard (HP)	DeskJet Ink Advantage 5275 AiO	F6V25AE No 652b
Hewlett Packard (HP)	DeskJet Ink Advantage 3787 AiO	F6V25AE No 652b
Hewlett Packard (HP)	DeskJet Ink Advantage 3790 AiO	F6V25AE No 652b
Hewlett Packard (HP)	DeskJet Ink Advantage 3785 AiO	F6V25AE No 652b
Hewlett Packard (HP)	DeskJet Ink Advantage 3789 AiO	F6V25AE No 652b

Hewlett Packard (HP)	DeskJet Ink Advantage 3830 AiO	F6V25AE No 652b
Hewlett Packard (HP)	DeskJet Ink Advantage 3836 AiO	F6V25AE No 652b
Hewlett Packard (HP)	DeskJet Ink Advantage 3838 AiO	F6V25AE No 652b
Hewlett Packard (HP)	Deskjet Ink Advantage 4535 AiO	F6V25AE No 652b
Hewlett Packard (HP)	Deskjet Ink Advantage 4536 AiO	F6V25AE No 652b
Hewlett Packard (HP)	Deskjet Ink Advantage 4538 AiO	F6V25AE No 652b
Hewlett Packard (HP)	OfficeJet K7103	C8765E No 338
Hewlett Packard (HP)	OfficeJet K7103	C8767E No 339
Hewlett Packard (HP)	OfficeJet K7103	C9364E No 337
Canon	Pixma TS3350 AiO	PG-545XL
Canon	Pixma TS3350 AiO	PG-545
Canon	Pixma TS3355 AiO	PG-545
Canon	Pixma TS3355 AiO	PG-545XL
Hewlett Packard (HP)	Photosmart 5524	CB316E No 364bk
Hewlett Packard (HP)	Photosmart 5524	CN684EE No 364XLbk
Hewlett Packard (HP)	DeskJet F2187 AiO	C9351A No 21
Hewlett Packard (HP)	DeskJet F2187 AiO	C9351CE No 21XL
Canon	Pixma MX475	PG-540
Canon	Pixma MX525	PG-540
Canon	Pixma MX395	PG-540
Canon	Pixma MX475	PG-540XL
Canon	Pixma MX525	PG-540XL
Canon	Pixma MX395	PG-540XL
Canon	Pixma TS3352 AiO	PG-545
Canon	Pixma TS3352 AiO	PG-545XL
Brother	MFC 5895CW	LC1100BK
Hewlett Packard (HP)	DeskJet D1600 Printer series	CC640EE No 300
Hewlett Packard (HP)	DeskJet D1600 Printer series	CC641EE No 300xl
Canon	Pixma MG3053	PG-545
Canon	Pixma MG3053	PG-545XL
Hewlett Packard (HP)	DeskJet Ink Advantage 3700 series	F6V25AE No 652b
Hewlett Packard (HP)	DeskJet Ink Advantage 3775	F6V25AE No 652b
Hewlett Packard (HP)	DeskJet F4272 All in one	CC640EE No 300
Hewlett Packard (HP)	DeskJet F4273 All in one	CC640EE No 300
Hewlett Packard (HP)	DeskJet F4274 All in one	CC640EE No 300
Hewlett Packard (HP)	DeskJet F4280 All in one	CC640EE No 300
Hewlett Packard (HP)	DeskJet F4293 All in one	CC640EE No 300
Hewlett Packard (HP)	DeskJet F4272 All in one	CC641EE No 300xl
Hewlett Packard (HP)	DeskJet F4273 All in one	CC641EE No 300xl
Hewlett Packard (HP)	DeskJet F4274 All in one	CC641EE No 300xl
Hewlett Packard (HP)	DeskJet F4280 All in one	CC641EE No 300xl
Hewlett Packard (HP)	DeskJet F4293 All in one	CC641EE No 300xl
Canon	Pixma TS3451 AiO	PG-545
Canon	Pixma TS3351 AiO	PG-545
Canon	Pixma TS3452 AiO	PG-545
Canon	Pixma TS3451 AiO	PG-545XL
Canon	Pixma TS3351 AiO	PG-545XL
Canon	Pixma TS3452 AiO	PG-545XL
Hewlett Packard (HP)	Photosmart 5520	CB316E No 364bk
Hewlett Packard (HP)	Photosmart 5520	CN684EE No 364XLbk



Hewlett Packard (HP)	Photosmart Plus B209	CB316E No 364bk
Hewlett Packard (HP)	Photosmart Plus B209	CN684EE No 364XLbk
Hewlett Packard (HP)	DeskJet 2710 AiO	3YM61AE No 305 Bk
Hewlett Packard (HP)	DeskJet 2720 series	3YM61AE No 305 Bk
Hewlett Packard (HP)	DeskJet Plus 4110	3YM61AE No 305 Bk
Hewlett Packard (HP)	DeskJet Plus 4130	3YM61AE No 305 Bk
Hewlett Packard (HP)	ENVY 6000 AiO series	3YM61AE No 305 Bk
Hewlett Packard (HP)	DeskJet 2320 AiO	3YM61AE No 305 Bk
Hewlett Packard (HP)	ENVY 6020 AiO	3YM61AE No 305 Bk
Hewlett Packard (HP)	ENVY 6022 AiO	3YM61AE No 305 Bk
Hewlett Packard (HP)	ENVY 6030 AiO	3YM61AE No 305 Bk
Hewlett Packard (HP)	ENVY 6032 AiO	3YM61AE No 305 Bk
Hewlett Packard (HP)	ENVY 6052 AiO	3YM61AE No 305 Bk
Hewlett Packard (HP)	DeskJet 2710 AiO	3YM62AE No 305XL Bk
Hewlett Packard (HP)	DeskJet 2720 series	3YM62AE No 305XL Bk
Hewlett Packard (HP)	DeskJet Plus 4110	3YM62AE No 305XL Bk
Hewlett Packard (HP)	DeskJet Plus 4130	3YM62AE No 305XL Bk
Hewlett Packard (HP)	DeskJet Plus 4120 AiO series	3YM62AE No 305XL Bk
Hewlett Packard (HP)	ENVY 6000 AiO series	3YM62AE No 305XL Bk
Hewlett Packard (HP)	DeskJet 2320 AiO	3YM62AE No 305XL Bk
Hewlett Packard (HP)	ENVY 6020 AiO	3YM62AE No 305XL Bk
Hewlett Packard (HP)	ENVY 6022 AiO	3YM62AE No 305XL Bk
Hewlett Packard (HP)	ENVY 6030 AiO	3YM62AE No 305XL Bk
Hewlett Packard (HP)	ENVY 6032 AiO	3YM62AE No 305XL Bk
Hewlett Packard (HP)	ENVY 6052 AiO	3YM62AE No 305XL Bk
Hewlett Packard (HP)	DeskJet Plus 4120 AiO series	3YM61AE No 305 Bk
Hewlett Packard (HP)	Deskjet 2543	CH561EE No 301
Hewlett Packard (HP)	Deskjet 2543	CH563EE No 301xl
Hewlett Packard (HP)	OfficeJet J4585 All in one	CC653AE No 901
Hewlett Packard (HP)	DeskJet D4200	CB335EE No 350
Hewlett Packard (HP)	DeskJet D4200	CB336EE No 350xl
Hewlett Packard (HP)	DeskJet 2721e AiO	3YM61AE No 305 Bk
Hewlett Packard (HP)	DeskJet 2721e AiO	3YM62AE No 305XL Bk
Hewlett Packard (HP)	ENVY Pro 6420e AiO	3YM62AE No 305XL Bk
Hewlett Packard (HP)	ENVY Pro 6420e AiO	3YM61AE No 305 Bk
Canon	Pixma MG6250	PGI-525bk
Hewlett Packard (HP)	ENVY 120 AIO	CC640EE No 300
Hewlett Packard (HP)	ENVY 110 AIO	CC640EE No 300
Hewlett Packard (HP)	ENVY 100 AIO	CC640EE No 300
Hewlett Packard (HP)	ENVY 120 AIO	CC641EE No 300xl
Hewlett Packard (HP)	ENVY 110 AIO	CC641EE No 300xl
Hewlett Packard (HP)	ENVY 100 AIO	CC641EE No 300xl
Canon	Pixma TS3450 AiO	PG-545
Canon	Pixma TR4650 AiO	PG-545
Canon	Pixma TR4651 AiO	PG-545
Canon	Pixma TS3450 AiO	PG-545XL
Canon	Pixma TR4650 AiO	PG-545XL
Canon	Pixma TR4651 AiO	PG-545XL
Hewlett Packard (HP)	DeskJet D2560	CC641EE No 300xl
Hewlett Packard (HP)	DeskJet Plus 4122e AiO	3YM62AE No 305XL Bk

Hewlett Packard (HP)	DeskJet Plus 4100 AiO series	3YM62AE No 305XL Bk
Hewlett Packard (HP)	DeskJet Plus 4122e AiO	3YM61AE No 305 Bk
Hewlett Packard (HP)	DeskJet Plus 4100 AiO series	3YM61AE No 305 Bk
Hewlett Packard (HP)	DeskJet 2723e AiO	3YM62AE No 305XL Bk
Hewlett Packard (HP)	DeskJet 2723e AiO	3YM61AE No 305 Bk
Canon	Pixma MX925	PGI-550pbk XL
Canon	Pixma MX925	PGI-550pbk
Hewlett Packard (HP)	Deskjet 2549	CH561EE No 301
Hewlett Packard (HP)	Deskjet 2549	CH563EE No 301xl
Hewlett Packard (HP)	DeskJet Ink Advantage 2136	F6V25AE No 652b
Hewlett Packard (HP)	Deskjet Ink Advantage 3545	CZ101AE No 650bk
Hewlett Packard (HP)	Deskjet Ink Advantage 4645	CZ101AE No 650bk
Hewlett Packard (HP)	Deskjet Ink Advantage 4515	CZ101AE No 650bk
Hewlett Packard (HP)	DeskJet Ink Advantage 2515	CZ101AE No 650bk