

Brand	Model	Original Cartridge
Canon	B 160	BX-20
Canon	B 180C	BX-20
Canon	B 210C	BX-20
Canon	EB 10	BX-20
Canon	EB 15	BX-20
Canon	Fax B 160	BX-20
Canon	Fax EB 10	BX-20
Canon	Fax EB 15	BX-20
Canon	Fax JX 200	PG-40
Canon	Fax JX 200	PG-50
Canon	Fax JX 500	PG-40
Canon	Fax JX 500	PG-50
Canon	JX210P	PG-40
Canon	JX210P	PG-50
Canon	JX510P	PG-40
Canon	JX510P	PG-50
Canon	Multipass C20	BX-20
Canon	MultiPass C30	BX-20
Canon	MultiPass C50	BX-20
Canon	MultiPass C70	BX-20
Canon	Multipass C75	BX-20
Canon	MX 300	PG-40
Canon	MX 300	PG-50
Canon	Pixma G1400	GI-490BK
Canon	Pixma G1410	GI-490BK
Canon	Pixma G1411	GI-490BK
Canon	Pixma G1420 AIO	GI-41BK
Canon	Pixma G2400 AIO	GI-490BK
Canon	Pixma G2410 AIO	GI-490BK
Canon	Pixma G2411 AIO	GI-490BK
Canon	Pixma G2415	GI-490BK
Canon	Pixma G2420 AIO	GI-41BK
Canon	Pixma G2460 AIO	GI-41BK
Canon	Pixma G3400 AIO	GI-490BK
Canon	Pixma G3410 AIO	GI-490BK
Canon	Pixma G3411 AIO	GI-490BK
Canon	Pixma G3415	GI-490BK
Canon	Pixma G3420 AIO	GI-41BK
Canon	Pixma G3460 AIO	GI-41BK
Canon	Pixma G4400 AIO	GI-490BK
Canon	Pixma G4411 AIO	GI-490BK
Canon	Pixma G5040	GI-40BK
Canon	Pixma G6040	GI-40BK
Canon	Pixma G7040	GI-40BK
Canon	Pixma GM2040	GI-40BK
Canon	Pixma GM4040 AiO	GI-40BK
Canon	Pixma IP1200	PG-40
Canon	Pixma IP1300	PG-40
Canon	Pixma IP1600	PG-40

Canon	Pixma IP1700	PG-40
Canon	Pixma IP1800	PG-37
Canon	Pixma IP1800	PG-40
Canon	Pixma IP1900	PG-37
Canon	Pixma IP1900	PG-40
Canon	Pixma IP2200	PG-40
Canon	Pixma IP2200	PG-50
Canon	Pixma IP2400	PG-40
Canon	Pixma IP2400	PG-50
Canon	Pixma IP2500	PG-37
Canon	Pixma IP2500	PG-40
Canon	Pixma IP2600	PG-37
Canon	Pixma IP2600	PG-40
Canon	Pixma iP2700	PG-510
Canon	Pixma iP2700	PG-512
Canon	Pixma IP2702	PG-510
Canon	Pixma IP2702	PG-512
Canon	Pixma IP2850	PG-545
Canon	Pixma IP2850	PG-545XL
Canon	Pixma IP3300	PGI-5bk
Canon	Pixma IP3500	PGI-5bk
Canon	Pixma IP3600	PGI-520bk
Canon	Pixma IP4200	PGI-5bk
Canon	Pixma IP4300	PGI-5bk
Canon	Pixma IP4500	PGI-5bk
Canon	Pixma IP4600	PGI-520bk
Canon	Pixma IP4700	PGI-520bk
Canon	Pixma iP4850	PGI-525bk
Canon	Pixma iP4950	PGI-525bk
Canon	Pixma IP5100	PGI-5bk
Canon	Pixma IP5200	PGI-5bk
Canon	Pixma IP5200R	PGI-5bk
Canon	Pixma IP5300	PGI-5bk
Canon	Pixma iP7250	PGI-550pbk
Canon	Pixma iP7250	PGI-550pbk XL
Canon	Pixma iP8750	PGI-550pbk
Canon	Pixma iP8750	PGI-550pbk XL
Canon	Pixma iX4000	PGI-5bk
Canon	Pixma iX5000	PGI-5bk
Canon	PIXMA iX6550	PGI-525bk
Canon	Pixma iX6850	PGI-550pbk
Canon	Pixma iX6850	PGI-550pbk XL
Canon	Pixma MG2140	PG-540
Canon	Pixma MG2140	PG-540XL
Canon	Pixma MG2150	PG-540
Canon	Pixma MG2150	PG-540XL
Canon	Pixma MG2250	PG-540
Canon	Pixma MG2250	PG-540XL
Canon	Pixma MG2450	PG-545
Canon	Pixma MG2450	PG-545XL

Canon	Pixma MG2550	PG-545
Canon	Pixma MG2550	PG-545XL
Canon	Pixma MG2950	PG-545
Canon	Pixma MG2950	PG-545XL
Canon	Pixma MG3050	PG-545
Canon	Pixma MG3050	PG-545XL
Canon	Pixma MG3053	PG-545
Canon	Pixma MG3053	PG-545XL
Canon	Pixma MG3140	PG-540
Canon	Pixma MG3140	PG-540XL
Canon	Pixma MG3150	PG-540
Canon	Pixma MG3150	PG-540XL
Canon	Pixma MG3250	PG-540
Canon	Pixma MG3250	PG-540XL
Canon	Pixma MG3550	PG-540
Canon	Pixma MG3550	PG-540XL
Canon	Pixma MG3600	PG-540
Canon	Pixma MG3600	PG-540XL
Canon	Pixma MG3650	PG-540
Canon	Pixma MG3650	PG-540XL
Canon	Pixma MG4150	PG-540
Canon	Pixma MG4150	PG-540XL
Canon	Pixma MG4250	PG-540
Canon	Pixma MG4250	PG-540XL
Canon	Pixma MG5150	PGI-525bk
Canon	Pixma MG5250	PGI-525bk
Canon	Pixma MG5350	PGI-525bk
Canon	Pixma MG5450	PGI-550pbk
Canon	Pixma MG5500	PGI-550pbk
Canon	Pixma MG5500	PGI-550pbk XL
Canon	Pixma MG5550	PGI-550pbk XL
Canon	Pixma MG5650	PGI-550pbk
Canon	Pixma MG5650	PGI-550pbk XL
Canon	Pixma MG6150	PGI-525bk
Canon	Pixma MG6250	PGI-525bk
Canon	Pixma MG6350	PGI-550pbk
Canon	Pixma MG6350	PGI-550pbk XL
Canon	Pixma MG6450	PGI-550pbk XL
Canon	Pixma MG6650	PGI-550pbk
Canon	Pixma MG6650	PGI-550pbk XL
Canon	Pixma MG7150	PGI-550pbk
Canon	Pixma MG7150	PGI-550pbk XL
Canon	PIXMA MG7550	PGI-550pbk
Canon	PIXMA MG7550	PGI-550pbk XL
Canon	Pixma MG8150	PGI-525bk
Canon	Pixma MP140	PG-37
Canon	Pixma MP140	PG-40
Canon	Pixma MP140	PG-50
Canon	Pixma MP150	PG-40
Canon	Pixma MP150	PG-50

Canon	Pixma MP160	PG-40
Canon	Pixma MP160	PG-50
Canon	Pixma MP170	PG-40
Canon	Pixma MP170	PG-50
Canon	Pixma MP180	PG-40
Canon	Pixma MP180	PG-50
Canon	Pixma MP190	PG-37
Canon	Pixma MP190	PG-40
Canon	Pixma MP210	PG-37
Canon	Pixma MP210	PG-40
Canon	Pixma MP220	PG-37
Canon	Pixma MP220	PG-40
Canon	Pixma MP230	PG-510
Canon	Pixma MP230	PG-512
Canon	Pixma MP240	PG-510
Canon	Pixma MP240	PG-512
Canon	Pixma MP250	PG-510
Canon	Pixma MP250	PG-512
Canon	Pixma MP260	PG-510
Canon	Pixma MP260	PG-512
Canon	Pixma MP270	PG-510
Canon	Pixma MP270	PG-512
Canon	Pixma MP272	PG-510
Canon	Pixma MP272	PG-512
Canon	PIXMA MP280	PG-510
Canon	PIXMA MP280	PG-512
Canon	Pixma MP310	PG-40
Canon	Pixma MP450	PG-40
Canon	Pixma MP450	PG-50
Canon	Pixma MP460	PG-40
Canon	Pixma MP460	PG-50
Canon	Pixma MP480	PG-510
Canon	Pixma MP480	PG-512
Canon	PIXMA MP490	PG-510
Canon	PIXMA MP490	PG-512
Canon	PIXMA MP495	PG-510
Canon	PIXMA MP495	PG-512
Canon	Pixma MP500	PGI-5bk
Canon	Pixma MP510	PGI-5bk
Canon	Pixma MP520	PGI-5bk
Canon	Pixma MP530	PGI-5bk
Canon	Pixma MP540	PGI-520bk
Canon	Pixma MP550	PGI-520bk
Canon	Pixma MP560	PGI-520bk
Canon	Pixma MP600	PGI-5bk
Canon	Pixma MP600R	PGI-5bk
Canon	Pixma MP610	PGI-5bk
Canon	Pixma MP620	PGI-520bk
Canon	Pixma MP630	PGI-520bk
Canon	Pixma MP640	PGI-520bk

Canon	Pixma MP800	PGI-5bk
Canon	Pixma MP800R	PGI-5bk
Canon	Pixma MP810	PGI-5bk
Canon	Pixma MP830	PGI-5bk
Canon	Pixma MP970	PGI-5bk
Canon	Pixma MP980	PGI-520bk
Canon	Pixma MX300	PG-37
Canon	Pixma MX300	PG-40
Canon	Pixma MX300	PG-50
Canon	Pixma MX310	PG-37
Canon	Pixma MX310	PG-40
Canon	Pixma MX310	PG-50
Canon	Pixma MX320	PG-510
Canon	Pixma MX320	PG-512
Canon	Pixma MX330	PG-510
Canon	Pixma MX330	PG-512
Canon	PIXMA MX340	PG-510
Canon	PIXMA MX340	PG-512
Canon	PIXMA MX350	PG-510
Canon	PIXMA MX350	PG-512
Canon	Pixma MX353	PG-540
Canon	Pixma MX353	PG-540XL
Canon	PIXMA MX360	PG-510
Canon	PIXMA MX360	PG-512
Canon	Pixma MX375	PG-540
Canon	Pixma MX375	PG-540XL
Canon	Pixma MX395	PG-540
Canon	Pixma MX395	PG-540XL
Canon	Pixma MX410	PG-510
Canon	Pixma MX410	PG-512
Canon	Pixma MX420	PG-510
Canon	Pixma MX420	PG-512
Canon	Pixma MX435	PG-540
Canon	Pixma MX435	PG-540XL
Canon	Pixma MX455	PG-540
Canon	Pixma MX455	PG-540XL
Canon	Pixma MX475	PG-540
Canon	Pixma MX475	PG-540XL
Canon	PIXMA MX495	PG-545
Canon	PIXMA MX495	PG-545XL
Canon	Pixma MX515	PG-540
Canon	Pixma MX515	PG-540XL
Canon	Pixma MX525	PG-540
Canon	Pixma MX525	PG-540XL
Canon	Pixma MX535	PG-540
Canon	Pixma MX535	PG-540XL
Canon	Pixma MX700	PGI-5bk
Canon	Pixma MX715 AiO	PGI-525bk
Canon	Pixma MX850	PGI-5bk
Canon	Pixma MX860	PGI-520bk

Canon	Pixma MX885 AiO	PGI-525bk
Canon	Pixma MX925	PGI-550pbk
Canon	Pixma MX925	PGI-550pbk XL
Canon	Pixma TR4550 AiO	PG-545
Canon	Pixma TR4550 AiO	PG-545XL
Canon	Pixma TR4551 AiO	PG-545
Canon	Pixma TR4551 AiO	PG-545XL
Canon	Pixma TR4650 AiO	PG-545
Canon	Pixma TR4650 AiO	PG-545XL
Canon	Pixma TR4651 AiO	PG-545
Canon	Pixma TR4651 AiO	PG-545XL
Canon	Pixma TS205	PG-545
Canon	Pixma TS205	PG-545XL
Canon	Pixma TS305	PG-545
Canon	Pixma TS305	PG-545XL
Canon	Pixma TS3150 AiO	PG-545
Canon	Pixma TS3150 AiO	PG-545XL
Canon	Pixma TS3151 AiO	PG-545
Canon	Pixma TS3151 AiO	PG-545XL
Canon	Pixma TS3350 AiO	PG-545
Canon	Pixma TS3350 AiO	PG-545XL
Canon	Pixma TS3351 AiO	PG-545
Canon	Pixma TS3351 AiO	PG-545XL
Canon	Pixma TS3352 AiO	PG-545
Canon	Pixma TS3352 AiO	PG-545XL
Canon	Pixma TS3355 AiO	PG-545
Canon	Pixma TS3355 AiO	PG-545XL
Canon	Pixma TS3450 AiO	PG-545
Canon	Pixma TS3450 AiO	PG-545XL
Canon	Pixma TS3451 AiO	PG-545
Canon	Pixma TS3451 AiO	PG-545XL
Canon	Pixma TS3452 AiO	PG-545
Canon	Pixma TS3452 AiO	PG-545XL
Canon	Pixma TS5150 AiO	PG-540
Canon	Pixma TS5150 AiO	PG-540XL
Canon	Pixma TS5151 AiO	PG-540
Canon	Pixma TS5151 AiO	PG-540XL