

Brand	Model	Original Cartridge
Canon	MX 300	CL-41
Canon	MX 300	CL-51
Canon	Pixma G1400	GI-490Y
Canon	Pixma G1410	GI-490Y
Canon	Pixma G1411	GI-490Y
Canon	Pixma G1420 AIO	GI-41Y
Canon	Pixma G2400 AIO	GI-490Y
Canon	Pixma G2410 AIO	GI-490Y
Canon	Pixma G2411 AIO	GI-490Y
Canon	Pixma G2415	GI-490Y
Canon	Pixma G2420 AIO	GI-41Y
Canon	Pixma G2460 AIO	GI-41Y
Canon	Pixma G3400 AIO	GI-490Y
Canon	Pixma G3410 AIO	GI-490Y
Canon	Pixma G3411 AIO	GI-490Y
Canon	Pixma G3415	GI-490Y
Canon	Pixma G3420 AIO	GI-41Y
Canon	Pixma G3460 AIO	GI-41Y
Canon	Pixma G4400 AIO	GI-490Y
Canon	Pixma G4411 AIO	GI-490Y
Canon	Pixma G5040	GI-40Y
Canon	Pixma G6040	GI-40Y
Canon	Pixma G7040	GI-40Y
Canon	Pixma IP1200	CL-41
Canon	Pixma IP1300	CL-41
Canon	Pixma IP1600	CL-41
Canon	Pixma IP1700	CL-41
Canon	Pixma IP1800	CL-38
Canon	Pixma IP1800	CL-41
Canon	Pixma IP1900	CL-38
Canon	Pixma IP1900	CL-41
Canon	Pixma IP2200	CL-41
Canon	Pixma IP2200	CL-51
Canon	Pixma IP2400	CL-41
Canon	Pixma IP2400	CL-51
Canon	Pixma IP2500	CL-38
Canon	Pixma IP2500	CL-41
Canon	Pixma IP2600	CL-38
Canon	Pixma IP2600	CL-41
Canon	Pixma iP2700	CL-511
Canon	Pixma iP2700	CL-513
Canon	Pixma IP2702	CL-511
Canon	Pixma IP2702	CL-513
Canon	Pixma IP2850	CL-546
Canon	Pixma IP2850	CL-546XL
Canon	Pixma IP3300	CLI-8y
Canon	Pixma IP3500	CLI-8y
Canon	Pixma IP3600	CLI-521y
Canon	Pixma IP4200	CLI-8y

Canon	Pixma IP4300	CLI-8y
Canon	Pixma IP4500	CLI-8y
Canon	Pixma IP4600	CLI-521y
Canon	Pixma IP4700	CLI-521y
Canon	Pixma iP4850	CLI-526y
Canon	Pixma iP4950	CLI-526y
Canon	Pixma IP5100	CLI-8y
Canon	Pixma IP5200	CLI-8y
Canon	Pixma IP5200R	CLI-8y
Canon	Pixma IP5300	CLI-8y
Canon	Pixma IP6210D	CL-41
Canon	Pixma IP6210D	CL-51
Canon	Pixma IP6220D	CL-41
Canon	Pixma IP6220D	CL-51
Canon	Pixma IP6600D	CLI-8y
Canon	Pixma IP6700D	CLI-8y
Canon	Pixma iP7250	CLI-551y
Canon	Pixma iP7250	CLI-551y XL
Canon	Pixma iP8750	CLI-551y
Canon	Pixma iP8750	CLI-551y XL
Canon	Pixma iX4000	CLI-8y
Canon	Pixma iX5000	CLI-8y
Canon	PIXMA iX6550	CLI-526y
Canon	Pixma iX6850	CLI-551y
Canon	Pixma iX6850	CLI-551y XL
Canon	Pixma MG2140	CL-541
Canon	Pixma MG2140	CL-541XL
Canon	Pixma MG2150	CL-541
Canon	Pixma MG2150	CL-541XL
Canon	Pixma MG2250	CL-541
Canon	Pixma MG2250	CL-541XL
Canon	Pixma MG2450	CL-546
Canon	Pixma MG2450	CL-546XL
Canon	Pixma MG2550	CL-546
Canon	Pixma MG2550	CL-546XL
Canon	Pixma MG2950	CL-546
Canon	Pixma MG2950	CL-546XL
Canon	Pixma MG3050	CL-546
Canon	Pixma MG3050	CL-546XL
Canon	Pixma MG3053	CL-546
Canon	Pixma MG3053	CL-546XL
Canon	Pixma MG3140	CL-541
Canon	Pixma MG3140	CL-541XL
Canon	Pixma MG3150	CL-541
Canon	Pixma MG3150	CL-541XL
Canon	Pixma MG3250	CL-541
Canon	Pixma MG3250	CL-541XL
Canon	Pixma MG3550	CL-541
Canon	Pixma MG3550	CL-541XL
Canon	Pixma MG3600	CL-541

Canon	Pixma MG3600	CL-541XL
Canon	Pixma MG3650	CL-541
Canon	Pixma MG3650	CL-541XL
Canon	Pixma MG4150	CL-541
Canon	Pixma MG4150	CL-541XL
Canon	Pixma MG4250	CL-541
Canon	Pixma MG4250	CL-541XL
Canon	Pixma MG5150	CLI-526y
Canon	Pixma MG5250	CLI-526y
Canon	Pixma MG5350	CLI-526y
Canon	Pixma MG5450	CLI-551y
Canon	Pixma MG5450	CLI-551y XL
Canon	Pixma MG5500	CLI-551y
Canon	Pixma MG5500	CLI-551y XL
Canon	Pixma MG5550	CLI-551y
Canon	Pixma MG5550	CLI-551y XL
Canon	Pixma MG5650	CLI-551y
Canon	Pixma MG5650	CLI-551y XL
Canon	Pixma MG6150	CLI-526y
Canon	Pixma MG6250	CLI-526y
Canon	Pixma MG6350	CLI-551y
Canon	Pixma MG6350	CLI-551y XL
Canon	Pixma MG6450	CLI-551y
Canon	Pixma MG6450	CLI-551y XL
Canon	Pixma MG6650	CLI-551y
Canon	Pixma MG6650	CLI-551y XL
Canon	Pixma MG7150	CLI-551y
Canon	Pixma MG7150	CLI-551y XL
Canon	PIXMA MG7550	CLI-551y
Canon	PIXMA MG7550	CLI-551y XL
Canon	Pixma MG8150	CLI-526y
Canon	Pixma MP140	CL-38
Canon	Pixma MP140	CL-41
Canon	Pixma MP140	CL-51
Canon	Pixma MP150	CL-41
Canon	Pixma MP150	CL-51
Canon	Pixma MP160	CL-41
Canon	Pixma MP160	CL-51
Canon	Pixma MP170	CL-41
Canon	Pixma MP170	CL-51
Canon	Pixma MP180	CL-41
Canon	Pixma MP180	CL-51
Canon	Pixma MP190	CL-38
Canon	Pixma MP190	CL-41
Canon	Pixma MP210	CL-38
Canon	Pixma MP210	CL-41
Canon	Pixma MP220	CL-38
Canon	Pixma MP220	CL-41
Canon	Pixma MP230	CL-511
Canon	Pixma MP230	CL-513

Canon	Pixma MP240	CL-511
Canon	Pixma MP240	CL-513
Canon	Pixma MP250	CL-511
Canon	Pixma MP250	CL-513
Canon	Pixma MP260	CL-511
Canon	Pixma MP260	CL-513
Canon	Pixma MP270	CL-511
Canon	Pixma MP270	CL-513
Canon	Pixma MP272	CL-511
Canon	Pixma MP272	CL-513
Canon	PIXMA MP280	CL-511
Canon	PIXMA MP280	CL-513
Canon	Pixma MP310	CL-41
Canon	Pixma MP450	CL-41
Canon	Pixma MP450	CL-51
Canon	Pixma MP460	CL-41
Canon	Pixma MP460	CL-51
Canon	Pixma MP480	CL-511
Canon	Pixma MP480	CL-513
Canon	PIXMA MP490	CL-511
Canon	PIXMA MP490	CL-513
Canon	PIXMA MP495	CL-511
Canon	PIXMA MP495	CL-513
Canon	Pixma MP500	CLI-8y
Canon	Pixma MP510	CLI-8y
Canon	Pixma MP520	CLI-8y
Canon	Pixma MP530	CLI-8y
Canon	Pixma MP540	CLI-521y
Canon	Pixma MP550	CLI-521y
Canon	Pixma MP560	CLI-521y
Canon	Pixma MP600	CLI-8y
Canon	Pixma MP600R	CLI-8y
Canon	Pixma MP610	CLI-8y
Canon	Pixma MP620	CLI-521y
Canon	Pixma MP630	CLI-521y
Canon	Pixma MP640	CLI-521y
Canon	Pixma MP800	CLI-8y
Canon	Pixma MP810	CLI-8y
Canon	Pixma MP830	CLI-8y
Canon	Pixma MP950	CLI-8y
Canon	Pixma MP970	CLI-8y
Canon	Pixma MP980	CLI-521y
Canon	Pixma MX300	CL-38
Canon	Pixma MX300	CL-41
Canon	Pixma MX300	CL-51
Canon	Pixma MX310	CL-38
Canon	Pixma MX310	CL-41
Canon	Pixma MX310	CL-51
Canon	Pixma MX320	CL-511
Canon	Pixma MX320	CL-513

Canon	Pixma MX330	CL-511
Canon	Pixma MX330	CL-513
Canon	PIXMA MX340	CL-511
Canon	PIXMA MX340	CL-513
Canon	PIXMA MX350	CL-511
Canon	PIXMA MX350	CL-513
Canon	Pixma MX353	CL-541
Canon	Pixma MX353	CL-541XL
Canon	PIXMA MX360	CL-511
Canon	PIXMA MX360	CL-513
Canon	Pixma MX375	CL-541
Canon	Pixma MX375	CL-541XL
Canon	Pixma MX395	CL-541
Canon	Pixma MX395	CL-541XL
Canon	Pixma MX410	CL-511
Canon	Pixma MX410	CL-513
Canon	Pixma MX420	CL-511
Canon	Pixma MX420	CL-513
Canon	Pixma MX435	CL-541
Canon	Pixma MX435	CL-541XL
Canon	Pixma MX455	CL-541
Canon	Pixma MX455	CL-541XL
Canon	Pixma MX475	CL-541
Canon	Pixma MX475	CL-541XL
Canon	PIXMA MX495	CL-546
Canon	PIXMA MX495	CL-546XL
Canon	Pixma MX515	CL-541
Canon	Pixma MX515	CL-541XL
Canon	Pixma MX525	CL-541
Canon	Pixma MX525	CL-541XL
Canon	Pixma MX535	CL-541
Canon	Pixma MX535	CL-541XL
Canon	Pixma MX700	CLI-8y
Canon	Pixma MX715 AiO	CLI-526y
Canon	Pixma MX850	CLI-8y
Canon	Pixma MX860	CLI-521y
Canon	Pixma MX870	CLI-521y
Canon	Pixma MX885 AiO	CLI-526y
Canon	Pixma MX925	CLI-551y
Canon	Pixma MX925	CLI-551y XL
Canon	Pixma Pro9000	CLI-8y
Canon	Pixma TR4550 AiO	CL-546
Canon	Pixma TR4550 AiO	CL-546XL
Canon	Pixma TR4551 AiO	CL-546
Canon	Pixma TR4551 AiO	CL-546XL
Canon	Pixma TR4650 AiO	CL-546
Canon	Pixma TR4650 AiO	CL-546XL
Canon	Pixma TR4651 AiO	CL-546
Canon	Pixma TR4651 AiO	CL-546XL
Canon	Pixma TS205	CL-546

Canon	Pixma TS205	CL-546XL
Canon	Pixma TS305	CL-546
Canon	Pixma TS305	CL-546XL
Canon	Pixma TS3150 AiO	CL-546
Canon	Pixma TS3150 AiO	CL-546XL
Canon	Pixma TS3151 AiO	CL-546
Canon	Pixma TS3151 AiO	CL-546XL
Canon	Pixma TS3350 AiO	CL-546
Canon	Pixma TS3350 AiO	CL-546XL
Canon	Pixma TS3351 AiO	CL-546
Canon	Pixma TS3351 AiO	CL-546XL
Canon	Pixma TS3352 AiO	CL-546
Canon	Pixma TS3352 AiO	CL-546XL
Canon	Pixma TS3355 AiO	CL-546
Canon	Pixma TS3355 AiO	CL-546XL
Canon	Pixma TS3450 AiO	CL-546
Canon	Pixma TS3450 AiO	CL-546XL
Canon	Pixma TS3451 AiO	CL-546
Canon	Pixma TS3451 AiO	CL-546XL
Canon	Pixma TS3452 AiO	CL-546
Canon	Pixma TS3452 AiO	CL-546XL
Canon	Pixma TS5150 AiO	CL-541
Canon	Pixma TS5150 AiO	CL-541XL
Canon	Pixma TS5151 AiO	CL-541
Canon	Pixma TS5151 AiO	CL-541XL