

Brand	Model	Original Cartridge
Canon	Fax JX 200	PG-40
Canon	Fax JX 200	PG-50
Canon	Fax JX 500	PG-40
Canon	Fax JX 500	PG-50
Canon	JX210P	PG-40
Canon	JX210P	PG-50
Canon	JX510P	PG-40
Canon	JX510P	PG-50
Canon	MX 300	CL-41
Canon	MX 300	CL-51
Canon	MX 300	PG-40
Canon	MX 300	PG-50
Canon	Pixma IP1200	CL-41
Canon	Pixma IP1200	PG-40
Canon	Pixma IP1300	CL-41
Canon	Pixma IP1300	PG-40
Canon	Pixma IP1600	CL-41
Canon	Pixma IP1600	PG-40
Canon	Pixma IP1700	CL-41
Canon	Pixma IP1700	PG-40
Canon	Pixma IP1800	CL-38
Canon	Pixma IP1800	CL-41
Canon	Pixma IP1800	PG-37
Canon	Pixma IP1800	PG-40
Canon	Pixma IP1900	CL-38
Canon	Pixma IP1900	CL-41
Canon	Pixma IP1900	PG-37
Canon	Pixma IP1900	PG-40
Canon	Pixma IP2200	CL-41
Canon	Pixma IP2200	CL-51
Canon	Pixma IP2200	PG-40
Canon	Pixma IP2200	PG-50
Canon	Pixma IP2400	CL-41
Canon	Pixma IP2400	CL-51
Canon	Pixma IP2400	PG-40
Canon	Pixma IP2400	PG-50
Canon	Pixma IP2500	CL-38
Canon	Pixma IP2500	CL-41
Canon	Pixma IP2500	PG-37
Canon	Pixma IP2500	PG-40
Canon	Pixma IP2600	CL-38
Canon	Pixma IP2600	CL-41
Canon	Pixma IP2600	PG-37
Canon	Pixma IP2600	PG-40
Canon	Pixma iP2700	CL-511
Canon	Pixma iP2700	CL-513
Canon	Pixma iP2700	PG-510
Canon	Pixma iP2700	PG-512
Canon	Pixma IP2702	CL-511

Canon	Pixma IP2702	CL-513
Canon	Pixma IP2702	PG-510
Canon	Pixma IP2702	PG-512
Canon	Pixma IP2850	CL-546
Canon	Pixma IP2850	CL-546XL
Canon	Pixma IP2850	PG-545
Canon	Pixma IP2850	PG-545XL
Canon	Pixma IP3300	CLI-8c
Canon	Pixma IP3300	CLI-8m
Canon	Pixma IP3300	CLI-8y
Canon	Pixma IP3300	PGI-5bk
Canon	Pixma IP3500	CLI-8c
Canon	Pixma IP3500	CLI-8m
Canon	Pixma IP3500	CLI-8y
Canon	Pixma IP3500	PGI-5bk
Canon	Pixma IP4200	CLI-8c
Canon	Pixma IP4200	CLI-8m
Canon	Pixma IP4200	CLI-8y
Canon	Pixma IP4200	PGI-5bk
Canon	Pixma IP4300	CLI-8c
Canon	Pixma IP4300	CLI-8m
Canon	Pixma IP4300	CLI-8y
Canon	Pixma IP4300	PGI-5bk
Canon	Pixma IP4500	CLI-8c
Canon	Pixma IP4500	CLI-8m
Canon	Pixma IP4500	CLI-8y
Canon	Pixma IP4500	PGI-5bk
Canon	Pixma IP5100	CLI-8c
Canon	Pixma IP5100	CLI-8m
Canon	Pixma IP5100	CLI-8y
Canon	Pixma IP5100	PGI-5bk
Canon	Pixma IP5200	CLI-8c
Canon	Pixma IP5200	CLI-8m
Canon	Pixma IP5200	CLI-8y
Canon	Pixma IP5200	PGI-5bk
Canon	Pixma IP5200R	CLI-8c
Canon	Pixma IP5200R	CLI-8m
Canon	Pixma IP5200R	CLI-8y
Canon	Pixma IP5200R	PGI-5bk
Canon	Pixma IP5300	CLI-8c
Canon	Pixma IP5300	CLI-8m
Canon	Pixma IP5300	CLI-8y
Canon	Pixma IP5300	PGI-5bk
Canon	Pixma IP6210D	CL-41
Canon	Pixma IP6210D	CL-51
Canon	Pixma IP6210D	CL-52
Canon	Pixma IP6220D	CL-41
Canon	Pixma IP6220D	CL-51
Canon	Pixma IP6220D	CL-52
Canon	Pixma IP6600D	CLI-8c

Canon	Pixma IP6600D	CLI-8m
Canon	Pixma IP6600D	CLI-8y
Canon	Pixma IP6700D	CLI-8c
Canon	Pixma IP6700D	CLI-8m
Canon	Pixma IP6700D	CLI-8y
Canon	Pixma iX4000	CLI-8c
Canon	Pixma iX4000	CLI-8m
Canon	Pixma iX4000	CLI-8y
Canon	Pixma iX4000	PGI-5bk
Canon	Pixma iX5000	CLI-8c
Canon	Pixma iX5000	CLI-8m
Canon	Pixma iX5000	CLI-8y
Canon	Pixma iX5000	PGI-5bk
Canon	Pixma MG2140	CL-541
Canon	Pixma MG2140	CL-541XL
Canon	Pixma MG2140	PG-540
Canon	Pixma MG2140	PG-540XL
Canon	Pixma MG2150	CL-541
Canon	Pixma MG2150	CL-541XL
Canon	Pixma MG2150	PG-540
Canon	Pixma MG2150	PG-540XL
Canon	Pixma MG2250	CL-541
Canon	Pixma MG2250	CL-541XL
Canon	Pixma MG2250	PG-540
Canon	Pixma MG2250	PG-540XL
Canon	Pixma MG2450	CL-546
Canon	Pixma MG2450	CL-546XL
Canon	Pixma MG2450	PG-545
Canon	Pixma MG2450	PG-545XL
Canon	Pixma MG2550	CL-546
Canon	Pixma MG2550	CL-546XL
Canon	Pixma MG2550	PG-545
Canon	Pixma MG2550	PG-545XL
Canon	Pixma MG2950	CL-546
Canon	Pixma MG2950	CL-546XL
Canon	Pixma MG2950	PG-545
Canon	Pixma MG2950	PG-545XL
Canon	Pixma MG3050	CL-546
Canon	Pixma MG3050	CL-546XL
Canon	Pixma MG3050	PG-545
Canon	Pixma MG3050	PG-545XL
Canon	Pixma MG3053	CL-546
Canon	Pixma MG3053	CL-546XL
Canon	Pixma MG3053	PG-545
Canon	Pixma MG3053	PG-545XL
Canon	Pixma MG3140	CL-541
Canon	Pixma MG3140	CL-541XL
Canon	Pixma MG3140	PG-540
Canon	Pixma MG3140	PG-540XL
Canon	Pixma MG3150	CL-541

Canon	Pixma MG3150	CL-541XL
Canon	Pixma MG3150	PG-540
Canon	Pixma MG3150	PG-540XL
Canon	Pixma MG3250	CL-541
Canon	Pixma MG3250	CL-541XL
Canon	Pixma MG3250	PG-540
Canon	Pixma MG3250	PG-540XL
Canon	Pixma MG3550	CL-541
Canon	Pixma MG3550	CL-541XL
Canon	Pixma MG3550	PG-540
Canon	Pixma MG3550	PG-540XL
Canon	Pixma MG3600	CL-541
Canon	Pixma MG3600	CL-541XL
Canon	Pixma MG3600	PG-540
Canon	Pixma MG3600	PG-540XL
Canon	Pixma MG3650	CL-541
Canon	Pixma MG3650	CL-541XL
Canon	Pixma MG3650	PG-540
Canon	Pixma MG3650	PG-540XL
Canon	Pixma MG4150	CL-541
Canon	Pixma MG4150	CL-541XL
Canon	Pixma MG4150	PG-540
Canon	Pixma MG4150	PG-540XL
Canon	Pixma MG4250	CL-541
Canon	Pixma MG4250	CL-541XL
Canon	Pixma MG4250	none
Canon	Pixma MG4250	PG-540
Canon	Pixma MG4250	PG-540XL
Canon	Pixma MP140	CL-38
Canon	Pixma MP140	CL-41
Canon	Pixma MP140	CL-51
Canon	Pixma MP140	PG-37
Canon	Pixma MP140	PG-40
Canon	Pixma MP140	PG-50
Canon	Pixma MP150	CL-41
Canon	Pixma MP150	CL-51
Canon	Pixma MP150	PG-40
Canon	Pixma MP150	PG-50
Canon	Pixma MP160	CL-41
Canon	Pixma MP160	CL-51
Canon	Pixma MP160	PG-40
Canon	Pixma MP160	PG-50
Canon	Pixma MP170	CL-41
Canon	Pixma MP170	CL-51
Canon	Pixma MP170	PG-40
Canon	Pixma MP170	PG-50
Canon	Pixma MP180	CL-41
Canon	Pixma MP180	CL-51
Canon	Pixma MP180	PG-40
Canon	Pixma MP180	PG-50

Canon	Pixma MP190	CL-38
Canon	Pixma MP190	CL-41
Canon	Pixma MP190	PG-37
Canon	Pixma MP190	PG-40
Canon	Pixma MP210	CL-38
Canon	Pixma MP210	CL-41
Canon	Pixma MP210	PG-37
Canon	Pixma MP210	PG-40
Canon	Pixma MP220	CL-38
Canon	Pixma MP220	CL-41
Canon	Pixma MP220	PG-37
Canon	Pixma MP220	PG-40
Canon	Pixma MP230	CL-511
Canon	Pixma MP230	CL-513
Canon	Pixma MP230	PG-510
Canon	Pixma MP230	PG-512
Canon	Pixma MP240	CL-511
Canon	Pixma MP240	CL-513
Canon	Pixma MP240	PG-510
Canon	Pixma MP240	PG-512
Canon	Pixma MP250	CL-511
Canon	Pixma MP250	CL-513
Canon	Pixma MP250	PG-510
Canon	Pixma MP250	PG-512
Canon	Pixma MP260	CL-511
Canon	Pixma MP260	CL-513
Canon	Pixma MP260	PG-510
Canon	Pixma MP260	PG-512
Canon	Pixma MP270	CL-511
Canon	Pixma MP270	CL-513
Canon	Pixma MP270	PG-510
Canon	Pixma MP270	PG-512
Canon	Pixma MP272	CL-511
Canon	Pixma MP272	CL-513
Canon	Pixma MP272	PG-510
Canon	Pixma MP272	PG-512
Canon	PIXMA MP280	CL-511
Canon	PIXMA MP280	CL-513
Canon	PIXMA MP280	PG-510
Canon	PIXMA MP280	PG-512
Canon	Pixma MP310	CL-41
Canon	Pixma MP310	PG-40
Canon	Pixma MP450	CL-41
Canon	Pixma MP450	CL-51
Canon	Pixma MP450	PG-40
Canon	Pixma MP450	PG-50
Canon	Pixma MP460	CL-41
Canon	Pixma MP460	CL-51
Canon	Pixma MP460	PG-40
Canon	Pixma MP460	PG-50

Canon	Pixma MP480	CL-511
Canon	Pixma MP480	CL-513
Canon	Pixma MP480	PG-510
Canon	Pixma MP480	PG-512
Canon	PIXMA MP490	CL-511
Canon	PIXMA MP490	CL-513
Canon	PIXMA MP490	PG-510
Canon	PIXMA MP490	PG-512
Canon	PIXMA MP495	CL-511
Canon	PIXMA MP495	CL-513
Canon	PIXMA MP495	PG-510
Canon	PIXMA MP495	PG-512
Canon	Pixma MP500	CLI-8c
Canon	Pixma MP500	CLI-8m
Canon	Pixma MP500	CLI-8y
Canon	Pixma MP500	PGI-5bk
Canon	Pixma MP510	CLI-8c
Canon	Pixma MP510	CLI-8m
Canon	Pixma MP510	CLI-8y
Canon	Pixma MP510	PGI-5bk
Canon	Pixma MP520	CLI-8c
Canon	Pixma MP520	CLI-8m
Canon	Pixma MP520	CLI-8y
Canon	Pixma MP520	PGI-5bk
Canon	Pixma MP530	CLI-8c
Canon	Pixma MP530	CLI-8m
Canon	Pixma MP530	CLI-8y
Canon	Pixma MP530	PGI-5bk
Canon	Pixma MP600	CLI-8c
Canon	Pixma MP600	CLI-8m
Canon	Pixma MP600	CLI-8y
Canon	Pixma MP600	PGI-5bk
Canon	Pixma MP600R	CLI-8c
Canon	Pixma MP600R	CLI-8m
Canon	Pixma MP600R	CLI-8y
Canon	Pixma MP600R	PGI-5bk
Canon	Pixma MP610	CLI-8c
Canon	Pixma MP610	CLI-8m
Canon	Pixma MP610	CLI-8y
Canon	Pixma MP610	PGI-5bk
Canon	Pixma MP800	CLI-8c
Canon	Pixma MP800	CLI-8m
Canon	Pixma MP800	CLI-8y
Canon	Pixma MP800	PGI-5bk
Canon	Pixma MP800R	PGI-5bk
Canon	Pixma MP810	CLI-8c
Canon	Pixma MP810	CLI-8m
Canon	Pixma MP810	CLI-8y
Canon	Pixma MP810	PGI-5bk
Canon	Pixma MP830	CLI-8c

Canon	Pixma MP830	CLI-8m
Canon	Pixma MP830	CLI-8y
Canon	Pixma MP830	PGI-5bk
Canon	Pixma MP950	CLI-8c
Canon	Pixma MP950	CLI-8m
Canon	Pixma MP950	CLI-8y
Canon	Pixma MP970	CLI-8c
Canon	Pixma MP970	CLI-8m
Canon	Pixma MP970	CLI-8y
Canon	Pixma MP970	PGI-5bk
Canon	Pixma MX300	CL-38
Canon	Pixma MX300	CL-41
Canon	Pixma MX300	CL-51
Canon	Pixma MX300	PG-37
Canon	Pixma MX300	PG-40
Canon	Pixma MX300	PG-50
Canon	Pixma MX310	CL-38
Canon	Pixma MX310	CL-41
Canon	Pixma MX310	CL-51
Canon	Pixma MX310	PG-37
Canon	Pixma MX310	PG-40
Canon	Pixma MX310	PG-50
Canon	Pixma MX320	CL-511
Canon	Pixma MX320	CL-513
Canon	PIXMA MX320	PG-510
Canon	Pixma MX320	PG-512
Canon	Pixma MX330	CL-511
Canon	Pixma MX330	CL-513
Canon	Pixma MX330	PG-510
Canon	Pixma MX330	PG-512
Canon	PIXMA MX340	CL-511
Canon	PIXMA MX340	CL-513
Canon	PIXMA MX340	PG-510
Canon	PIXMA MX340	PG-512
Canon	PIXMA MX350	CL-511
Canon	PIXMA MX350	CL-513
Canon	PIXMA MX350	PG-510
Canon	PIXMA MX350	PG-512
Canon	Pixma MX353	CL-541
Canon	Pixma MX353	CL-541XL
Canon	Pixma MX353	PG-540
Canon	Pixma MX353	PG-540XL
Canon	PIXMA MX360	CL-511
Canon	PIXMA MX360	CL-513
Canon	PIXMA MX360	PG-510
Canon	PIXMA MX360	PG-512
Canon	Pixma MX375	CL-541
Canon	Pixma MX375	CL-541XL
Canon	Pixma MX375	PG-540
Canon	Pixma MX375	PG-540XL

Canon	Pixma MX395	CL-541
Canon	Pixma MX395	CL-541XL
Canon	Pixma MX395	PG-540
Canon	Pixma MX395	PG-540XL
Canon	Pixma MX410	CL-511
Canon	Pixma MX410	CL-513
Canon	Pixma MX410	PG-510
Canon	Pixma MX410	PG-512
Canon	Pixma MX420	CL-511
Canon	Pixma MX420	CL-513
Canon	Pixma MX420	PG-510
Canon	Pixma MX420	PG-512
Canon	Pixma MX435	CL-541
Canon	Pixma MX435	CL-541XL
Canon	Pixma MX435	PG-540
Canon	Pixma MX435	PG-540XL
Canon	Pixma MX455	CL-541
Canon	Pixma MX455	CL-541XL
Canon	Pixma MX455	PG-540
Canon	Pixma MX455	PG-540XL
Canon	Pixma MX475	CL-541
Canon	Pixma MX475	CL-541XL
Canon	Pixma MX475	PG-540
Canon	Pixma MX475	PG-540XL
Canon	PIXMA MX495	CL-546
Canon	PIXMA MX495	CL-546XL
Canon	PIXMA MX495	PG-545
Canon	PIXMA MX495	PG-545XL
Canon	Pixma MX515	CL-541
Canon	Pixma MX515	CL-541XL
Canon	Pixma MX515	PG-540
Canon	Pixma MX515	PG-540XL
Canon	Pixma MX525	CL-541
Canon	Pixma MX525	CL-541XL
Canon	Pixma MX525	PG-540
Canon	Pixma MX525	PG-540XL
Canon	Pixma MX535	CL-541
Canon	Pixma MX535	CL-541XL
Canon	Pixma MX535	PG-540
Canon	Pixma MX535	PG-540XL
Canon	Pixma MX700	CLI-8c
Canon	Pixma MX700	CLI-8m
Canon	Pixma MX700	CLI-8y
Canon	Pixma MX700	PGI-5bk
Canon	Pixma MX850	CLI-8c
Canon	Pixma MX850	CLI-8m
Canon	Pixma MX850	CLI-8y
Canon	Pixma MX850	PGI-5bk
Canon	Pixma Pro9000	CLI-8c
Canon	Pixma Pro9000	CLI-8m

Canon	Pixma Pro9000	CLI-8y
Canon	Pixma TR4550 AiO	CL-546
Canon	Pixma TR4550 AiO	CL-546XL
Canon	Pixma TR4550 AiO	PG-545
Canon	Pixma TR4550 AiO	PG-545XL
Canon	Pixma TR4551 AiO	CL-546
Canon	Pixma TR4551 AiO	CL-546XL
Canon	Pixma TR4551 AiO	PG-545
Canon	Pixma TR4551 AiO	PG-545XL
Canon	Pixma TR4650 AiO	CL-546
Canon	Pixma TR4650 AiO	CL-546XL
Canon	Pixma TR4650 AiO	PG-545
Canon	Pixma TR4650 AiO	PG-545XL
Canon	Pixma TR4651 AiO	CL-546
Canon	Pixma TR4651 AiO	CL-546XL
Canon	Pixma TR4651 AiO	PG-545
Canon	Pixma TR4651 AiO	PG-545XL
Canon	Pixma TS205	CL-546
Canon	Pixma TS205	CL-546XL
Canon	Pixma TS205	PG-545
Canon	Pixma TS205	PG-545XL
Canon	Pixma TS305	CL-546
Canon	Pixma TS305	CL-546XL
Canon	Pixma TS305	PG-545
Canon	Pixma TS305	PG-545XL
Canon	Pixma TS3150 AiO	CL-546
Canon	Pixma TS3150 AiO	CL-546XL
Canon	Pixma TS3150 AiO	PG-545
Canon	Pixma TS3150 AiO	PG-545XL
Canon	Pixma TS3151 AiO	CL-546
Canon	Pixma TS3151 AiO	CL-546XL
Canon	Pixma TS3151 AiO	PG-545
Canon	Pixma TS3151 AiO	PG-545XL
Canon	Pixma TS3350 AiO	CL-546
Canon	Pixma TS3350 AiO	CL-546XL
Canon	Pixma TS3350 AiO	PG-545
Canon	Pixma TS3350 AiO	PG-545XL
Canon	Pixma TS3351 AiO	CL-546
Canon	Pixma TS3351 AiO	CL-546XL
Canon	Pixma TS3351 AiO	PG-545
Canon	Pixma TS3351 AiO	PG-545XL
Canon	Pixma TS3352 AiO	CL-546
Canon	Pixma TS3352 AiO	CL-546XL
Canon	Pixma TS3352 AiO	PG-545
Canon	Pixma TS3352 AiO	PG-545XL
Canon	Pixma TS3355 AiO	CL-546
Canon	Pixma TS3355 AiO	CL-546XL
Canon	Pixma TS3355 AiO	PG-545
Canon	Pixma TS3355 AiO	PG-545XL
Canon	Pixma TS3450 AiO	CL-546

Canon	Pixma TS3450 AiO	CL-546XL
Canon	Pixma TS3450 AiO	PG-545
Canon	Pixma TS3450 AiO	PG-545XL
Canon	Pixma TS3451 AiO	CL-546
Canon	Pixma TS3451 AiO	CL-546XL
Canon	Pixma TS3451 AiO	PG-545
Canon	Pixma TS3451 AiO	PG-545XL
Canon	Pixma TS3452 AiO	CL-546
Canon	Pixma TS3452 AiO	CL-546XL
Canon	Pixma TS3452 AiO	PG-545
Canon	Pixma TS3452 AiO	PG-545XL
Canon	Pixma TS5150 AiO	CL-541
Canon	Pixma TS5150 AiO	CL-541XL
Canon	Pixma TS5150 AiO	PG-540
Canon	Pixma TS5150 AiO	PG-540XL
Canon	Pixma TS5151 AiO	CL-541
Canon	Pixma TS5151 AiO	CL-541XL
Canon	Pixma TS5151 AiO	PG-540
Canon	Pixma TS5151 AiO	PG-540XL
Hewlett Packard (HP)	DeskJet D1520	C9351A No 21
Hewlett Packard (HP)	DeskJet D1520	C9351CE No 21XL
Hewlett Packard (HP)	DeskJet D1520	C9352A No 22
Hewlett Packard (HP)	DeskJet D1520	C9352CE No 22XL
Hewlett Packard (HP)	DeskJet 3300	C8727A No 27
Hewlett Packard (HP)	DeskJet 3300	C8728A No 28
Hewlett Packard (HP)	DeskJet 3320	C8727A No 27
Hewlett Packard (HP)	DeskJet 3320	C8728A No 28
Hewlett Packard (HP)	DeskJet 3325	C8727A No 27
Hewlett Packard (HP)	DeskJet 3325	C8728A No 28
Hewlett Packard (HP)	DeskJet 3420	C8727A No 27
Hewlett Packard (HP)	DeskJet 3420	C8728A No 28
Hewlett Packard (HP)	DeskJet 3425	C8727A No 27
Hewlett Packard (HP)	DeskJet 3425	C8728A No 28
Hewlett Packard (HP)	DeskJet 3500	C8727A No 27
Hewlett Packard (HP)	DeskJet 3500	C8728A No 28
Hewlett Packard (HP)	DeskJet 3520	C8727A No 27
Hewlett Packard (HP)	DeskJet 3520	C8728A No 28
Hewlett Packard (HP)	DeskJet 3550	C8727A No 27
Hewlett Packard (HP)	DeskJet 3550	C8728A No 28
Hewlett Packard (HP)	DeskJet 3600	C8727A No 27
Hewlett Packard (HP)	DeskJet 3600	C8728A No 28
Hewlett Packard (HP)	DeskJet 3620	C8727A No 27
Hewlett Packard (HP)	DeskJet 3620	C8728A No 28
Hewlett Packard (HP)	DeskJet 3645	C8727A No 27
Hewlett Packard (HP)	DeskJet 3645	C8728A No 28
Hewlett Packard (HP)	DeskJet 3647	C8727A No 27
Hewlett Packard (HP)	DeskJet 3647	C8728A No 28
Hewlett Packard (HP)	DeskJet 3650	C8727A No 27
Hewlett Packard (HP)	DeskJet 3650	C8728A No 28
Hewlett Packard (HP)	DeskJet 3651	C8727A No 27

Hewlett Packard (HP)	DeskJet 3651	C8728A No 28
Hewlett Packard (HP)	DeskJet 3740	C8727A No 27
Hewlett Packard (HP)	DeskJet 3740	C8728A No 28
Hewlett Packard (HP)	DeskJet 3745	C8727A No 27
Hewlett Packard (HP)	DeskJet 3745	C8728A No 28
Hewlett Packard (HP)	DeskJet 3840	C8727A No 27
Hewlett Packard (HP)	DeskJet 3840	C8728A No 28
Hewlett Packard (HP)	DeskJet 3843	C8727A No 27
Hewlett Packard (HP)	DeskJet 3843	C8728A No 28
Hewlett Packard (HP)	DeskJet 3845	C8727A No 27
Hewlett Packard (HP)	DeskJet 3845	C8728A No 28
Hewlett Packard (HP)	DeskJet 3847	C8727A No 27
Hewlett Packard (HP)	DeskJet 3847	C8728A No 28
Hewlett Packard (HP)	DeskJet 3910	C9351A No 21
Hewlett Packard (HP)	DeskJet 3910	C9351CE No 21XL
Hewlett Packard (HP)	DeskJet 3910	C9352A No 22
Hewlett Packard (HP)	DeskJet 3910	C9352CE No 22XL
Hewlett Packard (HP)	DeskJet 3915	C9351A No 21
Hewlett Packard (HP)	DeskJet 3915	C9352A No 22
Hewlett Packard (HP)	DeskJet 3920	C9351A No 21
Hewlett Packard (HP)	DeskJet 3920	C9352A No 22
Hewlett Packard (HP)	DeskJet 3930	C9351A No 21
Hewlett Packard (HP)	DeskJet 3930	C9352A No 22
Hewlett Packard (HP)	DeskJet 3940	C9351A No 21
Hewlett Packard (HP)	DeskJet 3940	C9352A No 22
Hewlett Packard (HP)	DeskJet 3940v	C9351A No 21
Hewlett Packard (HP)	DeskJet 3940v	C9352A No 22
Hewlett Packard (HP)	DeskJet 450	C6656A No 56
Hewlett Packard (HP)	DeskJet 450	C6657A No 57
Hewlett Packard (HP)	DeskJet 450cbi	C6656A No 56
Hewlett Packard (HP)	DeskJet 450cbi	C6657A No 57
Hewlett Packard (HP)	DeskJet 450cbi	C8727A No 27
Hewlett Packard (HP)	DeskJet 450cbi	C8728A No 28
Hewlett Packard (HP)	DeskJet 450ci	C6656A No 56
Hewlett Packard (HP)	DeskJet 450ci	C6657A No 57
Hewlett Packard (HP)	DeskJet 450ci	C8727A No 27
Hewlett Packard (HP)	DeskJet 450ci	C8728A No 28
Hewlett Packard (HP)	DeskJet 450wbt	C6656A No 56
Hewlett Packard (HP)	DeskJet 450wbt	C6657A No 57
Hewlett Packard (HP)	DeskJet 450wbt	C8727A No 27
Hewlett Packard (HP)	DeskJet 450wbt	C8728A No 28
Hewlett Packard (HP)	DeskJet 5150	C6656A No 56
Hewlett Packard (HP)	DeskJet 5150	C6657A No 57
Hewlett Packard (HP)	DeskJet 5151	C6656A No 56
Hewlett Packard (HP)	DeskJet 5151	C6657A No 57
Hewlett Packard (HP)	DeskJet 5550	C6656A No 56
Hewlett Packard (HP)	DeskJet 5550	C6657A No 57
Hewlett Packard (HP)	DeskJet 5551	C6656A No 56
Hewlett Packard (HP)	DeskJet 5551	C6657A No 57
Hewlett Packard (HP)	DeskJet 5552	C6656A No 56

Hewlett Packard (HP)	DeskJet 5552	C6657A No 57
Hewlett Packard (HP)	DeskJet 5600	C6656A No 56
Hewlett Packard (HP)	DeskJet 5600	C6657A No 57
Hewlett Packard (HP)	DeskJet 5650	C6656A No 56
Hewlett Packard (HP)	DeskJet 5650	C6657A No 57
Hewlett Packard (HP)	DeskJet 5652	C6656A No 56
Hewlett Packard (HP)	DeskJet 5652	C6657A No 57
Hewlett Packard (HP)	DeskJet 5655	C6656A No 56
Hewlett Packard (HP)	DeskJet 5655	C6657A No 57
Hewlett Packard (HP)	DeskJet 5850	C6656A No 56
Hewlett Packard (HP)	DeskJet 5850	C6657A No 57
Hewlett Packard (HP)	DeskJet 6110	C6656A No 56
Hewlett Packard (HP)	DeskJet 6110	C6657A No 57
Hewlett Packard (HP)	DeskJet 7762	C6656A No 56
Hewlett Packard (HP)	DeskJet 7762	C6657A No 57
Hewlett Packard (HP)	DeskJet 9600	C6656A No 56
Hewlett Packard (HP)	DeskJet 9600	C6657A No 57
Hewlett Packard (HP)	DeskJet 9650	C6656A No 56
Hewlett Packard (HP)	DeskJet 9650	C6657A No 57
Hewlett Packard (HP)	DeskJet 9670	C6656A No 56
Hewlett Packard (HP)	DeskJet 9670	C6657A No 57
Hewlett Packard (HP)	DeskJet 9680	C6656A No 56
Hewlett Packard (HP)	DeskJet 9680	C6657A No 57
Hewlett Packard (HP)	DeskJet D1311	C9351A No 21
Hewlett Packard (HP)	DeskJet D1311	C9352A No 22
Hewlett Packard (HP)	DeskJet D1320	C9351A No 21
Hewlett Packard (HP)	DeskJet D1320	C9352A No 22
Hewlett Packard (HP)	DeskJet D1330	C9351A No 21
Hewlett Packard (HP)	DeskJet D1330	C9351CE No 21XL
Hewlett Packard (HP)	DeskJet D1330	C9352A No 22
Hewlett Packard (HP)	DeskJet D1330	C9352CE No 22XL
Hewlett Packard (HP)	DeskJet D1341	C9351A No 21
Hewlett Packard (HP)	DeskJet D1341	C9352A No 22
Hewlett Packard (HP)	DeskJet D1360	C9351A No 21
Hewlett Packard (HP)	DeskJet D1360	C9352A No 22
Hewlett Packard (HP)	DeskJet D1368	C9351A No 21
Hewlett Packard (HP)	DeskJet D1368	C9351CE No 21XL
Hewlett Packard (HP)	DeskJet D1368	C9352A No 22
Hewlett Packard (HP)	DeskJet D1368	C9352CE No 22XL
Hewlett Packard (HP)	DeskJet D1460	C9351A No 21
Hewlett Packard (HP)	DeskJet D1460	C9352A No 22
Hewlett Packard (HP)	DeskJet D1560	C9351A No 21
Hewlett Packard (HP)	DeskJet D1560	C9351CE No 21XL
Hewlett Packard (HP)	DeskJet D1560	C9352A No 22
Hewlett Packard (HP)	DeskJet D1560	C9352CE No 22XL
Hewlett Packard (HP)	DeskJet D2320	C9351A No 21
Hewlett Packard (HP)	DeskJet D2320	C9352A No 22
Hewlett Packard (HP)	DeskJet D2330	C9351A No 21
Hewlett Packard (HP)	DeskJet D2330	C9352A No 22
Hewlett Packard (HP)	DeskJet D2345	C9351A No 21

Hewlett Packard (HP)	DeskJet D2345	C9352A No 22
Hewlett Packard (HP)	DeskJet D2360	C9351A No 21
Hewlett Packard (HP)	DeskJet D2360	C9352A No 22
Hewlett Packard (HP)	DeskJet D2368	C9351A No 21
Hewlett Packard (HP)	DeskJet D2368	C9352A No 22
Hewlett Packard (HP)	DeskJet D2400	C9351A No 21
Hewlett Packard (HP)	DeskJet D2400	C9352A No 22
Hewlett Packard (HP)	DeskJet D2460	C9351A No 21
Hewlett Packard (HP)	DeskJet D2460	C9352A No 22
Hewlett Packard (HP)	DeskJet D4200	CB335EE No 350
Hewlett Packard (HP)	DeskJet D4200	CB336EE No 350xl
Hewlett Packard (HP)	DeskJet D4200	CB337EE No 351
Hewlett Packard (HP)	DeskJet D4200	CB338EE No 351xl
Hewlett Packard (HP)	DeskJet D4260	CB335EE No 350
Hewlett Packard (HP)	DeskJet D4260	CB336EE No 350xl
Hewlett Packard (HP)	DeskJet D4260	CB337EE No 351
Hewlett Packard (HP)	DeskJet D4260	CB338EE No 351xl
Hewlett Packard (HP)	DeskJet D4360	CB335EE No 350
Hewlett Packard (HP)	DeskJet D4360	CB336EE No 350xl
Hewlett Packard (HP)	DeskJet D4360	CB337EE No 351
Hewlett Packard (HP)	DeskJet D4360	CB338EE No 351xl
Hewlett Packard (HP)	DeskJet F2180	C9351A No 21
Hewlett Packard (HP)	DeskJet F2180	C9351CE No 21XL
Hewlett Packard (HP)	DeskJet F2180	C9352A No 22
Hewlett Packard (HP)	DeskJet F2180	C9352CE No 22XL
Hewlett Packard (HP)	DeskJet F2187 AiO	C9351A No 21
Hewlett Packard (HP)	DeskJet F2187 AiO	C9351CE No 21XL
Hewlett Packard (HP)	DeskJet F2187 AiO	C9352A No 22
Hewlett Packard (HP)	DeskJet F2187 AiO	C9352CE No 22XL
Hewlett Packard (HP)	DeskJet F2280	C9351A No 21
Hewlett Packard (HP)	DeskJet F2280	C9351CE No 21XL
Hewlett Packard (HP)	DeskJet F2280	C9352A No 22
Hewlett Packard (HP)	DeskJet F2280	C9352CE No 22XL
Hewlett Packard (HP)	DeskJet F2420 AiO	none
Hewlett Packard (HP)	Deskjet F2480 AiO	none
Hewlett Packard (HP)	DeskJet F310	C9351A No 21
Hewlett Packard (HP)	DeskJet F310	C9351CE No 21XL
Hewlett Packard (HP)	DeskJet F310	C9352A No 22
Hewlett Packard (HP)	DeskJet F310	C9352CE No 22XL
Hewlett Packard (HP)	DeskJet F325	C9351A No 21
Hewlett Packard (HP)	DeskJet F325	C9352A No 22
Hewlett Packard (HP)	DeskJet F335	C9351A No 21
Hewlett Packard (HP)	DeskJet F335	C9352A No 22
Hewlett Packard (HP)	DeskJet F340	C9351A No 21
Hewlett Packard (HP)	DeskJet F340	C9352A No 22
Hewlett Packard (HP)	DeskJet F350	C9351A No 21
Hewlett Packard (HP)	DeskJet F350	C9352A No 22
Hewlett Packard (HP)	DeskJet F370	C9351A No 21
Hewlett Packard (HP)	DeskJet F370	C9352A No 22
Hewlett Packard (HP)	DeskJet F378	C9351A No 21

Hewlett Packard (HP)	DeskJet F378	C9352A No 22
Hewlett Packard (HP)	DeskJet F380	C9351A No 21
Hewlett Packard (HP)	DeskJet F380	C9351CE No 21XL
Hewlett Packard (HP)	DeskJet F380	C9352A No 22
Hewlett Packard (HP)	DeskJet F380	C9352CE No 22XL
Hewlett Packard (HP)	DeskJet F385	C9351A No 21
Hewlett Packard (HP)	DeskJet F385	C9351CE No 21XL
Hewlett Packard (HP)	DeskJet F385	C9352A No 22
Hewlett Packard (HP)	DeskJet F385	C9352CE No 22XL
Hewlett Packard (HP)	DeskJet F388	C9351A No 21
Hewlett Packard (HP)	DeskJet F388	C9351CE No 21XL
Hewlett Packard (HP)	DeskJet F388	C9352A No 22
Hewlett Packard (HP)	DeskJet F388	C9352CE No 22XL
Hewlett Packard (HP)	DeskJet F390	C9351A No 21
Hewlett Packard (HP)	DeskJet F390	C9352A No 22
Hewlett Packard (HP)	DeskJet F394	C9351A No 21
Hewlett Packard (HP)	DeskJet F394	C9352A No 22
Hewlett Packard (HP)	Deskjet F4100	C6656A No 56
Hewlett Packard (HP)	Deskjet F4100	C9351A No 21
Hewlett Packard (HP)	Deskjet F4100	C9352A No 22
Hewlett Packard (HP)	DeskJet F4172	C6657A No 57
Hewlett Packard (HP)	DeskJet F4172	C9351A No 21
Hewlett Packard (HP)	DeskJet F4172	C9352A No 22
Hewlett Packard (HP)	DeskJet F4180	C9351A No 21
Hewlett Packard (HP)	DeskJet F4180	C9352A No 22
Hewlett Packard (HP)	Digital Copier 410	C6656A No 56
Hewlett Packard (HP)	Digital Copier 410	C6657A No 57
Hewlett Packard (HP)	Digital Copier Printer 410	C6656A No 56
Hewlett Packard (HP)	Digital Copier Printer 410	C6657A No 57
Hewlett Packard (HP)	Fax 1240	C6656A No 56
Hewlett Packard (HP)	Fax 1240	C6657A No 57
Hewlett Packard (HP)	Fax 1240	C8727A No 27
Hewlett Packard (HP)	Fax 1240	C8728A No 28
Hewlett Packard (HP)	OfficeJet 4110	C6656A No 56
Hewlett Packard (HP)	OfficeJet 4110	C6657A No 57
Hewlett Packard (HP)	OfficeJet 4200	C6656A No 56
Hewlett Packard (HP)	OfficeJet 4200	C6657A No 57
Hewlett Packard (HP)	OfficeJet 4200	C8727A No 27
Hewlett Packard (HP)	OfficeJet 4200	C8728A No 28
Hewlett Packard (HP)	OfficeJet 4215	C6656A No 56
Hewlett Packard (HP)	OfficeJet 4215	C6657A No 57
Hewlett Packard (HP)	OfficeJet 4215	C8727A No 27
Hewlett Packard (HP)	OfficeJet 4215	C8728A No 28
Hewlett Packard (HP)	OfficeJet 4219	C6656A No 56
Hewlett Packard (HP)	OfficeJet 4219	C6657A No 57
Hewlett Packard (HP)	OfficeJet 4219	C8728A No 28
Hewlett Packard (HP)	OfficeJet 4255	C6656A No 56
Hewlett Packard (HP)	OfficeJet 4255	C6657A No 57
Hewlett Packard (HP)	OfficeJet 4255	C8727A No 27
Hewlett Packard (HP)	OfficeJet 4255	C8728A No 28

Hewlett Packard (HP)	OfficeJet 4315	C8727A No 27
Hewlett Packard (HP)	OfficeJet 4315	C9351A No 21
Hewlett Packard (HP)	OfficeJet 4315	C9352A No 22
Hewlett Packard (HP)	OfficeJet 4355	C8727A No 27
Hewlett Packard (HP)	OfficeJet 4355	C9351A No 21
Hewlett Packard (HP)	OfficeJet 4355	C9351CE No 21XL
Hewlett Packard (HP)	OfficeJet 4355	C9352A No 22
Hewlett Packard (HP)	OfficeJet 4355	C9352CE No 22XL
Hewlett Packard (HP)	OfficeJet 5500	C6656A No 56
Hewlett Packard (HP)	OfficeJet 5500	C6657A No 57
Hewlett Packard (HP)	OfficeJet 5505	C6656A No 56
Hewlett Packard (HP)	OfficeJet 5505	C6657A No 57
Hewlett Packard (HP)	OfficeJet 5510	C6656A No 56
Hewlett Packard (HP)	OfficeJet 5510	C6657A No 57
Hewlett Packard (HP)	OfficeJet 5515	C6656A No 56
Hewlett Packard (HP)	OfficeJet 5515	C6657A No 57
Hewlett Packard (HP)	OfficeJet 5600	C6656A No 56
Hewlett Packard (HP)	OfficeJet 5600	C8727A No 27
Hewlett Packard (HP)	OfficeJet 5600	C9352A No 22
Hewlett Packard (HP)	OfficeJet 5610	C6656A No 56
Hewlett Packard (HP)	OfficeJet 5610	C8727A No 27
Hewlett Packard (HP)	OfficeJet 5610	C9352A No 22
Hewlett Packard (HP)	OfficeJet 5610v	C6656A No 56
Hewlett Packard (HP)	OfficeJet 5610v	C8727A No 27
Hewlett Packard (HP)	OfficeJet 5610v	C9352A No 22
Hewlett Packard (HP)	OfficeJet 5610xi	C6656A No 56
Hewlett Packard (HP)	OfficeJet 5610xi	C8727A No 27
Hewlett Packard (HP)	OfficeJet 5610xi	C9352A No 22
Hewlett Packard (HP)	Officejet 5615	C6656A No 56
Hewlett Packard (HP)	Officejet 5615	C8727A No 27
Hewlett Packard (HP)	Officejet 5615	C9352A No 22
Hewlett Packard (HP)	Officejet 5615	C9352CE No 22XL
Hewlett Packard (HP)	OfficeJet 5700	CB335EE No 350
Hewlett Packard (HP)	OfficeJet 5700	CB336EE No 350xl
Hewlett Packard (HP)	OfficeJet 5700	CB337EE No 351
Hewlett Packard (HP)	OfficeJet 5700	CB338EE No 351xl
Hewlett Packard (HP)	OfficeJet 6110	C6656A No 56
Hewlett Packard (HP)	OfficeJet 6110	C6657A No 57
Hewlett Packard (HP)	OfficeJet J3680	C9351A No 21
Hewlett Packard (HP)	OfficeJet J3680	C9352A No 22
Hewlett Packard (HP)	OfficeJet J5780	CB335EE No 350
Hewlett Packard (HP)	OfficeJet J5780	CB336EE No 350xl
Hewlett Packard (HP)	OfficeJet J5780	CB337EE No 351
Hewlett Packard (HP)	OfficeJet J5780	CB338EE No 351xl
Hewlett Packard (HP)	OfficeJet J6410 All in One	CB335EE No 350
Hewlett Packard (HP)	OfficeJet J6410 All in One	CB336EE No 350xl
Hewlett Packard (HP)	OfficeJet J6410 All in One	CB337EE No 351
Hewlett Packard (HP)	OfficeJet J6410 All in One	CB338EE No 351xl
Hewlett Packard (HP)	OfficeJet J6424	CB335EE No 350
Hewlett Packard (HP)	OfficeJet J6424	CB336EE No 350xl

Hewlett Packard (HP)	OfficeJet J6424	CB337EE No 351
Hewlett Packard (HP)	OfficeJet J6424	CB338EE No 351xl
Hewlett Packard (HP)	PhotoSmart 100	C6656A No 56
Hewlett Packard (HP)	PhotoSmart 100	C6657A No 57
Hewlett Packard (HP)	PhotoSmart 130	C6656A No 56
Hewlett Packard (HP)	PhotoSmart 130	C6657A No 57
Hewlett Packard (HP)	PhotoSmart 140	C6657A No 57
Hewlett Packard (HP)	PhotoSmart 145	C6657A No 57
Hewlett Packard (HP)	PhotoSmart 230	C6656A No 56
Hewlett Packard (HP)	PhotoSmart 230	C6657A No 57
Hewlett Packard (HP)	PhotoSmart 240	C6657A No 57
Hewlett Packard (HP)	PhotoSmart 2410	C6656A No 56
Hewlett Packard (HP)	PhotoSmart 2410	C6657A No 57
Hewlett Packard (HP)	PhotoSmart 245	C6656A No 56
Hewlett Packard (HP)	PhotoSmart 245	C6657A No 57
Hewlett Packard (HP)	PhotoSmart 2500	C6656A No 56
Hewlett Packard (HP)	PhotoSmart 2500	C6657A No 57
Hewlett Packard (HP)	PhotoSmart 2510	C6656A No 56
Hewlett Packard (HP)	PhotoSmart 2510	C6657A No 57
Hewlett Packard (HP)	PhotoSmart 3110	C9351A No 21
Hewlett Packard (HP)	PhotoSmart 3110	C9352A No 22
Hewlett Packard (HP)	PhotoSmart 5610	C6656A No 56
Hewlett Packard (HP)	PhotoSmart 5610	C8727A No 27
Hewlett Packard (HP)	PhotoSmart 5610	C9352A No 22
Hewlett Packard (HP)	PhotoSmart 5610v	C6656A No 56
Hewlett Packard (HP)	PhotoSmart 5610v	C8727A No 27
Hewlett Packard (HP)	PhotoSmart 5610v	C9352A No 22
Hewlett Packard (HP)	PhotoSmart 5610xi	C6656A No 56
Hewlett Packard (HP)	PhotoSmart 5610xi	C8727A No 27
Hewlett Packard (HP)	PhotoSmart 5610xi	C9352A No 22
Hewlett Packard (HP)	PhotoSmart 7150	C6656A No 56
Hewlett Packard (HP)	PhotoSmart 7150	C6657A No 57
Hewlett Packard (HP)	PhotoSmart 7200	C6656A No 56
Hewlett Packard (HP)	PhotoSmart 7200	C6657A No 57
Hewlett Packard (HP)	PhotoSmart 7260	C6656A No 56
Hewlett Packard (HP)	PhotoSmart 7260	C6657A No 57
Hewlett Packard (HP)	PhotoSmart 7345	C6656A No 56
Hewlett Packard (HP)	PhotoSmart 7345	C6657A No 57
Hewlett Packard (HP)	PhotoSmart 7350	C6656A No 56
Hewlett Packard (HP)	PhotoSmart 7350	C6657A No 57
Hewlett Packard (HP)	PhotoSmart 7400 Series	C6656A No 56
Hewlett Packard (HP)	PhotoSmart 7400 Series	C6657A No 57
Hewlett Packard (HP)	PhotoSmart 7450	C6656A No 56
Hewlett Packard (HP)	PhotoSmart 7450	C6657A No 57
Hewlett Packard (HP)	PhotoSmart 7450v	C6656A No 56
Hewlett Packard (HP)	PhotoSmart 7450v	C6657A No 57
Hewlett Packard (HP)	PhotoSmart 7450xi	C6656A No 56
Hewlett Packard (HP)	PhotoSmart 7450xi	C6657A No 57
Hewlett Packard (HP)	PhotoSmart 7550	C6656A No 56
Hewlett Packard (HP)	PhotoSmart 7550	C6657A No 57

Hewlett Packard (HP)	PhotoSmart 7600	C6656A No 56
Hewlett Packard (HP)	PhotoSmart 7600	C6657A No 57
Hewlett Packard (HP)	PhotoSmart 7660	C6656A No 56
Hewlett Packard (HP)	PhotoSmart 7660	C6657A No 57
Hewlett Packard (HP)	PhotoSmart 7700	C6656A No 56
Hewlett Packard (HP)	PhotoSmart 7700	C6657A No 57
Hewlett Packard (HP)	PhotoSmart 7755	C6656A No 56
Hewlett Packard (HP)	PhotoSmart 7755	C6657A No 57
Hewlett Packard (HP)	PhotoSmart 7760	C6656A No 56
Hewlett Packard (HP)	PhotoSmart 7760	C6657A No 57
Hewlett Packard (HP)	PhotoSmart 7762	C6656A No 56
Hewlett Packard (HP)	PhotoSmart 7762	C6657A No 57
Hewlett Packard (HP)	PhotoSmart 7900	C6656A No 56
Hewlett Packard (HP)	PhotoSmart 7900	C6657A No 57
Hewlett Packard (HP)	PhotoSmart 7960	C6656A No 56
Hewlett Packard (HP)	PhotoSmart 7960	C6657A No 57
Hewlett Packard (HP)	Photosmart C4200	CB335EE No 350
Hewlett Packard (HP)	Photosmart C4200	CB336EE No 350xl
Hewlett Packard (HP)	Photosmart C4200	CB337EE No 351
Hewlett Packard (HP)	Photosmart C4200	CB338EE No 351xl
Hewlett Packard (HP)	Photosmart C4270	CB335EE No 350
Hewlett Packard (HP)	Photosmart C4270	CB336EE No 350xl
Hewlett Packard (HP)	Photosmart C4270	CB337EE No 351
Hewlett Packard (HP)	Photosmart C4270	CB338EE No 351xl
Hewlett Packard (HP)	Photosmart C4280	CB335EE No 350
Hewlett Packard (HP)	Photosmart C4280	CB336EE No 350xl
Hewlett Packard (HP)	Photosmart C4280	CB337EE No 351
Hewlett Packard (HP)	Photosmart C4280	CB338EE No 351xl
Hewlett Packard (HP)	Photosmart C4380	CB335EE No 350
Hewlett Packard (HP)	Photosmart C4380	CB336EE No 350xl
Hewlett Packard (HP)	Photosmart C4380	CB337EE No 351
Hewlett Packard (HP)	Photosmart C4380	CB338EE No 351xl
Hewlett Packard (HP)	Photosmart C4472	CB335EE No 350
Hewlett Packard (HP)	Photosmart C4472	CB336EE No 350xl
Hewlett Packard (HP)	Photosmart C4472	CB337EE No 351
Hewlett Packard (HP)	Photosmart C4472	CB338EE No 351xl
Hewlett Packard (HP)	PhotoSmart C4480	CB335EE No 350
Hewlett Packard (HP)	PhotoSmart C4480	CB336EE No 350xl
Hewlett Packard (HP)	PhotoSmart C4480	CB337EE No 351
Hewlett Packard (HP)	PhotoSmart C4480	CB338EE No 351xl
Hewlett Packard (HP)	Photosmart C4580 All-in-One	CB335EE No 350
Hewlett Packard (HP)	Photosmart C4580 All-in-One	CB336EE No 350xl
Hewlett Packard (HP)	Photosmart C4580 All-in-One	CB337EE No 351
Hewlett Packard (HP)	Photosmart C4580 All-in-One	CB338EE No 351xl
Hewlett Packard (HP)	Photosmart C5280	CB335EE No 350
Hewlett Packard (HP)	Photosmart C5280	CB336EE No 350xl
Hewlett Packard (HP)	Photosmart C5280	CB337EE No 351
Hewlett Packard (HP)	Photosmart C5280	CB338EE No 351xl
Hewlett Packard (HP)	PhotoSmart D5360	CB335EE No 350
Hewlett Packard (HP)	PhotoSmart D5360	CB336EE No 350xl

Hewlett Packard (HP)	PhotoSmart D5360	CB337EE No 351
Hewlett Packard (HP)	PhotoSmart D5360	CB338EE No 351xl
Hewlett Packard (HP)	PhotoSmart P145	C6656A No 56
Hewlett Packard (HP)	PhotoSmart P145	C6657A No 57
Hewlett Packard (HP)	PhotoSmart P230	C6656A No 56
Hewlett Packard (HP)	PhotoSmart P230	C6657A No 57
Hewlett Packard (HP)	PhotoSmart P7150	C6656A No 56
Hewlett Packard (HP)	PhotoSmart P7150	C6657A No 57
Hewlett Packard (HP)	PSC 1100	C6656A No 56
Hewlett Packard (HP)	PSC 1100	C6657A No 57
Hewlett Packard (HP)	PSC 1100	C8728A No 28
Hewlett Packard (HP)	PSC 1110	C6656A No 56
Hewlett Packard (HP)	PSC 1110	C6657A No 57
Hewlett Packard (HP)	PSC 1200	C6656A No 56
Hewlett Packard (HP)	PSC 1200	C6657A No 57
Hewlett Packard (HP)	PSC 1205	C6656A No 56
Hewlett Packard (HP)	PSC 1205	C6657A No 57
Hewlett Packard (HP)	PSC 1209	C6656A No 56
Hewlett Packard (HP)	PSC 1209	C6657A No 57
Hewlett Packard (HP)	PSC 1210	C6656A No 56
Hewlett Packard (HP)	PSC 1210	C6657A No 57
Hewlett Packard (HP)	PSC 1213	C6656A No 56
Hewlett Packard (HP)	PSC 1213	C6657A No 57
Hewlett Packard (HP)	PSC 1213	C8727A No 27
Hewlett Packard (HP)	PSC 1213	C8728A No 28
Hewlett Packard (HP)	PSC 1215	C6656A No 56
Hewlett Packard (HP)	PSC 1215	C6657A No 57
Hewlett Packard (HP)	PSC 1215	C8727A No 27
Hewlett Packard (HP)	PSC 1215	C8728A No 28
Hewlett Packard (HP)	PSC 1217	C6656A No 56
Hewlett Packard (HP)	PSC 1217	C6657A No 57
Hewlett Packard (HP)	PSC 1217	C8728A No 28
Hewlett Packard (HP)	PSC 1219	C6656A No 56
Hewlett Packard (HP)	PSC 1219	C6657A No 57
Hewlett Packard (HP)	PSC 1219	C8727A No 27
Hewlett Packard (HP)	PSC 1219	C8728A No 28
Hewlett Packard (HP)	PSC 1300	C6656A No 56
Hewlett Packard (HP)	PSC 1300	C6657A No 57
Hewlett Packard (HP)	PSC 1310	C6656A No 56
Hewlett Packard (HP)	PSC 1310	C6657A No 57
Hewlett Packard (HP)	PSC 1310	C8727A No 27
Hewlett Packard (HP)	PSC 1310	C8728A No 28
Hewlett Packard (HP)	PSC 1311	C6656A No 56
Hewlett Packard (HP)	PSC 1311	C6657A No 57
Hewlett Packard (HP)	PSC 1311	C8727A No 27
Hewlett Packard (HP)	PSC 1311	C8728A No 28
Hewlett Packard (HP)	PSC 1315	C6656A No 56
Hewlett Packard (HP)	PSC 1315	C6657A No 57
Hewlett Packard (HP)	PSC 1315	C8727A No 27
Hewlett Packard (HP)	PSC 1315	C8728A No 28

Hewlett Packard (HP)	PSC 1317	C6656A No 56
Hewlett Packard (HP)	PSC 1317	C6657A No 57
Hewlett Packard (HP)	PSC 1317	C8727A No 27
Hewlett Packard (HP)	PSC 1317	C8728A No 28
Hewlett Packard (HP)	PSC 1340	C6656A No 56
Hewlett Packard (HP)	PSC 1340	C6657A No 57
Hewlett Packard (HP)	PSC 1350	C6656A No 56
Hewlett Packard (HP)	PSC 1350	C6657A No 57
Hewlett Packard (HP)	PSC 1355	C6656A No 56
Hewlett Packard (HP)	PSC 1355	C6657A No 57
Hewlett Packard (HP)	PSC 1400	C9351A No 21
Hewlett Packard (HP)	PSC 1400	C9352A No 22
Hewlett Packard (HP)	PSC 1401	C9351A No 21
Hewlett Packard (HP)	PSC 1401	C9352A No 22
Hewlett Packard (HP)	PSC 1402	C9351A No 21
Hewlett Packard (HP)	PSC 1402	C9352A No 22
Hewlett Packard (HP)	PSC 1403	C9351A No 21
Hewlett Packard (HP)	PSC 1403	C9352A No 22
Hewlett Packard (HP)	PSC 1403	C9352CE No 22XL
Hewlett Packard (HP)	PSC 1406	C9351A No 21
Hewlett Packard (HP)	PSC 1406	C9352A No 22
Hewlett Packard (HP)	PSC 1408	C9351A No 21
Hewlett Packard (HP)	PSC 1408	C9352A No 22
Hewlett Packard (HP)	PSC 1410	C9351A No 21
Hewlett Packard (HP)	PSC 1410	C9352A No 22
Hewlett Packard (HP)	PSC 1410v	C9351A No 21
Hewlett Packard (HP)	PSC 1410v	C9352A No 22
Hewlett Packard (HP)	PSC 1410xi	C9351A No 21
Hewlett Packard (HP)	PSC 1410xi	C9352A No 22
Hewlett Packard (HP)	PSC 1415	C9351A No 21
Hewlett Packard (HP)	PSC 1415	C9352A No 22
Hewlett Packard (HP)	PSC 1417	C9351A No 21
Hewlett Packard (HP)	PSC 1417	C9352A No 22
Hewlett Packard (HP)	PSC 2108	C6656A No 56
Hewlett Packard (HP)	PSC 2108	C6657A No 57
Hewlett Packard (HP)	PSC 2108	C8727A No 27
Hewlett Packard (HP)	PSC 2108	C8728A No 28
Hewlett Packard (HP)	PSC 2110	C6656A No 56
Hewlett Packard (HP)	PSC 2110	C6657A No 57
Hewlett Packard (HP)	PSC 2110v	C6656A No 56
Hewlett Packard (HP)	PSC 2110v	C6657A No 57
Hewlett Packard (HP)	PSC 2110xi	C6656A No 56
Hewlett Packard (HP)	PSC 2110xi	C6657A No 57
Hewlett Packard (HP)	PSC 2115	C6656A No 56
Hewlett Packard (HP)	PSC 2115	C6657A No 57
Hewlett Packard (HP)	PSC 2170	C6656A No 56
Hewlett Packard (HP)	PSC 2170	C6657A No 57
Hewlett Packard (HP)	PSC 2170	C8727A No 27
Hewlett Packard (HP)	PSC 2170	C8728A No 28
Hewlett Packard (HP)	PSC 2171	C6656A No 56

Hewlett Packard (HP)	PSC 2171	C6657A No 57
Hewlett Packard (HP)	PSC 2171	C8727A No 27
Hewlett Packard (HP)	PSC 2171	C8728A No 28
Hewlett Packard (HP)	PSC 2175	C6656A No 56
Hewlett Packard (HP)	PSC 2175	C6657A No 57
Hewlett Packard (HP)	PSC 2179	C6656A No 56
Hewlett Packard (HP)	PSC 2179	C6657A No 57
Hewlett Packard (HP)	PSC 2210	C6656A No 56
Hewlett Packard (HP)	PSC 2210	C6657A No 57
Hewlett Packard (HP)	PSC 2410	C6656A No 56
Hewlett Packard (HP)	PSC 2410	C6657A No 57
Hewlett Packard (HP)	PSC 2410 PhotoSmart	C6656A No 56
Hewlett Packard (HP)	PSC 2410 PhotoSmart	C6657A No 57
Hewlett Packard (HP)	PSC 2510	C6656A No 56
Hewlett Packard (HP)	PSC 2510	C6657A No 57
Hewlett Packard (HP)	PSC 2510 PhotoSmart	C6656A No 56
Hewlett Packard (HP)	PSC 2510 PhotoSmart	C6657A No 57
Hewlett Packard (HP)	PSC 2550	C6656A No 56
Hewlett Packard (HP)	PSC 2550	C6657A No 57
Hewlett Packard (HP)	PSC 4110	C6656A No 56
Hewlett Packard (HP)	PSC 4110	C6657A No 57
Hewlett Packard (HP)	PSC 4110	C8728A No 28
Hewlett Packard (HP)	PSC 4215	C6656A No 56
Hewlett Packard (HP)	PSC 4215	C6657A No 57
Hewlett Packard (HP)	PSC 4215	C8727A No 27
Hewlett Packard (HP)	PSC 4215	C8728A No 28
Hewlett Packard (HP)	PSC 4219	C6656A No 56
Hewlett Packard (HP)	PSC 4219	C6657A No 57
Hewlett Packard (HP)	PSC 4219	C8727A No 27
Hewlett Packard (HP)	PSC 4219	C8728A No 28
Hewlett Packard (HP)	PSC 4255	C6656A No 56
Hewlett Packard (HP)	PSC 4255	C6657A No 57
Hewlett Packard (HP)	PSC 4255	C8727A No 27
Hewlett Packard (HP)	PSC 4255	C8728A No 28