

Brand	Model	Original Cartridge
Brother	DCP 130C	LC1000BK
Brother	DCP 135C	LC970BK
Brother	DCP 145C	LC980BK
Brother	DCP 150C	LC970BK
Brother	DCP 165C	LC980BK
Brother	DCP 195C	LC980BK
Brother	DCP 330C	LC1000BK
Brother	DCP 357C	LC1000BK
Brother	DCP 375CW	LC980BK
Brother	DCP 385C	LC1100BK
Brother	DCP 540CN	LC1000BK
Brother	DCP 560CN	LC1000BK
Brother	DCP 585C	LC1100BK
Brother	DCP 6690CW	LC1100BK
Brother	DCP 750CW	LC1000BK
Brother	DCP 770CW	LC1000BK
Brother	DCP J100	LC529XLBK
Brother	DCP J105	LC529XLBK
Brother	DCP J125	LC985BK
Brother	DCP J132W	LC123BK
Brother	DCP J140W	LC985BK
Brother	DCP J152W	LC123BK
Brother	DCP J315W	LC985BK
Brother	DCP J4120DW	LC223BK
Brother	DCP J4120DW	LC227XLBK
Brother	DCP J515W	LC985BK
Brother	DCP J552DW	LC123BK
Brother	DCP J715W	LC985BK
Brother	DCP J752DW	LC123BK
Brother	DCP T220	BTD60BK Ink Bottle
Brother	DCP T300	BT6000BK Ink Bottle
Brother	DCP T310	BTD60BK Ink Bottle
Brother	DCP T420W	BTD60BK Ink Bottle
Brother	DCP T425W	BTD60BK Ink Bottle
Brother	DCP T500	BT6000BK Ink Bottle
Brother	DCP T510	BTD60BK Ink Bottle
Brother	DCP T520W	BTD60BK Ink Bottle
Brother	DCP T525W	BTD60BK Ink Bottle
Brother	DCP T700	BT6000BK Ink Bottle
Brother	DCP T710	BTD60BK Ink Bottle
Brother	DCP T720DW	BTD60BK Ink Bottle
Brother	FAX 1360	LC1000BK
Brother	FAX 1460	LC1000BK
Brother	FAX 1560	LC1000BK
Brother	FAX 2480C	LC1000BK
Brother	MFC 235C	LC970BK
Brother	MFC 240C	LC1000BK
Brother	MFC 250C	LC980BK
Brother	MFC 260C	LC970BK

Brother	MFC 290C	LC980BK
Brother	MFC 295CN	LC980BK
Brother	MFC 3360C	LC1000BK
Brother	MFC 440CN	LC1000BK
Brother	MFC 465CN	LC970BK
Brother	MFC 490CW	LC1100BK
Brother	MFC 5460CN	LC1000BK
Brother	MFC 5490CN	LC1100BK
Brother	MFC 5860CN	LC1000BK
Brother	MFC 5890CN	LC1100BK
Brother	MFC 5895CW	LC1100BK
Brother	MFC 6490CW	LC1100BK
Brother	MFC 660CN	LC1000BK
Brother	MFC 665CW	LC1000BK
Brother	MFC 790CW	LC1100BK
Brother	MFC 845CW	LC1000BK
Brother	MFC J200	LC529XLBK
Brother	MFC J220	LC985BK
Brother	MFC J4110W	LC123BK
Brother	MFC J430W	LC1240BK
Brother	MFC J4410W	LC123BK
Brother	MFC J4420DW	LC223BK
Brother	MFC J4420DW	LC227XLBK
Brother	MFC J4510W	LC123BK
Brother	MFC J4610DW	LC123BK
Brother	MFC J4620DW	LC223BK
Brother	MFC J4620DW	LC227XLBK
Brother	MFC J4625DW	LC223BK
Brother	MFC J4625DW	LC227XLBK
Brother	MFC J470DW	LC123BK
Brother	MFC J4710DW	LC123BK
Brother	MFC J480DW	LC223BK
Brother	MFC J5320DW	LC223BK
Brother	MFC J5320DW	LC229XLBK
Brother	MFC J5620DW	LC223BK
Brother	MFC J5620DW	LC229XLBK
Brother	MFC J5625DW	LC223BK
Brother	MFC J5625DW	LC229XLBK
Brother	MFC J5720DW	LC223BK
Brother	MFC J5720DW	LC229XLBK
Brother	MFC J5910DW	LC1240BK
Brother	MFC J5910DW	LC1280XLBK
Brother	MFC J650DW	LC123BK
Brother	MFC J6510DW	LC1240BK
Brother	MFC J6510DW	LC1280XLBK
Brother	MFC J6520DW	LC123BK
Brother	MFC J6710DW	LC1240BK
Brother	MFC J6710DW	LC1280XLBK
Brother	MFC J6910DW	LC1240BK
Brother	MFC J6910DW	LC1280XLBK

Brother	MFC J6920W	LC123BK
Brother	MFC T800	BT6000BK Ink Bottle
Brother	MFC T810	BTD60BK Ink Bottle
Brother	MFC T910	BTD60BK Ink Bottle
Brother	MFC T920DW	BTD60BK Ink Bottle
Epson	EcoTank L1110	C13T00S14A 103 black
Epson	EcoTank L11160	C13T06C14A 112 black
Epson	EcoTank L1210	C13T00S14A 103 black
Epson	EcoTank L1250	C13T00S14A 103 black
Epson	EcoTank L14150 MFP	C13T03V14A 101 black
Epson	EcoTank L15150	C13T06C14A 112 black
Epson	EcoTank L15160	C13T06C14A 112 black
Epson	EcoTank L3050	C13T66414A black
Epson	EcoTank L3060	C13T66414A black
Epson	EcoTank L3070	C13T66414A black
Epson	EcoTank L3110	C13T00S14A 103 black
Epson	EcoTank L3111	C13T00S14A 103 black
Epson	EcoTank L3150 MFP	C13T00S14A 103 black
Epson	EcoTank L3151 WiFi MFP	C13T00S14A 103 black
Epson	EcoTank L3156 WiFi MFP	C13T00S14A 103 black
Epson	EcoTank L3160 MFP	C13T00S14A 103 black
Epson	EcoTank L3210	C13T00S14A 103 black
Epson	EcoTank L3211	C13T00S14A 103 black
Epson	EcoTank L3250 WiFi MFP	C13T00S14A 103 black
Epson	EcoTank L3251	C13T00S14A 103 black
Epson	EcoTank L3256	C13T00S14A 103 black
Epson	EcoTank L3260 WiFi MFP	C13T00S14A 103 black
Epson	EcoTank L3266	C13T00S14A 103 black
Epson	EcoTank L3550	C13T00S14A 103 black
Epson	EcoTank L3560 WiFi MFP	C13T00S14A 103 black
Epson	EcoTank L4150 WiFi MFP	C13T03V14A 101 black
Epson	EcoTank L4160 WiFi MFP	C13T03V14A 101 black
Epson	EcoTank L4260 WiFi MFP	C13T03V14A 101 black
Epson	EcoTank L486	C13T66414A black
Epson	EcoTank L5190	C13T00S14A 103 black
Epson	EcoTank L5290	C13T00S14A 103 black
Epson	EcoTank L5296	C13T00S14A 103 black
Epson	EcoTank L5590	C13T00S14A 103 black
Epson	EcoTank L605	C13T66414A black
Epson	EcoTank L6160 WiFi MFP	C13T03V14A 101 black
Epson	EcoTank L6170 WiFi MFP	C13T03V14A 101 black
Epson	EcoTank L6190 WiFi MFP	C13T03V14A 101 black
Epson	EcoTank L6260 WiFi MFP	C13T03V14A 101 black
Epson	EcoTank L6270 WiFi MFP	C13T03V14A 101 black
Epson	EcoTank L6276 WiFi MFP	C13T03V14A 101 black
Epson	EcoTank L6290 WiFi MFP	C13T03V14A 101 black
Epson	EcoTank L6460 WiFi MFP	C13T06C14A 112 black
Epson	EcoTank L6490 WiFi MFP	C13T06C14A 112 black
Epson	EcoTank L6550	C13T06C14A 112 black
Epson	EcoTank L6570	C13T06C14A 112 black

Epson	EcoTank L6580	C13T06C14A 112 black
Epson	EcoTank L8160	C13T07C14A 115 Pigment Black
Epson	EcoTank L8180	C13T07C14A 115 Pigment Black
Epson	EcoTank M15140	C13T06C14A 112 black
Epson	L100	C13T66414A black
Epson	L110	C13T66414A black
Epson	L120	C13T66414A black
Epson	L130	C13T66414A black
Epson	L1300	C13T66414A black
Epson	L18050	C13T09C14A 108 black
Epson	L200	C13T66414A black
Epson	L210	C13T66414A black
Epson	L220	C13T66414A black
Epson	L300	C13T66414A black
Epson	L310	C13T66414A black
Epson	L355	C13T66414A black
Epson	L365	C13T66414A black
Epson	L382 MFP	C13T66414A black
Epson	L386	C13T66414A black
Epson	L455	C13T66414A black
Epson	L550	C13T66414A black
Epson	L565	C13T66414A black
Epson	L655	C13T66414A black
Epson	L8050	C13T09C14A 108 black
Epson	Stylus 480	T013401
Epson	Stylus 480SXU	T013401
Epson	Stylus 580	T013401
Epson	Stylus BX305F	T1291
Epson	Stylus BX320FW	T1291
Epson	Stylus BX625FWD	T1291
Epson	Stylus C20SX	T013401
Epson	Stylus C20UX	T013401
Epson	Stylus C40SX	T013401
Epson	Stylus C40UX	T013401
Epson	Stylus C42	T036140
Epson	Stylus C42 Plus	T036140
Epson	Stylus C42SX	T036140
Epson	Stylus C42UX	T036140
Epson	Stylus C44 Plus	T036140
Epson	Stylus C46	T036140
Epson	Stylus C62	T040140
Epson	Stylus C64	T043140
Epson	Stylus C64	T044140
Epson	Stylus C66	T044140
Epson	Stylus C70	T032140
Epson	Stylus C80	T032140
Epson	Stylus C82	T032140
Epson	Stylus C84	T043140
Epson	Stylus C84	T044140
Epson	Stylus C86	T043140

Epson	Stylus C86	T044140
Epson	Stylus Color 680	T017401
Epson	Stylus Color 680TR	T017401
Epson	Stylus Color 685	T017401
Epson	Stylus Color 777	T017401
Epson	Stylus Color 880	T019401
Epson	Stylus Color 900	T003011
Epson	Stylus Color 900g	T003011
Epson	Stylus Color 900n	T003011
Epson	Stylus Color 980	T003011
Epson	Stylus Color 980n	T003011
Epson	Stylus CX3200	T040140
Epson	Stylus CX3600	T044140
Epson	Stylus CX3650	T044140
Epson	Stylus CX4600	T044140
Epson	Stylus CX5100	T032140
Epson	Stylus CX5200	T032140
Epson	Stylus CX5400	T032140
Epson	Stylus CX6400	T043140
Epson	Stylus CX6400	T044140
Epson	Stylus CX6600	T043140
Epson	Stylus CX6600	T044140
Epson	Stylus D120	T071140
Epson	Stylus D68	T061140
Epson	Stylus D78	T071140
Epson	Stylus D88	T061140
Epson	Stylus D92	T071140
Epson	Stylus DX3800	T061140
Epson	Stylus DX3850	T061140
Epson	Stylus DX4000	T071140
Epson	Stylus DX4050	T071140
Epson	Stylus DX4200	T061140
Epson	Stylus DX4250	T061140
Epson	Stylus DX4400	T071140
Epson	Stylus DX4450	T071140
Epson	Stylus DX4800	T061140
Epson	Stylus DX4850	T061140
Epson	Stylus DX5000	T071140
Epson	Stylus DX5050	T071140
Epson	Stylus DX6000	T071140
Epson	Stylus DX6050	T071140
Epson	Stylus DX7000	T071140
Epson	Stylus DX7400	T071140
Epson	Stylus DX7450	T071140
Epson	Stylus DX8400	T071140
Epson	Stylus DX8450	T071140
Epson	Stylus DX9400	T071140
Epson	Stylus Office B40W	T071140
Epson	Stylus Office BX300F	T071140
Epson	Stylus Office BX310FN	T071140

Epson	Stylus Office BX600FW	T071140
Epson	Stylus Photo 1400	T0791
Epson	Stylus Photo 810	T026401
Epson	Stylus Photo 820	T026401
Epson	Stylus Photo 830	T026401
Epson	Stylus Photo 830U	T026401
Epson	Stylus Photo 925	T026401
Epson	Stylus Photo 935	T026401
Epson	Stylus Photo 950	T033140
Epson	Stylus Photo P50	T080140
Epson	Stylus Photo P50	T080640
Epson	Stylus Photo PX650	T080140
Epson	Stylus Photo PX650	T080640
Epson	Stylus Photo PX660	T080140
Epson	Stylus Photo PX660	T080640
Epson	Stylus Photo PX700W	T080140
Epson	Stylus Photo PX700W	T080640
Epson	Stylus Photo PX710	T080140
Epson	Stylus Photo PX710	T080640
Epson	Stylus Photo PX720	T080140
Epson	Stylus Photo PX720	T080640
Epson	Stylus Photo PX730	T080140
Epson	Stylus Photo PX730	T080640
Epson	Stylus Photo PX730WD	T0791
Epson	Stylus Photo PX730WD	T080140
Epson	Stylus Photo PX730WD	T080640
Epson	Stylus Photo PX800W	T080140
Epson	Stylus Photo PX800W	T080640
Epson	Stylus Photo PX810	T080140
Epson	Stylus Photo PX810	T080640
Epson	Stylus Photo PX820	T080140
Epson	Stylus Photo PX820	T080640
Epson	Stylus Photo R200	T048140
Epson	Stylus Photo R220	T048140
Epson	Stylus Photo R265	T080140
Epson	Stylus Photo R265	T080640
Epson	Stylus Photo R285	T080140
Epson	Stylus Photo R285	T080640
Epson	Stylus Photo R300	T048140
Epson	Stylus Photo R320	T048140
Epson	Stylus Photo R340	T048140
Epson	Stylus Photo RX500	T048140
Epson	Stylus Photo RX560	T080140
Epson	Stylus Photo RX560	T080640
Epson	Stylus Photo RX585	T080140
Epson	Stylus Photo RX585	T080640
Epson	Stylus Photo RX600	T048140
Epson	Stylus Photo RX620	T048140
Epson	Stylus Photo RX640	T048140
Epson	Stylus Photo RX685	T080140

Epson	Stylus Photo RX685	T080640
Epson	Stylus S20	T071140
Epson	Stylus S22	T1281
Epson	Stylus S22	T1291
Epson	Stylus SX100	T071140
Epson	Stylus SX105	T071140
Epson	Stylus SX125	T1281
Epson	Stylus SX130	T1281
Epson	Stylus SX200	T071140
Epson	Stylus SX205	T071140
Epson	Stylus SX218	T071140
Epson	Stylus SX235	T1281
Epson	Stylus SX235	T1291
Epson	Stylus SX400	T071140
Epson	Stylus SX405	T071140
Epson	Stylus SX415	T071140
Epson	Stylus SX420W	T1281
Epson	Stylus SX425W	T1281
Epson	Stylus SX425W	T1291
Epson	Stylus SX430W	T1281
Epson	Stylus SX430W	T1291
Epson	Stylus SX435W	T1281
Epson	Stylus SX435W	T1291
Epson	Stylus SX445W	T1281
Epson	Stylus SX510W	T071140
Epson	Stylus SX515W	T071140
Epson	Stylus SX525WD	T1291
Epson	Stylus SX535WD	T1291
Epson	Stylus SX600FW	T071140
Epson	WorkForce Pro WF-C5210DW	C13T944140 black
Epson	WorkForce Pro WF-C5290DW	C13T944140 black
Epson	WorkForce Pro WF-C5710DWF	C13T944140 black
Epson	WorkForce Pro WF-C5790DWF	C13T944140 black
Epson	WorkForce WF-3520	T1291
Epson	WorkForce WF-7015	T1291
Epson	WorkForce WF-7515	T1291
Epson	WorkForce WF-7525	T1291
Epson	XP-6000	C13T02G14010 Black XL
Epson	XP-6005	C13T02G14010 Black XL
Epson	XP-6100	C13T02G14010 Black XL
Epson	XP-6105	C13T02G14010 Black XL